



# **HTTP API Protocol User Guide**

## **For IPOX Media Device**

**Version 1.9**

**2023-02**

---

## Document History

No	Release Notes	Date	Version	
1	Draft	2014-2-14	1.0	
2	Draft	2014-4-15	1.1	
3	Draft	2014-9-30	1.2	
4	Release	2014-11-6	1.2	
5	Draft	2014-12-5	1.3	
6	Draft	2015-12-22	1.4	
7	Draft	2016-5-25	1.5	
8	Release	2017-8-4	1.6	
9	Release	2017-11-22	1.7	
10	Release	2019-10-22	1.8	
11	Release	2020-05-06	1.9	
12	Release	2022-12-26	1.9	
13	Release	2023-02-15	1.9	
14	Release	2024-05-23	1.9	

---

# Contents

---

<b>HTTP API PROTOCOL USER GUIDE .....</b>	<b>1</b>
<b>FOR IP MEDIA DEVICE .....</b>	<b>1</b>
<b>VERSION 1.9 .....</b>	<b>1</b>
<b>2023-02 .....</b>	<b>1</b>
DOCUMENT HISTORY.....	II
<b>1 OVERVIEW .....</b>	<b>1</b>
1.1 PREFACE.....	1
1.2 TRANSACTION.....	1
1.3 PROTOCOL DESCRIPTION.....	1
1.3.1 <i>URL</i> .....	1
1.3.2 <i>Connection Header Filed</i> .....	2
1.3.3 <i>Authorization Header Field</i> .....	3
1.3.4 <i>Entity Body Field</i> .....	3
1.3.5 <i>Response Message</i> .....	4
1.3.6 <i>Error Code</i> .....	6
1.4 PROTOCOL CONVENTIONS.....	6
1.4.1 <i>XML Element Name</i> .....	6
1.4.2 <i>XML Element Type</i> .....	6
1.4.3 <i>The "types" Element</i> .....	8
1.4.4 <i>Command catagory</i> .....	9
1.5 DEVICE DISCOVERY.....	10
<b>2 SYSTEM COMMANDS .....</b>	<b>10</b>
2.1 DEVICE INFORMATION.....	10
2.1.1 <i>GetDeviceInfo</i> .....	10
2.1.2 <i>GetDiskInfo</i> .....	13
2.1.3 <i>GetChannelList</i> .....	15
2.1.4 <i>GetAlarmInList</i> .....	16
2.1.5 <i>GetAlarmOutList</i> .....	17
2.1.6 <i>GetDeviceDetail</i> .....	18
2.2 DATE AND TIME .....	21
2.2.1 <i>GetDateAndTime</i> .....	21
2.2.2 <i>SetDateAndTime</i> .....	24
2.3 UPGRADE .....	25
2.3.1 <i>UpdateState</i> .....	25
2.3.2 <i>UpdateSliceFirmware</i> .....	26
<b>3 IMAGE COMMANDS .....</b>	<b>28</b>
3.1 STREAM CAPABILITIES.....	28

---

3.1.1 <i>GetStreamCaps</i> .....	28
3.2 IMAGE CONFIGURATION.....	31
3.2.1 <i>GetImageConfig</i> .....	31
3.2.2 <i>SetImageConfig</i> .....	34
3.2.3 <i>GetSnapshot</i> .....	35
3.2.4 <i>GetSnapshotByTime</i> .....	35
3.3 STREAM CONFIGURATION.....	36
3.3.1 <i>GetAudioStreamConfig</i> .....	36
3.3.2 <i>SetAudioStreamConfig</i> .....	38
3.3.3 <i>GetVideoStreamConfig</i> .....	39
3.3.4 <i>SetVideoStreamConfig</i> .....	42
3.3.5 <i>RequestKeyFrame</i> .....	43
3.4 OSD .....	43
3.4.1 <i>GetImageOsdConfig</i> .....	43
3.4.2 <i>SetImageOsdConfig</i> .....	45
3.5 PRIVACY MASK .....	46
3.5.1 <i>GetPrivacyMaskConfig</i> .....	46
3.5.2 <i>SetPrivacyMaskConfig</i> .....	47
<b>4 PTZ COMMANDS .....</b>	<b>48</b>
4.1 PROTOCOL.....	48
4.1.1 <i>PtzGetCaps</i> .....	48
4.1.2 <i>GetPtzConfig</i> .....	49
4.1.3 <i>SetPtzConfig</i> .....	51
4.2 PTZ CONTROL.....	52
4.2.1 <i>PtzControl</i> .....	52
4.2.2 <i>PtzGotoPreset</i> .....	53
4.2.3 <i>PtzRunCruise</i> .....	53
4.2.4 <i>PtzStopCruise</i> .....	54
4.3 PRESET.....	54
4.3.1 <i>PtzGetPresets</i> .....	54
4.3.2 <i>PtzAddPreset</i> .....	55
4.3.3 <i>PtzModifyPresetName</i> .....	56
4.3.4 <i>PtzDeletePreset</i> .....	56
4.3.5 <i>PtzModifyPresetPosition</i> .....	57
4.4 CRUISE.....	58
4.4.1 <i>PtzGetCruises</i> .....	58
4.4.2 <i>PtzGetCruise</i> .....	58
4.4.3 <i>PtzAddCruise</i> .....	60
4.4.4 <i>PtzModifyCruise</i> .....	61
4.4.5 <i>PtzDeleteCruise</i> .....	62
<b>5 ALARM COMMANDS .....</b>	<b>63</b>
5.1 MOTION DETECTION.....	63
5.1.1 <i>GetMotionConfig</i> .....	63
5.1.2 <i>SetMotionConfig</i> .....	66
5.2 ALARM.....	67
5.2.1 <i>GetAlarmInConfig</i> .....	67
5.2.2 <i>SetAlarmInConfig</i> .....	68
5.2.3 <i>ManualAlarmOut</i> .....	68
5.2.4 <i>GetAlarmOutConfig</i> .....	69
5.2.5 <i>SetAlarmOutConfig</i> .....	70
5.2.6 <i>AlarmOutputControl</i> .....	71

---

5.3 ALARMSTATUS.....	72
5.3.1 <i>GetAlarmStatus</i> .....	72
5.3.2 <i>GetAlarmServerConfig</i> .....	74
5.3.3 <i>SetAlarmServerConfig</i> .....	77
5.3.4 <i>SendAlarmStatus</i> .....	77
5.4 ALARMTRIGGER.....	78
5.4.1 <i>GetAlarmTriggerConfig</i> .....	78
5.4.2 <i>SetAlarmTriggerConfig</i> .....	80
5.5 SOUND-LIGHT ALARM .....	80
5.5.1 <i>GetAudioAlarmOutConfig</i> .....	80
5.5.2 <i>SetAudioAlarmOutConfig</i> .....	84
5.5.3 <i>AddCustomizeAudioAlarm</i> .....	85
5.5.4 <i>DeleteCustomizeAudioAlarm</i> .....	86
5.5.5 <i>AuditionCustomizeAudioAlarm</i> .....	87
5.5.6 <i>GetWhiteLightAlarmOutConfig</i> .....	88
5.5.7 <i>SetWhiteLightAlarmOutConfig</i> .....	89
5.6 ALARM PIR .....	90
5.6.1 <i>GetPirConfig</i> .....	90
5.6.2 <i>SetPirConfig</i> .....	91
<b>6 PLAYBACK .....</b>	<b>92</b>
6.1 RECORD SEARCH.....	92
6.1.1 <i>GetRecordType</i> .....	92
6.1.2 <i>SearchRecordDate</i> .....	93
6.1.3 <i>SearchByTime</i> .....	94
6.2 RECORDSTATUS.....	97
6.2.1 <i>GetRecordStatusInfo</i> .....	97
<b>7 NETWORK COMMANDS .....</b>	<b>99</b>
7.1 TCP/IPv4 .....	99
7.1.1 <i>GetNetBasicConfig</i> .....	99
7.1.2 <i>SetNetBasicConfig</i> .....	102
7.2 PPPoE .....	102
7.2.1 <i>GetNetPppoeConfig</i> .....	102
7.2.2 <i>SetNetPppoeConfig</i> .....	103
7.3 PORT .....	104
7.3.1 <i>GetPortConfig</i> .....	104
7.3.2 <i>SetPortConfig</i> .....	104
7.3.3 <i>GetExtenalPortMappingInfo</i> .....	105
7.4 DDNS .....	107
7.4.1 <i>GetDdnsConfig</i> .....	107
7.4.2 <i>SetDdnsConfig</i> .....	108
<b>8 SECURITY COMMANDS .....</b>	<b>109</b>
8.1 USER MANAGEMENT.....	109
8.1.1 <i>ModifyPassword</i> .....	109
8.2 ONVIF USER MANAGEMENT.....	110
8.2.1 <i>ModifyIntegrateUser</i> .....	110
8.3 REBOOT.....	112
8.3.1 <i>Reboot</i> .....	112
<b>9 TALKBACK COMMANDS .....</b>	<b>112</b>
9.1 TALKBACK.....	112

---

9.1.1 <i>Talkback</i> .....	112
9.1.2 <i>channel_talk</i> .....	115
<b>10 SMART COMMANDS .....</b>	<b>116</b>
10.1 FACE DETECT & FACE COMPARISON.....	116
10.1.1 <i>GetSmartVfdConfig</i> .....	116
10.1.2 <i>SetSmartVfdConfig</i> .....	120
10.1.3 <i>AddTargetFace</i> .....	120
10.1.4 <i>DeleteTargetFace</i> .....	123
10.1.5 <i>EditTargetFace</i> .....	126
10.1.6 <i>GetTargetFace</i> .....	129
10.1.7 <i>SearchSnapFaceByTime</i> .....	136
10.1.8 <i>SearchSnapFaceByKey</i> .....	137
10.1.9 <i>GetTargetFaceGroups</i> .....	140
10.1.10 <i>AddTargetFaceGroup</i> .....	141
10.1.11 <i>DeleteTargetFaceGroup</i> .....	142
10.1.12 <i>EditTargetFaceGroup</i> .....	143
10.2 CROWD DENSITY DETECTION.....	144
10.2.1 <i>GetSmartCddConfig</i> .....	144
10.2.2 <i>SetSmartCddConfig</i> .....	145
10.3 PEOPLE COUNTING.....	145
10.3.1 <i>GetSmartCpcConfig</i> .....	145
10.3.2 <i>SetSmartCpcConfig</i> .....	147
10.4 PEOPLE INTRUSION.....	148
10.4.1 <i>GetSmartIpdConfig</i> .....	148
10.4.2 <i>SetSmartIpdConfig</i> .....	148
10.5 INTRUSION.....	149
10.5.1 <i>GetSmartPerimeterConfig</i> .....	149
10.5.2 <i>SetSmartPerimeterConfig</i> .....	151
10.6 LINE CROSSING.....	151
10.6.1 <i>GetSmartTripwireConfig</i> .....	151
10.6.2 <i>SetSmartTripwireConfig</i> .....	153
10.7 OBJECT REMOVAL.....	154
10.7.1 <i>GetSmartOscConfig</i> .....	154
10.7.2 <i>SetSmartOscConfig</i> .....	155
10.8 EXCEPTION.....	156
10.8.1 <i>GetSmartAvdConfig</i> .....	156
10.8.2 <i>SetSmartAvdConfig</i> .....	157
10.8.3 <i>GetSmartAsdConfig</i> .....	157
10.8.4 <i>SetSmartAsdConfig</i> .....	158
10.9 LICENSE PLATE RECOGNITION.....	159
10.9.1 <i>GetSmartVehicleConfig</i> .....	159
10.9.2 <i>SetSmartVehicleConfig</i> .....	168
10.9.3 <i>AddVehiclePlate</i> .....	168
10.9.4 <i>DeleteVehiclePlate</i> .....	169
10.9.5 <i>EditVehiclePlate</i> .....	170
10.9.6 <i>GetVehiclePlate</i> .....	172
10.9.7 <i>GetVehiclePlateProgress</i> .....	173
10.9.8 <i>SearchSnapVehicleByTime</i> .....	174
10.9.9 <i>SearchSnapVehicleByKey</i> .....	176
10.10 REGION ENTRANCE.....	178
10.10.1 <i>GetSmartAoiEntryConfig</i> .....	178
10.10.2 <i>SetSmartAoiEntryConfig</i> .....	181

---

10.11 REGION ENTRANCE.....	181
10.11.1 <i>GetSmartAoiLeaveConfig</i> .....	181
10.11.2 <i>SetSmartAoiLeaveConfig</i> .....	184
10.12 TARGET COUNTING.....	185
10.12.1 <i>GetSmartPassLineCountConfig</i> .....	185
10.12.2 <i>SetSmartPassLineCountConfig</i> .....	190
10.12.3 <i>GetPassLineCountStatistics</i> .....	190
10.13 THERMOGRAPHIC TEMPERATUREMEASUREMENT.....	191
10.13.1 <i>GetMeasureTemperatureConfig</i> .....	191
10.13.2 <i>SetMeasureTemperatureConfig</i> .....	193
10.13.3 <i>GetTemperatureCalibrationConfig</i> .....	194
10.13.4 <i>SetTemperatureCalibrationConfig</i> .....	195
10.13.5 <i>GetMeasureTemperatureScheduleConfig</i> .....	196
10.13.6 <i>SetMeasureTemperatureScheduleConfig</i> .....	197
10.13.7 <i>GetDotTemperature</i> .....	197
10.13.8 <i>DealTemperatureCalibration</i> .....	198
10.14 INFRARED TEMPERATURE CONTROL.....	199
10.14.1 <i>GetAccessControlConfig</i> .....	199
10.14.2 <i>SetAccessControlConfig</i> .....	201
10.14.3 <i>UnLockingByPassword</i> .....	202
10.14.4 <i>GetTakeTemperatureConfig</i> .....	203
10.14.5 <i>SetTakeTemperatureConfig</i> .....	204
10.14.6 <i>GetWearmaskDetectConfig</i> .....	205
10.14.7 <i>SetWearmaskDetectConfig</i> .....	206
10.15 HEAT MAP.....	207
10.15.1 <i>GetSmartHeatMapConfig</i> .....	207
10.15.2 <i>SetSmartHeatMapConfig</i> .....	210
10.16 REGION STATISTICS.....	211
10.16.1 <i>GetSmartTrafficConfig</i> .....	211
10.16.2 <i>SetSmartTrafficConfig</i> .....	216
10.16.3 <i>GetTrafficCountStatistics</i> .....	217
10.17 VIDEO METADATADETECTION.....	218
10.17.1 <i>GetSmartVsdConfig</i> .....	218
10.17.2 <i>SetSmartVsdConfig</i> .....	225
10.18 ILLEGAL PARKING DETECTION.....	226
10.18.1 <i>GetSmartPvdConfig</i> .....	226
10.18.2 <i>SetSmartPvdConfig</i> .....	229
10.19 LOITERING DETECTION.....	230
10.19.1 <i>GetSmartLoiteringConfig</i> .....	230
10.19.2 <i>SetSmartLoiteringConfig</i> .....	232
<b>11 SCHEDULE COMMANDS .....</b>	<b>233</b>
11.1 SCHEDULE.....	233
11.1.1 <i>GetScheduleConfig</i> .....	233
11.1.2 <i>SetScheduleConfig</i> .....	236
11.1.3 <i>SetScheduleConfigEx</i> .....	237
<b>ANNEX A .....</b>	<b>1</b>
A.1 CHANGE LOG .....	1

---

# 1

# Overview

---

## 1.1 Preface

This document details the API of IP media devices. Programmers can access and configure IP media devices following the API.

## 1.2 Transaction

The HTTP API transaction starts from a request from a client application, usually a web browser. The web server on the IP media devices processes the request and sends the response back to the client application. The HTTP requests taken in POST form as described in the following paragraphs. If the request is successful, the IP media video device will return a HTTP header contains 200 OK. The HTTP Body will contain actual result or error message if an error occurs.

## 1.3 Protocol Description

The client application should use POST form to send requests to the IP media devices. Other forms are not supported in this specification.

### 1.3.1 URL

The URL scheme is used to specify a request to the device locate device resources via a specific protocol in the network. This section defines the syntax and semantics for HTTP URLs.

```
<protocol>://<host>[:port]</cmd name>[/channelId][/action name]
```

---

**protocol**: URL scheme for the particular request. The HTTP protocol is allowed in this specification.

**host**: The host field refer to the host name, IP address, or the FQDN(Fully Qualified Domain Name) of an IP device.

**port**: The port field refer to the port number of that host on which the identified resource is located at the IP device listening for TCP connections. If the port is empty or not given, the default port is assumed. For HTTP, the default port 80.

**cmd name**: The specific command to an IP device.

**channelId**: The channel identification for an IP device. For the IP camera, this field can be omitted, the default channelId is "1".

**action name**: This field is optional. It acts as a sub operation for complex commands.

### 1.3.2 Connection Header Filed

Requests from the video management system or the client application are packed in HTTP messages. A request message composed of three parts: the connection header field, the authorization header field, and the entity body field.

HTTP/1.1 is implemented and utilized according to RFC 2616 in the IP devices. For a video management system or client application that uses persistent connection for multiple transactions, it is required to implement "Connection: Keep-Alive" HTTP header field as follows.

```
POST http://192.168.6.37/PtzAddPreset
```

```
HTTP/1.1
```

```
...
```

```
Content-Length: 135
```

```
...
```

```
Connection: Keep-Alive
```

```
...
```

### **1.3.3 Authorization Header Field**

When a video management system or client application sends any request to the IP device, it must be authenticated by means of Basic Access according to RFC 2617.

Authorization header field needs to be sent along with each request, and if a user is authenticated, the request will follow the normal execution flow. For the request with no authentication credentials, unauthorized HTTP response (401) will be returned with WWW-Authenticate header field.

For example:

1. An HTTP request from the client application should include the "Authorization" information as follows, the "YWRtaW46MTIzNDU2" is the encoded result of "admin:123456" by base64:

```
POST http://192.168.6.37/PtzAddPreset
```

```
HTTP/1.1
```

```
...
```

```
Authorization: Basic YWRtaW46MQ==
```

```
...
```

2. The device responses the following to a request with no authentication credentials:

```
401 Unauthorized
```

```
WWW-Authenticate: Basic realm="XXXXXX"
```

Then the client application encodes the username and password with base64, and sends the following request:

```
Authorization: Basic VXZVXZ.
```

### **1.3.4 Entity Body Field**

Some requests will include entity body field. The Content-Type entity-header field indicates the media type of the entity body. The Content-Type may be designated as "application/xml; charset='UTF-8'". For example:

---

```
POST http://192.168.6.37/PtzAddPreset
```

```
HTTP/1.1
```

```
...
```

```
Content-Type: application/xml; charset="UTF-8"
```

```
...
```

```
<?xml version="1.0" encoding="utf-8" ?>
```

```
<presetInfo>
```

```
<name>preset1</name>
```

```
</presetInfo>
```

### 1.3.5 Response Message

The response message from the IP device is a standard HTTP response, information can be included in the entity body field in XML format. This information includes the result to a request message, or the detailed parameters that required by a request message.

A successful response that includes the result is as follows:

```
HTTP/1.1 200 OK
```

```
...
```

```
Content-Type: application/xml; charset="UTF-8"
```

```
Content-Length: 66
```

```
Connection: close
```

```
...
```

```
<?xml version="1.0" encoding="UTF-8"?>
```

```
<config status="success"/>
```

A successful response that includes the detailed parameters is as follows:

```
HTTP/1.1 200 OK
```

Content-Type: application/xml; charset="UTF-8"

Content-Length: 66

Connection: close

...

```
<?xml version="1.0" encoding="UTF-8"?>
```

```
<config version="1.0" xmlns="http://www.ipc.com/ver10">
```

...

```
<deviceInfo>
```

```
<supportTalk type="boolean">true</supportTalk>
```

...

```
</deviceInfo>
```

```
</config>
```

When a request cannot be executed correctly, an application fail response that includes an error result in the entity body will be sent from the IP device. Meantime, the HTTP answer is 400 to indicate the client application. For example:

HTTP/1.1 400 Bad Request

...

Content-Type: application/xml

Content-Length: 66

Connection: close

```
<?xml version="1.0" encoding="utf-8" ?>
```

```
<config status="failed" errorCode="1"/>
```

---

The detailed "errorCode" will be described in the following section.

### 1.3.6 Error Code

Error Code	Description
1	"Invalid Request": The request URL is not supported by the device. There is something wrong with "cmd name", "channelId", or "action name".
2	"Invalid XML Format": The entity's XML format is not recognized by the system.
3	"Invalid XML Content": An incomplete message or a message containing some out-of-range parameters.
4	Permission denied
5	Network port num error

## 1.4 Protocol Conventions

### 1.4.1 XML Element Name

There will be several words in one element name, in this case, the first letter of the first word should be in lower case, the first letter of other words should be in upper case, and all other letters should be in lower case.

### 1.4.2 XML Element Type

Each element has an attribute "type", which defines the data type of the element. The basic data types are listed as follows:

Type	Description
boolean	The same as "bool" in C++, available value is "true" or "false".
int8	8 bit integer, the same as "char" in C/C++.

Type	Description
uint8	Unsigned 8 bit integer, the same as "unsigned char" in C/C++.
int16	16 bit integer, the same as "short" in C/C++.
uint16	Unsigned 16 bit integer, the same as "unsigned short" in C/C++.
int32	32 bit integer, the same as "long" in C/C++.
uint32	Unsigned 32 bit integer, the same as "unsigned long" in C/C++.
int64	64 bit integer, the same as "long long" in C/C++.
uint64	Unsigned 64 bit integer, the same as "unsigned long long" in C/C++.
string	A string of characters, like the "string" in C++.
list	List of basic or advanced types.

For the element with type "int8/uint8/int16/uint16/int32/uint32/int64/uint64", two more attributes "min" and "max" can be optional, which mean the minimum and maximum value of this element. For example:

```
<bright type="uint8" min="0" max="100" default="50">50</bright>
```

For the element with type "string" attribute, two more attributes "minLen" and "maxLen" are optional, which mean the minimum and maximum length of the character string. When the type "string" attribute is used, the string itself should be packed in the CDATA segment. For example:

```
<ntpServer type="string" minLen="0" maxLen="127"  
default="time.windows.com"><![CDATA[time.windows.com]]></ntpServer>
```

For the element with type "list" attribute, the attribute "maxCount" should be used for the variable list, which means the maximum item counts for this list, and the attribute "count" should be used for the list with constant items. There should be an "itemType" sub element after the element with type "list" attribute. Some "item" sub element should be included after the "itemType" sub element to indicate the value for the list. For example:

### 1.4.3 The "types" Element

When the basic data types cannot meet the demands, the "types" element should be used to define advanced data types. We don't define any advanced data types in this document. Either, all advanced data types that will be used in a message should be defined in the message body. This means "**The messages themselves are documents**".

In the "types" element, only the "enum" type can be defined. For example, an "enum" type is defined as follows:

## <types>

### <userType>

---

```
<enum>administrator</enum>

<enum>advance</enum>

<enum>normal</enum>

</userType>

</types>
```

It is not allowed for the client application to define advanced data types with the "types" element in request messages. The client application should study advanced data types from the response messages. Advanced data types defined in the corresponding response message can be used directly in a request message by the client application. The Client application can also study advanced data types from other elements except for "types" in the message entity from the device.

#### **1.4.4 Command catagory**

We divide all commands into different categories that will be detailed in the following paragraphs.

System commands.

Image commands.

PTZ commands.

Alarm commands.

Playback commands

Network commands.

Security commands.

Maintain commands.

Talkback commands

Smart commands

Schedule commands

---

## 1.5 Device discovery

The IP media devices support UPnP protocol for device discovery.

The IP devices support Universal Plug and Play (UPnP) technology to discovery/locate themselves. An UPnP compatible device will automatically announce its network address supported devices and services types when connected to a network, therefore becoming "plug-and-play" by allowing clients recognize those information and begin using this device immediately.

The UPnP architecture supports zero-configuration networking, and the device can dynamically join a network, obtain IP address, announce its name, convey its capabilities upon request, and gets the on-line status and capabilities of other devices. DHCP and DNS servers are optional and are only used if they are available on the network. Devices can leave the network automatically without leaving any unwanted status information behind. UPnP was published as a 73-part International Standard, ISO/IEC 29341, in December, 2008 [6][7][8].

After a control point has discovered a device, the control point still needs more operations to request more information about the device or to interact with it.

# 2 System commands

---

## 2.1 Device Information

### 2.1.1 GetDeviceInfo

GetDeviceInfo	
Description	To get the IP media device's information.

---

<b>GetDeviceInfo</b>	
Typical URL	POST or GET http://<host>[:port]/GetDeviceInfo
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The device information will be included in the entity of the successful response. For example:

## GetDeviceInfo

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0" xmlns="http://www.ipc.com/ver10">
    <deviceInfo>
        <deviceName type="string"><![CDATA[212]]></deviceName>
        <model type="string"><![CDATA[HD-2036TV]]></model>
        <brand type="string"><![CDATA[IPC]]></brand>
        <deviceDescription type="string"><![CDATA[IPCamera]]></deviceDescription>
        <audioInCount type="uint32">1</audioInCount>
        <audioOutCount type="uint32">1</audioOutCount>
        <integratedPtz type="boolean">true</integratedPtz>
        <supportRS485Ptz type="boolean">false</supportRS485Ptz>
        <supportSDCard type="boolean">true</supportSDCard>
        <alarmInCount type="uint32">1</alarmInCount>
        <alarmOutCount type="uint32">1</alarmOutCount>
        <softwareVersion type="string"><![CDATA[4.0.0 beta1]]></softwareVersion>
        <softwareBuildDate type="string"><![CDATA[2013-12-24]]></softwareBuildDate>
        <kernelVersion type="string"><![CDATA[20111010]]></kernelVersion>
        <hardwareVersion type="string"><![CDATA[1.3]]></hardwareVersion>
        <mac type="string"><![CDATA[00:18:ae:98:38:fd]]></mac>
        <sn type="string"><![CDATA[2E323D9463D5]]></sn>
        <chlMaxCount type="uint32">9</chlMaxCount>
    </deviceInfo>
</config>
```

### [Tips]:

This command is designed for the client application to obtain the basic information from the specific media device.

- For the fixed-channel devices such as IPC or DVR, the items "audioInCount", "audioOutCount", "alarmInCount" and "alarmOutCount" will be included in the successful response.
- For the variable-channel devices such as NVR, these items are optional. The client application can use "GetChannelList", "GetAlarmInList", "GetAlarmOutList", "GetStreamCpas" commands to obtain the information.

## 2.1.2 GetDiskInfo

GetDiskInfo	
Description	To get the IP media device's disk information.
Typical URL	POST or GET http://<host>[:port]/GetDiskInfo
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The device information will be included in the entity of the successful response. For example:

## GetDiskInfo

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0" xmlns="http://www.ipc.com/ver10">
    <types>
        <diskStatus>
            <enum>read</enum>
            <enum>read/write</enum>
            <enum>unformat</enum>
            <enum>formatting</enum>
            <enum>exception</enum>
        </diskStatus>
    </types>
    <diskInfo type="list" count="1">
        <item>
            <id type="string"><![CDATA[ {5B457B2A-D467-834E-B1E8-22F3450DA873} ]]></id>
            <totalSpace type="uint32">953869</totalSpace>
            <freeSpace type="uint32">847872</freeSpace>
            <imageFreeSpace type="uint32">847872</imageFreeSpace>
            <diskStatus type="diskStatus">read/write</diskStatus>
        </item>
    </diskInfo>
</config>
```

---

### [Tips]:

The "totalSpace" and "freeSpace" are in mb.

There is empty "diskInfo" node if there is no disk on device.

The enums, "read", "read/write" and "unformat", are supported by NVR and DVR.

The enums, "read/write", "unformat", "formatting" and "exception", are supported by IPC.

The "imageFreeSpace" is supported by IPC only.

---

## 2.1.3 GetChannelList

GetChannelList	
Description	To get the IP media device's channel list. Only NVR is supported.
Typical URL	POST or GET http://<host>[:port]/GetChannelList
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The channel list will be included in the entity of the successful response. For example:

#### GetChannelList

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0" xmlns="http://www.ipc.com/ver10">
    <types>
        <channelStatus>
            <enum>online</enum>
            <enum>offline</enum>
            <enum>videoOn</enum>
            <enum>videoLoss</enum>
        </channelStatus>
    </types>
    <channelIDList type="list" count="4"/>
    <itemType type="string" maxLen="20"/>
    <item channelStatus="online">1</item>
    <item channelStatus="online">2</item>
    <item channelStatus="online">3</item>
    <item channelStatus="online">4</item>
</config>
```

#### [Tips]:

This command is designed for multi-channel device and not mandatory for IP cameras. If the "deviceDescription" item is equal to "IPCamera" in the response message for "GetDeviceInfo" command, this command should not be sent to the device.

### 2.1.4 GetAlarmInList

GetAlarmInList	
Description	To get the IP media device's alarmin list. Only NVR is supported.
Typical URL	POST or GET http://<host>[:port]/GetAlarmInList
Channel ID	None

<b>GetAlarmInList</b>	
Action name	None
Entity Data	None
Successful Response	The alarmin list will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.0"     xmlns="http://www.ipc.com/ver10"&gt;     &lt;alarmInIDList type="list" count="8"&gt;&lt;/alarmInIDList&gt;     &lt;itemType type="string" maxLen="20"/&gt;     &lt;item&gt;1&lt;/item&gt;     &lt;item&gt;2&lt;/item&gt;     &lt;item&gt;3&lt;/item&gt;     &lt;item&gt;4&lt;/item&gt;     &lt;item&gt;5&lt;/item&gt;     &lt;item&gt;6&lt;/item&gt;     &lt;item&gt;7&lt;/item&gt;     &lt;item&gt;8&lt;/item&gt; &lt;/config&gt;</pre>	
<p>[Tips]:</p> <p>This command is designed for multi-channel device and not mandatory for IP cameras. If the "deviceDescription" item is equal to "IPCamera" in the response message for "GetDeviceInfo" command, this command should not be sent to the device.</p>	

## 2.1.5 GetAlarmOutList

<b>GetAlarmOutList</b>	
Description	To get the IP media device's alarmout list. Only NVR is supported.
Typical URL	POST or GET http://<host>[:port]/GetAlarmOutList
Channel ID	None

<b>GetAlarmOutList</b>	
Action name	None
Entity Data	None
Successful Response	The alarmout list will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.0"     xmlns="http://www.ipc.com/ver10"&gt;     &lt;alarmOutIDList type="list" count="4"&gt;&lt;/alarmOutIDList&gt;     &lt;itemType type="string" maxLen="20"/&gt;     &lt;item&gt;1&lt;/item&gt;     &lt;item&gt;2&lt;/item&gt;     &lt;item&gt;3&lt;/item&gt;     &lt;item&gt;4&lt;/item&gt; &lt;/config&gt;</pre>	
<p>[Tips]:</p> <p>This command is designed for multi-channel device and not mandatory for IP cameras. If the "deviceDescription" item is equal to "IPCamera" in the response message for "GetDeviceInfo" command, this command should not be sent to the device.</p>	

## 2.1.6 GetDeviceDetail

<b>GetDeviceDetail</b>	
Description	To get device's details. Only IPC is supported.
Typical URL	POST or GET http://<host>[:port]/GetDeviceDetail
Channel ID	None
Action name	None
Entity Data	None

Successful Response	The device detail will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.0" xmlns="http://www.ipc.com/ver10"&gt;  &lt;detail&gt;  &lt;property&gt;  &lt;deviceName type="string"&gt;&lt;![CDATA[IPC]]&gt;&lt;/deviceName&gt; &lt;deviceDescription type="string"&gt;&lt;![CDATA[IPCamera]]&gt;&lt;/deviceDescription&gt; &lt;model type="string"&gt;&lt;![CDATA[HD-2036TV]]&gt;&lt;/model&gt; &lt;brand type="string"&gt;&lt;![CDATA[IPC]]&gt;&lt;/brand&gt; &lt;sn type="string"&gt;&lt;![CDATA[2E323D9463D5]]&gt;&lt;/sn&gt; &lt;mac type="string"&gt;&lt;![CDATA[00:18:ae:98:38:fd]]&gt;&lt;/mac&gt; &lt;softwareVersion type="string"&gt;&lt;![CDATA[4.0.0 beta1]]&gt;&lt;/softwareVersion&gt; &lt;softwareBuildDate type="string"&gt;&lt;![CDATA[2013-12-24]]&gt;&lt;/softwareBuildDate&gt; &lt;kernelVersion type="string"&gt;&lt;![CDATA[20111010]]&gt;&lt;/kernelVersion&gt; &lt;hardwareVersion type="string"&gt;&lt;![CDATA[1.3]]&gt;&lt;/hardwareVersion&gt; &lt;apiVersion type="string"&gt;&lt;![CDATA[1.7]]&gt;&lt;/apiVersion&gt;  &lt;/property&gt;  &lt;smart&gt;  &lt;supportTripwire type="boolean"&gt;false&lt;/supportTripwire&gt; &lt;supportPerimeter type="boolean"&gt;false&lt;/supportPerimeter&gt; &lt;supportOsc type="boolean"&gt;false&lt;/supportOsc&gt; &lt;supportAvd type="boolean"&gt;false&lt;/supportAvd&gt; &lt;supportVfd type="boolean"&gt;false&lt;/supportVfd&gt; &lt;supportCpc type="boolean"&gt;false&lt;/supportCpc&gt; &lt;supportCdd type="boolean"&gt;false&lt;/supportCdd&gt; &lt;supportIpd type="boolean"&gt;false&lt;/supportIpd&gt; &lt;supportVfdMatch type="boolean"&gt;false&lt;/supportVfdMatch&gt; &lt;supportvehicle type="boolean"&gt;false&lt;/supportvehicle&gt; &lt;supportAoiEntry type="boolean"&gt;false&lt;/supportAoiEntry&gt; &lt;supportAoiLeave type="boolean"&gt;false&lt;/supportAoiLeave&gt; &lt;supportPassLineCount type="boolean"&gt;false&lt;/supportPassLineCount&gt;</pre>	

```
<supportThermal type="boolean">false</supportThermal>
<supportTraffic type="boolean">false</supportTraffic>
<supportHeatMap type="boolean">false</supportHeatMap>
<supportVsd type="boolean">false</supportVsd>
<supportAsd type="boolean">false</supportAsd>
<supportPvd type="boolean">false</supportPvd>
<supportLoitering type="boolean">false</supportLoitering>
</smart>
<image>
    <supportAZ type="boolean">true</supportAZ>
    <supportROI type="boolean">true</supportROI>
    <supportInfraredLamp type="boolean">false</supportInfraredLamp>
    <supportWatermark type="boolean">true</supportWatermark>
    <supportPrivateMask type="boolean">true</supportPrivateMask>
</image>
<alarm>
    <supportMultiMotionSensitivity type="boolean">false</supportMultiMotionSensitivity>
    <supportAlarmServer type="boolean">false</supportAlarmServer>
    <alarmInCount type="uint32">1</alarmInCount>
    <alarmOutCount type="uint32">1</alarmOutCount>
    <supportAudioAlarmOut type="boolean">false</supportAudioAlarmOut>
    <supportWhiteLightAlarmOut type="boolean">false</supportWhiteLightAlarmOut>
</alarm>
<system>
    <supportSnmp type="boolean">true</supportSnmp>
    <audioInCount type="uint32">1</audioInCount>
    <audioOutCount type="uint32">1</audioOutCount>
    <integratedPtz type="boolean">true</integratedPtz>
    <supportRS485Ptz type="boolean">false</supportRS485Ptz>
    <supportSDCard type="boolean">true</supportSDCard>
    <chlMaxCount type="uint32">9</chlMaxCount>
</system>
```

```
</detail>  
</config>
```

[Tips]:

cdd: Crowd Density Detection  
ipd: Intruding People Detection  
osc: Object Status Change  
tripwire: Tripwire Detection  
perimeter: Perimeter Environment Assurance  
vfd: Video Face Detection  
vehicle:Video vehilce Detection  
aoientry: Aoi Entry Detection  
aoileave: Aoi Leave Detection  
passlinecount: Target Counting by Line Detection  
traffic:Target Counting by Area Detection  
heatMap:Heat Map Detection  
Thermal:Thermal imaging temperature measurement  
vsd:Video Metadata Detection  
asd:Audio Abnormal Detection  
pwd:Illegal Parking Detection  
Loitering:Loitering Detection

## 2.2 Date and Time

### 2.2.1 GetDateAndTime

GetDateAndTime	
Description	To get the IP media device's system date and time.
Typical URL	POST or GET http://<host>[:port]/GetDateAndTime
Channel ID	None

---

<b>GetDateAndTime</b>	
Action name	None
Entity Data	None
Successful Response	The device time and date will be included in the entity of the Successful response. For example:

## GetDateAndTime

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.7"
  xmlns="http://www.ipc.com/ver10">
  <types>
    <synchronizeType>
      <enum>manually</enum>
      <enum>NTP</enum>
      <enum>PC</enum>
    </synchronizeType>
    <timeFormatModeType>
      <enum>12h</enum>
      <enum>24h</enum>
    </timeFormatModeType>
  </types>
  <time>
    <timeFormatMode type="timeFormatModeType">24h</timeFormatMode>
    <timezoneInfo>
      <timeZone type="string" maxLen="127">
        <![CDATA[CST-8]]>
      </timeZone>
      <startTime type="string" maxLen="64">
        <![CDATA[M1.1.0/0]]>
      </startTime>
      <endTime type="string" maxLen="64">
        <![CDATA[M2.1.1/0]]>
      </endTime>
      <offSet type="uint16" min="30" max="120">120</offSet>
      <daylightSwitch type="uint32">0</daylightSwitch>
    </timezoneInfo>
    <synchronizeInfo>
```

### **GetDateAndTime**

```
<type type="synchronizeType">manually</type>
<ntpServer type="string" maxLen="127">
    <![CDATA[time.windows.com]]>
</ntpServer>
<ntpSyncInterval type="uint32" min="30" max="10080">1440</ntpSyncInterval>
<currentTime type="string">
    <![CDATA[2021-04-15 11:50:18]]>
</currentTime>
</synchronizeInfo>
</time>
</config>
```

#### [Tips]:

The element "timeZone" announces the time zone information. "GMT0BST,M3.5.0/1,M10.5.0", this time zone, standard time named GMT and daylight saving time named BST, has daylight saving time. The standard local time is GMT. Daylight saving time, 1 hour ahead of GMT, starts the last Sunday in March at 01:00 and ends the last Sunday in October at 02:00.

## **2.2.2 SetDateAndTime**

<b>SetDateAndTime</b>	
Description	To set the IP media device's system date and time.
Typical URL	POST http://<host>[:port]/SetDateAndTime
Channel ID	None
Action name	None
Entity Data	The device time and date will be included in the entity of request message. The whole "time" element in the "GetDataAndTime" should be included in entity of this message. Any attributes for the "time" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

## 2.3 Upgrade

### 2.3.1 UpdateState

UpdateState	
Description	To set the IP media device's start or stop upgrade .
Typical URL	POST or GET http://<host>[:port]/UpdateState
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The device time and date will be included in the entity of the Successful response. For example:
<?xml version="1.0" encoding="utf-8" ?> <config version="1.7" xmlns="http://www.ipc.com/ver10"> <types> <state> <enum>start</enum> <enum>stop</enum> </state> </types> <upgradeInfo> <upgradeState type="state">start</upgradeState> <upgradePacketSize type="uint32">12071104</upgradePacketSize> <md5sumBuffer type="string"> <![CDATA[68b8423b3535f97b88a7264b0870bca6]]> </md5sumBuffer> </upgradeInfo> </config>	
[Tips]: 1.The upgrade must start with the upgradestate as start, the upgradepacketsize as the upgrade package size, and the md5sumbuffer as the md5sum value of the entire upgrade package file.	

---

<b>UpdateState</b>
2. After sending the upgrade package file, you need to send the upgradestate as stop to start upgrading the firmware.

### 2.3.2 UpdateSliceFirmware

<b>UpdateSliceFirmware</b>	
Description	To update the IP media device's firmware,Recommended upgrade package fragment size 1M
Typical URL	POST http://<host>[:port]/UpdateSliceFirmware
Channel ID	None
Action name	None
Entity Data	For example:

Description	To update the IP media device's firmware,Recommended upgrade package fragment size 1M
Typical URL	POST http://<host>[:port]/UpdateSliceFirmware
Channel ID	None
Action name	None
Entity Data	For example:

## UpdateSliceFirmware

POST /UpdateSliceFirmware HTTP/1.1  
Accept: \*/\*  
If-Modified-Since: 0  
Authorization: Basic YWRtaW46MTIzNDU2  
Content-Type: multipart/form-data; boundary=-----7e43865e10634  
Accept-Language: zh-CN  
Accept-Encoding: gzip, deflate  
User-Agent: Mozilla/5.0 (Windows NT 6.1; WOW64; Trident/7.0; rv:11.0) like Gecko  
Host: 10.20.19.242  
Content-Length: 536964  
DNT: 1  
Connection: Keep-Alive  
Cache-Control: no-cache

-----7e43865e10634  
Content-Disposition: form-data; name="file"; filename="blob"  
Content-Type: application/octet-stream

*binary upgrade file*

-----7e43865e10634--

Successful Response	The standard successful result response that described in 1.3.5.
---------------------	--

# 3

## Image commands

### 3.1 Stream Capabilities

#### 3.1.1 GetStreamCaps

GetStreamCaps	
Description	To get the IP media device's streams capabilities for specific channel.
Typical URL	POST or GET http://<host>[:port]/GetStreamCaps[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The stream capabilities will be included in the entity of the Successful response. For example:

## GetStreamCaps

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
    xmlns="http://www.ipc.com/ver10">
    <types>
        <resolution>
            <enum>1920x1080</enum>
            <enum>1280x720</enum>
            <enum>704x576</enum>
            <enum>352x288</enum>
        </resolution>
        <encodeType>
            <enum>h264</enum>
            <enum>mpeg4</enum>
            <enum>mjpeg</enum>
            <enum>h264plus</enum>
            <enum>h265plus</enum>
            <enum>h264smart</enum>
            <enum>h265smart</enum>
            ...
        </encodeType>
        <encodeLevel>
            <enum>baseLine</enum>
            <enum>mainProfile</enum>
            <enum>highProfile</enum>
        </encodeLevel>
    </types>
    <rtspPort type="uint16">554</rtspPort>
    <streamList type="list" count="4">
        <item id="1">
```

## GetStreamCaps

```
<streamName type="string">
    <![CDATA[profile1]]>
</streamName>

<resolutionCaps type="list" count="1">
    <itemType type="resolution"/>
    <item maxFrameRate="25">1920x1080</item>
</resolutionCaps>

<encodeTypeCaps type="list" count="1">
    <itemType type="encodeType"/>
    <item>h264</item>
</encodeTypeCaps>

<encodeLevelCaps type="list" count="3">
    <itemType type="encodeLevel"/>
    <item>baseLine</item>
    <item>mainProfile</item>
    <item>highProfile</item>
</encodeLevelCaps>

</item>
<item id="2">
    <streamName type="string">
        <![CDATA[profile2]]>
    </streamName>
    <resolutionCaps type="list" count="3">
        <itemType type="resolution"/>
        <item maxFrameRate="10">1920x1080</item>
        <item maxFrameRate="25">1280x720</item>
        <item maxFrameRate="25">704x480</item>
    </resolutionCaps>
    <encodeTypeCaps type="list" count="1">
        <itemType type="encodeType"/>
        <item>h264</item>
    </encodeTypeCaps>
</item>
```

### GetStreamCaps

```
</encodeTypeCaps>

<encodeLevelCaps type="list" count="3">
    <itemType type="encodeLevel"/>
    <item>baseLine</item>
    <item>mainProfile</item>
    <item>highProfile</item>
</encodeLevelCaps>
</item>
...
</streamList>
</config>
```

#### [Tips]:

The "count=4" means the channel supports 4 streams at the same time. Each stream's capability is announced in the "item" sub element. The "streamName" announces the name of each stream. The client application, can obtain the specific stream of NVR/DVR by the following URL.

rtsp://<host><:port>?chID=<channelId>&streamType=<streamType>

"streamtype" can be main or sub

The client application, can obtain the specific stream of IPC by the following URL.

rtsp://<host><:port>/<streamName>

The "resolutionCaps" announces optional combinations for frame rate and resolution. The "encodeTypeCaps" announces optional compression types. The "encodeLevelCaps" optional compression levels.

For the reason that the capabilities for each stream are not the same, we omit the "itemType" element after the "streamList" element.

The "id" attribute for each item starts from "1".

## 3.2 Image Configuration

### 3.2.1 GetImageConfig

#### GetImageConfig

## GetImageConfig

Description	To get the IP media device's image configuration for specific channel.
Typical URL	POST or GET http://<host>[:port]/GetImageConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The image configuration will be included in the entity of the Successful response. For example:

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
    xmlns="http://www.ipc.com/ver10">
    <types>
        <frequency>
            <enum>60HZ</enum>
            <enum>50HZ</enum>
        </frequency>
        <whitebalanceMode>
            <enum>auto</enum>
            <enum>manual</enum>
            <enum>outdoor</enum>
            <enum>indoor</enum>
        </whitebalanceMode>
        <IRCutMode>
            <enum>auto</enum>
            <enum>day</enum>
            <enum>night</enum>
        </IRCutMode>
        <antiflickerMode>
            <enum>OFF</enum>
        </antiflickerMode>
    </types>
</config>
```

## GetImageConfig

```
<enum>50HZ</enum>
<enum>60HZ</enum>
</antiflickerMode>
</types>
<image>
<frequency type="frequency" default="50HZ">50HZ</frequency>
<bright type="uint8" min="0" max="100" default="50">50</bright>
<contrast type="uint8" min="0" max="100" default="55">55</contrast>
<hue type="uint8" min="0" max="100" default="50">50</hue>
<saturation type="uint8" min="0" max="100" default="50">50</saturation>
<mirrorSwitch type="boolean" default="false">false</mirrorSwitch>
<flipSwitch type="boolean" default="false">false</flipSwitch>
<WDR>
<switch type="boolean" default="false">false</switch>
<value type="uint8" default="128">128</value>
</WDR>
<whiteBalance>
<mode type="whitebalanceMode" default="auto">auto</mode>
<red type="uint32" min="0" max="100" default="50">50</red>
<blue type="uint32" min="0" max="100" default="50">50</blue>
</whiteBalance>
<denoise>
<switch type="boolean" default="false">false</switch>
<value type="uint8" default="24">24</value>
</denoise>
<irisSwitch type="boolean" default="false">false</irisSwitch>
<sharpen>
<switch type="boolean" default="true">true</switch>
<value type="uint8" default="80">80</value>
</sharpen>
<IRCutMode type="IRCutMode" default="auto">auto</IRCutMode>
```

### GetImageConfig

```
<backLightAdjust>
    <switch type="boolean" default="true">true</switch>
    <value type="uint8" min="150" max="255" default="200">200</value>
</backLightAdjust>
<antiflicker type="antiflickerMode" default="OFF">OFF</antiflicker>
</image>
</config>
```

### 3.2.2 SetImageConfig

SetImageConfig	
Description	To set the IP media device's image configuration for specific channel.
Typical URL	POST http://<host>[:port]/SetImageConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The image configuration for specific channel should be included in the entity of request message. The whole "image" element in the "GetImageConfig" or some parameters that need to be changed can be included in entity of this message. Any attributes for the "image" element or sub elements should not be included. The following example changes the "saturation" parameter.
<?xml version="1.0"?> <config version="1.0"     xmlns="http://www.ipc.com/ver10">     <image>         <saturation>65</saturation>     </image> </config>	
Successful Response	The standard successful result response that described in 1.3.5.

### 3.2.3 GetSnapshot

GetSnapshot	
Description	To get a picture encoded by jpg for specific channel.
Typical URL	POST or GET http://<host>[:port]/GetSnapshot[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	A picture encoded by jpg.

### 3.2.4 GetSnapshotByTime

GetSnapshotByTime	
Description	To get a key frame for specific channel on specific time.
Typical URL	POST or GET http://<host>[:port]/GetSnapshotByTime[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	<p>The time be included in the entity of the request message as search history picture. For example:</p> <pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.0" xmlns="http://www.ipc.com/ver10"&gt;     &lt;search&gt;         &lt;time type="string"&gt;&lt;![CDATA[2017-01-09 15:07:28]]&gt;&lt;/time&gt;         &lt;length type = "uint16"&gt;10&lt;/length&gt;     &lt;/search&gt; &lt;/config&gt;</pre>
Successful Response	The snapshot data from the specific time.

## GetSnapshotByTime

[Tips]:

- 1.It returns the data from "time" in "length" seconds.
- 2.The response maybe one key frame of H.264 or H.265, or a picture encoded by jpg. Get the type from the http head content-Type.

## 3.3 Stream Configuration

### 3.3.1 GetAudioStreamConfig

GetAudioStreamConfig	
Description	To get the IP media device's audio stream configuration for specific channel.
Typical URL	POST or GET http://<host>[:port]/GetAudioStreamConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The audio stream element will be included in the entity of the Successful response. For example:

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
  xmlns="http://www.ipc.com/ver10">
  <types>
    <audioEncode>
      <enum>G711A</enum>
      <enum>G711U</enum>
      <enum>AAC</enum>
    </audioEncode>
    <audioInput>
```

## GetAudioStreamConfig

```
<enum>MIC</enum>
<enum>LIN</enum>
</audioInput>
<audioOutput>
<enum>TALKBACK</enum>
<enum>ALARM_AUDIO</enum>
<enum>AUTO</enum>
</audioOutput>
<audioSampleRate>
<enum audioEncode="G711A">8000</enum>
<enum audioEncode="G711A">16000</enum>
<enum audioEncode="G711U">8000</enum>
<enum audioEncode="G711U">16000</enum>
<enum audioEncode="AAC">8000</enum>
<enum audioEncode="AAC">16000</enum>
</audioSampleRate>
<audioBitWidth>
<enum>8</enum>
<enum>16</enum>
</audioBitWidth>
</types>
<audioInSwitch type="boolean">true</audioInSwitch>
<audioEncode type="audioEncode">G711A</audioEncode>
<audioInput type="audioInput">MIC</audioInput>
<audioSampleRate type="audioSampleRate">8000</audioSampleRate>
<audioBitWidth type="audioBitWidth">16</audioBitWidth>
<audioOutput type="audioOutput">TALKBACK</audioOutput>
<louSpeaker type="audioOutput">AUTO</louSpeaker>
<audioOutputswitch type="boolean">false</audioOutputswitch>
<louSpeakerswitch type="boolean">true</louSpeakerswitch>
</config>
```

---

<b>GetAudioStreamConfig</b>
[Tips]:

### 3.3.2 SetAudioStreamConfig

<b>SetAudioStreamConfig</b>	
Description	To set the IP media device's audio stream configuration for specific channel.
Typical URL	POST http://<host>[:port]/SetAudioStreamConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The audio stream configuration for specific channel should be included in the entity of request message. The whole "audioEncode" element in the "GetAudioStreamConfig" can be included in entity of this message. Any attributes for the "audioEncode" element or sub elements should not be included.

### **SetAudioStreamConfig**

Successful Response	The standard successful result response that described in 1.3.5.
---------------------	--

### **3.3.3 GetVideoStreamConfig**

#### **GetVideoStreamConfig**

Description	To get the IP media device's video stream configuration for specific channel.
Typical URL	POST or GET http://<host>[:port]/GetVideoStreamConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The video stream configuration will be included in the entity of the successful response. For example:

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
    xmlns="http://www.ipc.com/ver10">
    <types>
        <bitRateType>
            <enum>VBR</enum>
            <enum>CBR</enum>
        </bitRateType>
        <quality>
            <enum>lowest</enum>
            <enum>lower</enum>
            <enum>medium</enum>
            <enum>higher</enum>
            <enum>highest</enum>
        </quality>
        <encodeType>
```

## GetVideoStreamConfig

```
<enum>h264</enum>
<enum>h265</enum>
<enum>h264plus</enum>
<enum>h265plus</enum>
<enum>h264smart</enum>
<enum>h265smart</enum>
<enum>mjpeg</enum>

</encodeType>
</types>
<streams type="list" count="4">
    <item id="1">
        <name type="string" maxLen="32">
            <![CDATA[profile1]]>
        </name>
        <resolution>1920x1080</resolution>
        <frameRate type="uint32">25</frameRate>
        <bitRateType type="bitRateType">CBR</bitRateType>
        <maxBitRate type="uint32" min="64" max="12288">4096</maxBitRate>
        <bitRateLists>
            <item>2048</item>
            <item>3072</item>
            <item>4096</item>
            <item>6144</item>
            <item>8192</item>
        </bitRateLists>
        <encodeTypeCaps type="list">
            <itemType type="encodeType" />
            <item>h264</item>
            <item>h265</item>
            <item>h264plus</item>
            <item>h265plus</item>
```

## GetVideoStreamConfig

```
<item>h264smart</item>
<item>h265smart</item>
<item>mjpeg</item>
</encodeTypeCaps>
<encodeType>h264</encodeType>
<encodeLevel>baseLine</encodeLevel>
<quality type="quality">highest</quality>
<GOP type="uint32" min="30" max="200">100</GOP>
</item>
<item id="2">
  <name type="string" maxLen="32">
    <![CDATA[profile2]]>
  </name>
  <resolution>1280x720</resolution>
  <frameRate type="uint32">25</frameRate>
  <bitRateType type="bitRateType">CBR</bitRateType>
  <maxBitRate type="uint32" min="64" max="10240">2048</maxBitRate>
  <bitRateLists>
    <item>256</item>
    <item>512</item>
    <item>768</item>
    <item>1024</item>
    <item>2048</item>
  </bitRateLists>
  <encodeTypeCaps type="list">
    <itemType type="encodeType" />
    <item>h264</item>
    <item>h265</item>
    <item>h264plus</item>
    <item>h265plus</item>
    <item>mjpeg</item>
```

#### **GetVideoStreamConfig**

```
</encodeTypeCaps>  
<encodeType>h264</encodeType>  
<encodeLevel>baseLine</encodeLevel>  
<quality type="quality">highest</quality>  
<GOP type="uint32" min="30" max="200">100</GOP>  
</item>  
...  
</streams>  
</config>
```

#### [Tips]:

- 1.The "count=4" means the channel supports 4 streams at the same time. Each stream's current video configuration is announced in the "item" sub element. The value of each stream's "resolution", "framRate", "encodeType", and "encodeLevel" should be in the scope of the corresponding capability announced in the "GetStreamCaps" successful respond message. The "maxBitRate" element means the bitrate in kbps.
- 2.The "id" attribute for each item starts from "1".

### **3.3.4 SetVideoStreamConfig**

<b>SetVideoStreamConfig</b>	
Description	To set the IP media device's video stream configuration for specific channel.
Typical URL	POST http://<host>[:port]/SetVideoStreamConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The video stream configuration for specific channel should be included in the entity of request message. The whole "streams" element in the "GetVideoStreamConfig" can be included in entity of this message. Any attributes for the "streams" element or sub elements should not be included. The value of each stream's "resolution", "framRate", "encodeType", and "encodeLevel" should be in the scope of the corresponding capability announced in the "GetStreamCaps" successful respond message.
Successful Response	The standard successful result response that described in 1.3.5.

---

<b>SetVideoStreamConfig</b>
[Tips]:

### 3.3.5 RequestKeyFrame

RequestKeyFrame	
Description	It is used to request the device to encode a key frame for specific channel.
Typical URL	POST or GET http://<host>[:port]/RequestKeyFrame [/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The standard successful result response that described in 1.3.5.

## 3.4 OSD

### 3.4.1 GetImageOsdConfig

GetImageOsdConfig	
Description	To get the IP media device's image OSD element for specific channel.
Typical URL	POST or GET http://<host>[:port]/GetImageOsdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The image OSD element will be included in the entity of the Successful response. For example:

## GetImageOsdConfig

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
    xmlns="http://www.ipc.com/ver10">
    <types>
        <dateFormat>
            <enum>year-month-day</enum>
            <enum>month-day-year</enum>
            <enum>day-month-year</enum>
        </dateFormat>
    </types>
    <imageOsd>
        <time>
            <switch type="boolean">true</switch>
            <X type="uint32">0</X>
            <Y type="uint32">0</Y>
            <dateFormat type="dateFormat">year-month-day</dateFormat>
        </time>
        <channelName>
            <switch type="boolean">false</switch>
            <X type="uint32">0</X>
            <Y type="uint32">0</Y>
            <name type="string" maxLen="19">
                <![CDATA[name]]>
            </name>
        </channelName>
    </imageOsd>
</config>
```

[Tips]:

The "X" and "Y" element announce the horizontal and vertical position based in the 10000\*10000 resolution.

### 3.4.2 SetImageOsdConfig

SetImageOsdConfig	
Description	To set the IP media device's image OSD element for specific channel.
Typical URL	POST http://<host>[:port]/SetImageOsdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The image OSD element for specific channel should be included in the entity of request message. The whole "imageOsd" element in the "GetImageOsdConfig" or some parameters that need to be changed can be included in entity of this message. Any attributes for the "imageOsd" element or sub elements should not be included. The following example changes the "channelName" element:  <?xml version="1.0" encoding="UTF-8"?> <config version="1.0" xmlns="http://www.ipc.com/ver10"> <imageOsd> <channelName> <switch>true</switch> <X>100</X> <Y>100</Y> <name> <![CDATA[camera01]]> </name> </channelName> </imageOsd> </config>
Successful Response	The standard successful result response that described in 1.3.5.

## 3.5 Privacy Mask

### 3.5.1 GetPrivacyMaskConfig

GetPrivacyMaskConfig	
Description	To get the IP media device's privacy mask configuration for specific channel.
Typical URL	POST or GET http://<host>[:port]/GetPrivacyMaskConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The privacy mask element will be included in the entity of the Successful response. For example:

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
  xmlns="http://www.ipc.com/ver10">
  <types>
    <color>
      <enum>black</enum>
      <enum>white</enum>
      <enum>gray</enum>
    </color>
  </types>
  <privacyMask type="list" count="4">
    <itemType>
      <switch type="boolean"/>
      <rectangle>
        <X type="uint32"/>
        <Y type="uint32"/>
        <width type="uint32"/>
        <height type="uint32"/>
      </rectangle>
    </itemType>
  </privacyMask>
</config>
```

### GetPrivacyMaskConfig

```
</rectangle>
<color type="color"/>
</itemType>
<item>
<switch>false</switch>
<rectangle>
<X>0</X>
<Y>0</Y>
<width>0</width>
<height>0</height>
</rectangle>
<color>black</color>
</item>
...
</privacyMask>
</config>
```

#### [Tips]:

The "X" and "Y" element announce the horizontal and vertical position based in the 640\*480 resolution.

### 3.5.2 SetPrivacyMaskConfig

#### SetPrivacyMaskConfig

Description	To set the IP media device's privacy mask element for specific channel.
Typical URL	POST http://<host>[:port]/SetPrivacyMaskConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None

<b>SetPrivacyMaskConfig</b>	
Entity Data	The privacy mask element for specific channel should be included in the entity of request message. The whole "privacyMask" element in the "GetPrivacyMaskConfig" should be included in entity of this message. Any attributes for the "privacyMask" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

# 4 PTZ commands

---

## 4.1 Protocol

### 4.1.1 PtzGetCaps

<b>PtzGetCaps</b>	
Description	To get the IP media device's PTZ capabilities mask information for specific channel.
Typical URL	POST or GET http://<host>[:port]/PtzGetCaps[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The PTZ capabilities will be included in the entity of the Successful response. For example:

### PtzGetCaps

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0" xmlns="http://www.ipc.com/ver10">
    <caps>
        <controlMinSpeed type="uint32">1</controlMinSpeed>
        <controlMaxSpeed type="uint32">8</controlMaxSpeed>
        <presetMaxCount type="uint32">255</presetMaxCount>
        <cruiseMaxCount type="uint32">8</cruiseMaxCount>
        <cruisePresetMinSpeed type="uint32">1</cruisePresetMinSpeed>
        <cruisePresetMaxSpeed type="uint32">8</cruisePresetMaxSpeed>
        <cruisePresetMaxHoldTime type="uint32">240</cruisePresetMaxHoldTime>
        <cruisePresetMaxCount type="uint32">16</cruisePresetMaxCount>
    </caps>
</config>
```

#### [Tips]:

The sub elements in the "caps" element announce the scope of each parameter. For example, the "ptzControlMinSpeed" announce the minimum speed for the PTZ control command, the "ptzControlMaxSpeed" announce the maximum speed for the PTZ control command.

## 4.1.2 GetPtzConfig

GetPtzConfig	
Description	To get the IP media device's PTZ protocol configuration for specific channel. Only IPC is supported.
Typical URL	POST or GET http://<host>[:port]/GetPtzConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The PTZ protocol configuration will be included in the entity of the Successful response. For example:

## GetPtzConfig

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.7"
  xmlns="http://www.ipc.com/ver10">
  <types>
    <language>
      <enum>en</enum>
      <enum>cn</enum>
    </language>
    <autoExitTime>
      <enum>off</enum>
      <enum>15sec</enum>
      <enum>30sec</enum>
      <enum>60sec</enum>
      <enum>90sec</enum>
      <enum>120sec</enum>
    </autoExitTime>
    <protocol>
      <enum>PELCOP</enum>
      <enum>PELCOD</enum>
    </protocol>
    <baudRate>
      <enum>1200</enum>
      <enum>2400</enum>
      <enum>4800</enum>
      <enum>9600</enum>
    </baudRate>
  </types>
  <ptzSettings>
    <autoPtzFlip type="boolean">true</autoPtzFlip>
    <language type="string">en</language>
```

### **GetPtzConfig**

```
<autoExitTime type="string">off</autoExitTime>
<rs485>
  <idType>SW</idType>
  <demoId min="0" max="255">1</demoId>
  <protocol type="string">
    <![CDATA[PELCOD]]>
  </protocol>
  <baudRate type= "baudRate">2400</baudRate>
</rs485>
</ptzSettings>
</config>
```

### **4.1.3 SetPtzConfig**

SetPtzConfig	
Description	To set the IP media device's PTZ protocol configuration for specific channel. Only IPC is supported.
Typical URL	POST http://<host>[:port]/SetPtzConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The PTZ protocol configuration for specific channel should be included in the entity of "GetPtzConfig" message. The whole "ptzSettings" element in the "GetPtzConfig" should be included in entity of this message. Any attributes for the "ptzSettings" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

## 4.2 PTZ Control

### 4.2.1 PtzControl

PtzControl	
Description	To start control PTZ for a specific channel of the IP media device.
Typical URL	POST http://<host>[:port]/PtzControl[/channelId]</action_name>
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	<p>Up: to move up</p> <p>Down: to move down</p> <p>Left: to move left</p> <p>Right: to move right</p> <p>LeftUp: to move left and up</p> <p>LeftDown: to move left and down</p> <p>RightUp: to move right and up</p> <p>RightDown: to move right and down</p> <p>Near: to focus near</p> <p>Far: to focus far</p> <p>ZoomIn: to zoom in</p> <p>ZoomOut: to zoom out</p> <p>IrisOpen: to open the iris</p> <p>IrisClose: to close the iris</p> <p>Stop: to stop current action</p>
Entity Data	The PTZ's action information that needs to be executed will be included in the entity of the request message. For example:

#### PtzControl

```
<?xml version="1.0" encoding="utf-8" ?>
<actionInfo version="1.0" xmlns="http://www.ipc.com/ver10">
<speed>4</speed>
</actionInfo>
```

##### [Tips]:

The value of "speed" should be in the scope of the corresponding capability announced in the "PtzGetCaps" successful respond message.

Successful Response

The standard successful result response that described in 1.3.5.

### 4.2.2 PtzGotoPreset

#### PtzGotoPreset

Description	To run the PTZ to one preset for a specific channel of the IP media device.
Typical URL	POST http://<host>[:port]/PtzGotoPreset[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The "id" element will be included in the entity of the request message. For example:

```
<?xml version="1.0" encoding="utf-8" ?>
<presetInfo version="1.0" xmlns="http://www.ipc.com/ver10">
<id>2</id>
</presetInfo>
```

Successful Response

The standard successful result response that described in 1.3.5.

### 4.2.3 PtzRunCruise

#### PtzRunCruise

Description	To run one PTZ's cruise for a specific channel of the IP media device.
-------------	--

<b>PtzRunCruise</b>	
Typical URL	POST http://<host>[:port]/PtzRunCruise[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The PTZ "id" element that needs to be run will be included in the entity of the request message. For example:
	<pre>&lt;?xml version="1.0" encoding="utf-8" ?&gt; &lt;cruiseInfo version="1.0" xmlns="http://www.ipc.com/ver10"&gt; &lt;id&gt;1&lt;/id&gt; &lt;/cruiseInfo&gt;</pre>
Successful Response	The standard successful result response that described in 1.3.5.

#### 4.2.4 PtzStopCruise

<b>PtzStopCruise</b>	
Description	To stop the PTZ cruise for a specific channel of the IP media device.
Typical URL	POST http://<host>[:port]/PtzStopCruise[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The standard successful result response that described in 1.3.5.

### 4.3 Preset

#### 4.3.1 PtzGetPresets

PtzGetPresets
---------------

PtzGetPresets	
Description	To get the IP media device's PTZ presets list for specific channel.
Typical URL	POST or GET http://<host>[:port]/PtzGetPresets[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The PTZ presets list will be included in the entity of the Successful response. For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.0" xmlns="http://www.ipc.com/ver10"&gt; &lt;presetInfo type="list" maxCount="360"&gt; &lt;itemType type="string" maxLen="10"&gt;&lt;/itemType&gt; &lt;item id="1"&gt;&lt;![CDATA[DDD]]&gt;&lt;/item&gt; &lt;/presetInfo&gt; &lt;/config&gt;</pre>	
<p>[Tips]:</p> <p>The "id" attribute for each item starts from "1".</p>	

### 4.3.2 PtzAddPreset

PtzAddPreset	
Description	To add one preset for a specific channel of the IP media device.
Typical URL	POST http://<host>[:port]/PtzAddPreset[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None

#### PtzAddPreset

Entity Data	The PTZ preset name for current position will be included in the entity of the request message. The "name" should accord with the "name" type in the "itemType" that announced in "PtzGetPresets" message. For example:
-------------	---

```
<?xml version="1.0" encoding="utf-8" ?>
<presetInfo version="1.0" xmlns="http://www.ipc.com/ver10">
<name><![CDATA[dd]]></name>
</presetInfo>
```

Successful Response	The standard successful result response that described in 1.3.5.
---------------------	--

#### 4.3.3 PtzModifyPresetName

##### PtzModifyPresetName

Description	To modify one preset's name for a specific channel of the IP media device.
-------------	--

Typical URL	POST http://<host>[:port]/PtzModifyPresetName[/channelId]
-------------	---

Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
------------	--

Action name	None
-------------	------

Entity Data	The PTZ preset's ID and new name will be included in the entity of the request message. For example:
-------------	--

```
<?xml version="1.0" encoding="utf-8" ?>
<presetInfo version="1.0" xmlns="http://www.ipc.com/ver10">
<id>1</id>
<name><![CDATA[aa1]]></name>
</presetInfo>
```

Successful Response	The standard successful result response that described in 1.3.5.
---------------------	--

#### 4.3.4 PtzDeletePreset

##### PtzDeletePreset

<b>PtzDeletePreset</b>	
Description	To delete one preset for a specific channel of the IP media device.
Typical URL	POST http://<host>[:port]/PtzDeletePreset[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The PTZ preset's ID that needs to be deleted will be included in the entity of the request message. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8" ?&gt; &lt;presetInfo version="1.0" xmlns="http://www.ipc.com/ver10"&gt; &lt;id&gt;1&lt;/id&gt; &lt;/presetInfo&gt;</pre>	
Successful Response	The standard successful result response that described in 1.3.5.

#### 4.3.5 PtzModifyPresetPosition

<b>PtzModifyPresePosition</b>	
Description	To modify one preset's position to current position for a specific channel of the IP media device.
Typical URL	POST http://<host>[:port]/PtzModifyPresetPosition[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The PTZ preset's ID that needs to be modified to current position will be included in the entity of the request message. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8" ?&gt; &lt;presetInfo version="1.0" xmlns="http://www.ipc.com/ver10"&gt; &lt;id&gt;3&lt;/id&gt; &lt;/presetInfo&gt;</pre>	
Successful Response	The standard successful result response that described in 1.3.5.

## 4.4 Cruise

### 4.4.1 PtzGetCruises

PtzGetCruises	
Description	To get the IP media device's PTZ cruises list for specific channel.
Typical URL	POST or GET http://<host>[:port]/PtzGetCruises[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The PTZ cruises list will be included in the entity of the Successful response. For example:
<?xml version="1.0" encoding="UTF-8"?> <config version="1.0" xmlns="http://www.ipc.com/ver10"> <cruiseInfo type="list" maxCount="8"> <itemType type="string" maxLen="31"></itemType> <item id="1"><![CDATA[SSS]]></item> </cruiseInfo> </config>	
<b>[Tips]:</b> The "id" attribute for each item starts from "1".	

### 4.4.2 PtzGetCruise

PtzGetCruise	
Description	To get one cruise configuration of the IP media device's specific channel.
Typical URL	POST http://<host>[:port]/PtzGetCruise[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.

<b>PtzGetCruise</b>	
Action name	None
Entity Data	The PTZ cruise's ID that needs to be queried will be included in the entity of the request message. For example:
	<?xml version="1.0" encoding="utf-8" ?> <cruiseInfo version="1.0" xmlns="http://www.ipc.com/ver10"> <id>1</id> </cruiseInfo>
Successful Response	The PTZ cruise's information will be included in the entity of the Successful response. For example:

#### PtzGetCruise

```
<?xml version="1.0" encoding="UTF-8"?>
<cruiseInfo>
    <id type="uint32">1</id>
    <name type="string" maxLen="31">
        <![CDATA[SSS]]>
    </name>
    <presetInfo type="list" maxCount="16">
        <itemType>
            <name type="string" maxLen="11"/>
            <speed type="uint32" min="1" max="8"/>
            <holdTime type="uint32" min="5" max="240"/>
        </itemType>
        <item id="1">
            <name>
                <![CDATA[DDD]]>
            </name>
            <speed>5</speed>
            <holdTime>5</holdTime>
        </item>
    </presetInfo>
</cruiseInfo>
```

[Tips]:

The "id" attribute for each item starts from "1".

#### 4.4.3 PtzAddCruise

PtzAddCruise	
Description	To add one cruise for a specific channel of the IP media device.
Typical URL	POST http://<host>[:port]/PtzAddCruise[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.

<b>PtzAddCruise</b>	
Action name	None
Entity Data	The PTZ cruise configuration for specific channel should be included in the entity of request message. The whole "cruiseInfo" element in the "GetPtzCruise" should be included in entity of this message. Any attributes for the "cruiseInfo" element or sub elements should not be included. For example:
<pre>&lt;?xml version="1.0"?&gt; &lt;cruiseInfo version="1.0"   xmlns="http://www.ipc.com/ver10"&gt;   &lt;name type="string"&gt;     &lt;![CDATA[c2]]&gt;   &lt;/name&gt;   &lt;presetInfo&gt;     &lt;item id="2"&gt;       &lt;speed&gt;5&lt;/speed&gt;       &lt;holdTime&gt;5&lt;/holdTime&gt;     &lt;/item&gt;     ...   &lt;/presetInfo&gt; &lt;/cruiseInfo&gt;</pre>	
<p>[Tips]:</p> <p>The "id" attribute for each item starts from "1".</p>	
Successful Response	The standard successful result response that described in 1.3.5.

#### 4.4.4 PtzModifyCruise

<b>PtzModifyCruise</b>	
Description	To modify one cruise information of the IP media device's specific channel.
Typical URL	POST http://<host>[:port]/PtzModifyCruise[/channelId]

<b>PtzModifyCruise</b>	
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The PTZ cruise configuration for specific channel should be included in the entity of request message. The whole "cruiseInfo" element in the "GetPtzCruise" should be included in entity of this message. Any attributes for the "cruiseInfo" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

#### 4.4.5 PtzDeleteCruise

<b>PtzDeleteCruise</b>	
Description	To delete one cruise of the IP media device's specific channel.
Typical URL	POST http://<host>[:port]/PtzDeleteCruise[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The PTZ cruise's ID that needs to be deleted will be included in the entity of the request message. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8" ?&gt; &lt;cruiseInfo version="1.0" xmlns="http://www.ipc.com/ver10"&gt; &lt;id&gt;2&lt;/id&gt; &lt;/cruiseInfo&gt;</pre>	
Successful Response	The standard successful result response that described in 1.3.5.

# 5

## Alarm commands

### 5.1 Motion Detection

#### 5.1.1 GetMotionConfig

GetMotionConfig	
Description	To get the IP media device's motion configuration for specific channel.
Typical URL	POST or GET http://<host>[:port]/GetMotionConfig [/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The motion configuration information will be included in the entity of the Successful response. For example:

## GetMotionConfig

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
  xmlns="http://www.ipc.com/ver10">
  <motion>
    <switch type="boolean">false</switch>
    <sensitivity type="int32" min="0" max="8">4</sensitivity>
    <alarmHoldTime type="uint32">20</alarmHoldTime>
    <area type="list" count="18">
      <itemType type="string" minLen="22" maxLen="22"></itemType>
      <item>
        <![CDATA[111111111111111111111111]]>
      </item>
      <item>
        <![CDATA[111111111111111111111111]]>
      </item>
    </area>
  </motion>
</config>
```

## GetMotionConfig

### **GetMotionConfig**

```
<![CDATA[111111111111111111111111]>  
</item>  
</area>  
<triggerAlarmOut type="list" count="1">  
  <itemType type="boolean"></itemType>  
  <item id="1">false</item>  
</triggerAlarmOut>  
</motion>  
</config>
```

[Tips]:

1. There are 18 sub items in the "area" element, each item is a string with fixed length 22. This means a 22x18 motion detection areas, if corresponding character is "1", the switch for this detection area is on.
2. The "id" attribute for each item starts from "1".

### **5.1.2 SetMotionConfig**

<b>SetMotionConfig</b>	
Description	To set the IP media device's motion configuration for specific channel.
Typical URL	POST http://<host>[:port]/SetMotionConfig [/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The motion detection configuration for specific channel should be included in the entity of request message. The whole "motion" element in the "GetMotionConfig" should be included in entity of this message. Any attributes for the "motion" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

## 5.2 Alarm

### 5.2.1 GetAlarmInConfig

GetAlarmInConfig	
Description	To get the IP media device's alarm input configuration for specific alarm input channel.
Typical URL	POST or GET http://<host>[:port]/GetAlarmInConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1
Action name	None
Entity Data	None
Successful Response	The alarm inputs configuration will be included in the entity of the Successful response. For example:
<?xml version="1.0" encoding="UTF-8"?> <config version="1.0" xmlns="http://www.ipc.com/ver10"> <types> <alarmInVoltage> <enum>NO</enum> <enum>NC</enum> </alarmInVoltage> </types> <sensor> <id type="uint32">1</id> <sensorName type="string" maxLen="11"> <![CDATA[Sensor1]]> </sensorName> <switch type="boolean">true</switch> <voltage type="alarmInVoltage">NO</voltage> <alarmHoldTime type="uint32">10</alarmHoldTime> <triggerAlarmOut type="list" count="1">	

#### **GetAlarmInConfig**

```
<itemTypetype="boolean">  
</itemType>  
<item id="1">true</item>  
</triggerAlarmOut>  
</sensor>  
</config>
```

[Tips]:

The "id" attribute for each item starts from "1".

### **5.2.2 SetAlarmInConfig**

<b>SetAlarmInConfig</b>	
Description	To set the IP media device's alarm inputs configuration for specific alarm input channel.
Typical URL	POST http://<host>[:port]/SetAlarmInConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The alarm input configuration for specific channel should be included in the entity of request message. The whole "sensor" element in the "GetAlarmInConfig" should be included in entity of this message. Any attributes for the "sensor" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

### **5.2.3 ManualAlarmOut**

<b>ManualAlarmOut</b>	
Description	To manually set the IP media device's alarm output status for specific alarm output channel.
Typical URL	POST http://<host>[:port]/ManualAlarmOut[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.

<b>ManualAlarmOut</b>	
Action name	None
Entity Data	The new status for the specific alarm output will be included in the entity of request message. For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.0"     xmlns="http://www.ipc.com/ver10"&gt;     &lt;action&gt;         &lt;status&gt;true&lt;/status&gt;     &lt;/action&gt; &lt;/config&gt;</pre>	
<p>[Tips]:</p> <p>The "status" element is Boolean type.</p>	
Successful Response	The standard successful result response that described in 1.3.5.

## 5.2.4 GetAlarmOutConfig

<b>GetAlarmOutConfig</b>	
Description	To get the IP media device's alarm output configuration for specific alarm output channel.
Typical URL	POST or GET http://<host>[:port]/GetAlarmOutConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The specific alarm output configuration will be included in the entity of the Successful response. For example:

#### **GetAlarmOutConfig**

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
    xmlns="http://www.ipc.com/ver10">
    <alarmOut>
        <id type="uint32">1</id>
        <manualSwitch type="boolean">false</manualSwitch>
        <alarmOutName type="string" maxLen="11">
            <![CDATA[alarmOut1]]>
        </alarmOutName>
        <alarmHoldTime type="uint32">20</alarmHoldTime>
    </alarmOut>
</config>
```

#### **5.2.5 SetAlarmOutConfig**

<b>SetAlarmOutConfig</b>	
Description	To set the IP media device's alarm output configuration for specific alarm output channel.
Typical URL	POST http://<host>[:port]/SetAlarmOutConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The alarm output configuration for specific channel should be included in the entity of request message. The whole "alarmOut" element in the "GetAlarmOutConfig" should be included in entity of this message. Any attributes for the "alarmOut" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

## 5.2.6 AlarmOutputControl

AlarmOutputControl	
Description	To manually set the IP media device's alarm output status for specific alarm output channel.
Typical URL	POST http://<host>[:port]/AlarmOutputControl[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The new status for the specific alarm output will be included in the entity of request message. For example:
<?xml version="1.0" encoding="UTF-8"?> <config version="1.0" xmlns="http://www.ipc.com/ver10"> <types> <alarmType> <enum>io</enum> <enum>flashingLight</enum> <enum>audioAlarm</enum> </alarmType> </types> <switch type="boolean" id="0">true</switch> <alarmOutputType type="alarmType">io</alarmOutputType> </config>	
<b>[Tips]:</b> 1.A new alarm output control interface is added to control the general alarm output items. 2.The io node represents control relay output; 3.The flashingLight node indicates the control of flashing alarm; 4.AudioAlarm node indicates control sound alarm; 5.The attribute id in the switch node indicates the number of the corresponding control item.	
Successful Response	The standard successful result response that described in 1.3.5.

---

## 5.3 AlarmStatus

### 5.3.1 GetAlarmStatus

GetAlarmStatus	
Description	To get the IP media device's alarm trigger status.
Typical URL	POST or GET http://<host>[:port]/GetAlarmStatus
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The alarm trigger status information will be included in the entity of the Successful response. For example:

## GetAlarmStatus

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0" xmlns="http://www.ipc.com/ver10">
    <alarmStatusInfo>
        <motionAlarm type="boolean" id="1">false</motionAlarm>
        <motionAlarm type="boolean" id="2">true</motionAlarm>
        <motionAlarm type="boolean" id="3">false</motionAlarm>
        <motionAlarm type="boolean" id="4">false</motionAlarm>
        <sensorAlarmIn type="list" count="4">
            <itemType type="boolean"/>
            <item id="1">false</item>
            <item id="2">false</item>
            <item id="3">false</item>
            <item id="4">false</item>
        </sensorAlarmIn>
        <perimeterAlarm type="boolean">false</perimeterAlarm>
        <tripwireAlarm type="boolean">false</tripwireAlarm>
        <cpcAlarm type="boolean">false</cpcAlarm>
        <oscAlarm type="boolean">false</oscAlarm>
        <cddAlarm type="boolean">false</cddAlarm>
        <ipdAlarm type="boolean">false</ipdAlarm>
        <vfdAlarm type="boolean">false</vfdAlarm>
        <avdAlarm type="boolean">false</avdAlarm>
        <vehicleAlarm type="boolean" id="1">false</vehicleAlarm>
        <aoiEntryAlarm type="boolean" id="1">false</aoiEntryAlarm>
        <aoiLeaveAlarm type="boolean" id="1">false</aoiLeaveAlarm>
        <passlineAlarm type="boolean" id="1">false</passlineAlarm>
        <trafficAlarm type="boolean" id="1">false</trafficAlarm>
        <pvdAlarm type="boolean" id="1">false</pvdAlarm>
        <loiteringAlarm type="boolean" id="1">false</loiteringAlarm>
        <asdAlarm type="boolean" id="1">false</asdAlarm>
    </alarmStatusInfo>
</config>
```

#### **GetAlarmStatus**

```
</alarmStatusInfo>  
</config>
```

##### **[Tips]:**

The "id" attribute for each item starts from "1".

The "id" attribute for sensorAlarm's child item is the NO. of the sensors. And the sensor on the IPC who is the first channel will be 5 if there are 4 sensors on the NVR.

### **5.3.2 GetAlarmServerConfig**

<b>GetAlarmServerConfig</b>	
Description	To get the alarm server configuration Only IPC is supported
Typical URL	POST or GET http://<host>[:port]/GetAlarmServerConfig
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The alarm server configuration will be included in the entity of the Successful response. For example:

---

## GetAlarmServerConfig

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.7"
  xmlns="http://www.ipc.com/ver10">
  <alarmServer>
    <serverAddr type="string">
      <![CDATA[]]>
    </serverAddr>
    <serverPort type="uint16" min="1" max="65535">8010</serverPort>
    <enableHeartbeat type="boolean">false</enableHeartbeat>
    <heartbeatInterval type="uint16" min="10" max="1800">30</heartbeatInterval>
  </alarmServer>
</config>
```

## GetAlarmServerConfig

[Tips]:

- 1.The "heartbeatInterval" is in second.
- 2.The data sent to the server when the alarm is issued is as follows:

```
<config version="1.0" xmlns="http://www.ipc.com/ver10">

    <alarmStatusInfo>
        <motionAlarm type="boolean" id="1">true</motionAlarm>
    </alarmStatusInfo>

    <dateTime><![CDATA[2017-06-20 10:30:21]]></dateTime>

    <DeviceInfo>
        <deviceName><![CDATA[Device Name]]></deviceName>
        <deviceNo.><![CDATA[1]]></deviceNo.>
        <sn><![CDATA[N563F0159MNK]]></sn>
        <ipAddress><![CDATA[192.168.3.100]]></ipAddress>
        <macAddress><![CDATA[78-24-AF-44-89-01]]></macAddress>
    </DeviceInfo>
</config>
```

- 3.The heartbeat data send to server is as follows:

```
<config version="1.0" xmlns="http://www.ipc.com/ver10">

    <DeviceInfo>
        <deviceName><![CDATA[Device Name]]></deviceName>
        <deviceNo.><![CDATA[1]]></deviceNo.>
        <sn><![CDATA[N563F0159MNK]]></sn>
        <ipAddress><![CDATA[192.168.3.100]]></ipAddress>
        <macAddress><![CDATA[78-24-AF-44-89-01]]></macAddress>
    </DeviceInfo>
</config>
```

### 5.3.3 SetAlarmServerConfig

SetAlarmServerConfig	
Description	To set the alarm server configuration. Only IPC is supported.
Typical URL	POST http://<host>[:port]/SetAlarmServerConfig
Channel ID	None
Action name	None
Entity Data	The alarm server configuration should be included in the entity of request message. The whole "alarmServer" element in the "GetAlarmServerConfig" should be included in entity of this message. Any attributes for the "alarmServer" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

### 5.3.4 SendAlarmStatus

SendAlarmStatus	
Description	To send the alarm status to the alarm server when an alarm happens. This command will be used by the device. The alarm server should provide HTTP service to receive this command. Only IPC is supported.
Typical URL	POST http://<alarm server>[:port]/SendAlarmStatus
Channel ID	None
Action name	None
Entity Data	The alarm status should be included in the entity of request message. The whole "alarmStatusInfo" element in the response for "GetAlarmStatus" should be included in entity of this message.
Successful Response	None

## 5.4 AlarmTrigger

### 5.4.1 GetAlarmTriggerConfig

GetAlarmTriggerConfig	
Description	To get the IP media device's alarm trigger configuration. Only IPC is supported.
Typical URL	POST or GET <code>http://&lt;host&gt;[:port]/GetAlarmTriggerConfig[/channelId]&lt;/action_name&gt;</code>
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	The action names are defined as follows:  alarmIn: trigger of alarmIn. In this scenario, the channelId is used as alarmIn ID.  motion: trigger of motion  avd: trigger of Abnormal Video Diagnosis  cdd: trigger of Crowd Density Detection  cpc: trigger of Cross-line People Counting  ipd: trigger of Intruding People Detection  tripwire: trigger of Tripwire Detection  osc: trigger of Object Status Change  perimeter: trigger of Perimeter Environment Assurance  vfd: trigger of Video Face Detection  vehicle:trigger of Video vehilce Detection  aoientry: trigger of Aoi Entry Detection  aoileave: trigger of Aoi Leave Detection  passlinecount: trigger of Target Counting by Line Detection  traffic:trigger of Target Counting by Area Detection  heatMap:trigger of Heat Map Detection  Thermal:trigger of Thermal imaging temperature measurement  vsd:trigger of Video Metadata Detection  asd:trigger of Audio Abnormal Detection  pvd:trigger of Illegal Parking Detection

	loitering:trigger of Loitering Detection
Entity Data	None
Successful Response	The alarm trigger configuration will be included in the entity of the successful response. For example:
<pre> &lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;triggerConfig&gt;         &lt;snap type="list" maxCount="1" count="1"&gt;             &lt;item&gt;                 &lt;channelId type="uint32"&gt;1&lt;/channelId&gt;                 &lt;switch type="boolean"&gt;true&lt;/switch&gt;             &lt;/item&gt;         &lt;/snap&gt;         &lt;record type="list" maxCount="1" count="1"&gt;             &lt;item&gt;                 &lt;channelId type="uint32"&gt;1&lt;/channelId&gt;                 &lt;switch type="boolean"&gt;true&lt;/switch&gt;             &lt;/item&gt;         &lt;/record&gt;         &lt;triggerAlarmOut&gt;             &lt;alarmOutList type="list" maxCount="1" count="1"&gt;                 &lt;item&gt;                     &lt;alarmOutId type="uint32"&gt;1&lt;/alarmOutId&gt;                 &lt;/item&gt;             &lt;/alarmOutList&gt;         &lt;/triggerAlarmOut&gt;         &lt;audiotype="list" maxCount="1" count="1"&gt;             &lt;item&gt;                 &lt;switch type="boolean"&gt;true&lt;/switch&gt;             &lt;/item&gt;         &lt;/audio&gt;     &lt;/triggerConfig&gt; &lt;/config&gt;</pre>	

```

<whiteLight type="list" maxCount="1" count="1">
    <item>
        <switch type="boolean">true</switch>
    </item>
</whiteLight>
</triggerConfig>
</config>

```

[Tips]:

## 5.4.2 SetAlarmTriggerConfig

SetAlarmTriggerConfig	
Description	To set the IP media device's alarm trigger configuration. Only IPC is supported.
Typical URL	POST <code>http://&lt;host&gt;[:port]/SetAlarmTriggerConfig[/channelId]&lt;/action_name&gt;</code>
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	The same as "GetAlarmTriggerConfig".
Entity Data	The whole "triggerConfig" elements in the "GetAlarmTriggerConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 5.5 Sound-Light Alarm

### 5.5.1 GetAudioAlarmOutConfig

## GetAudioAlarmOutConfig

Description	To get the IP media device's audio alarm configuration. Only IPC is supported.
Typical URL	POST or GET http://<host>[:port]/GetAudioAlarmOutConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1
Action name	None
Entity Data	None
Successful Response	For example:  <?xml version="1.0" encoding="UTF-8"?> <config version="1.7" xmlns="http://www.ipc.com/ver10"> <types> <audioAlarmType> <enum value="Warning area, leave as soon as possible">1</enum> <enum value="Dangerous area, please do not approach">2</enum> <enum value="No parking in this area">3</enum> <enum value="You have entered the real-time monitoring area">4</enum> <enum value="Hello, welcome">5</enum> <enum value="Do not touch valuables">6</enum> <enum value="Private area, no entry">7</enum> <enum value="Danger of water depth, pay attention to safety">8</enum> <enum value="High altitude, don't climb">9</enum> <enum value="Howling alarm sound">10</enum> <enum value="Non-motor vehicles are not allowed to enter the elevator">11</enum> <enum value="Abnormal temperature alarm">23</enum> </audioAlarmType> <audioLanguageType> <enum>zh-cn</enum> <enum>it-it</enum> <enum>en-us</enum> </audioLanguageType> </types> </config>

```
<enum>customize</enum>

</audioLanguageType>
</types>

<audioParamLimit>

    <audioFormat type="read-only">WAV</audioFormat>
    <sampleRate type="read-only">8000HZ</sampleRate>
    <audioChannel type="read-only">Monophonic</audioChannel>
    <audioDepth type="read-only">16bit</audioDepth>
    <audioFileSize type="read-only">less than 200K</audioFileSize>
    <audioMaxlen type="read-only">307200</audioMaxlen>

</audioParamLimit>

<audioAlarmOut>

    <switch type="boolean">true</switch>
    <manualSwitch type="boolean">false</manualSwitch>
    <audioType type="audioAlarmType">10</audioType>
    <alarmTimes type="uint32" min="1" max="50" default="5">5</alarmTimes>
    <audioVolume type="uint32" min="0" max="100" default="100">100</audioVolume>
    <languageType type="audioLanguageType">en-us</languageType>
    <customize type="list" maxCount="10" count="10">

        <item>
            <id type="uint32">100</id>
            <audioName type="string" maxLen="128">
                <![CDATA[]]>
            </audioName>
        </item>
        <item>
            <id type="uint32">101</id>
            <audioName type="string" maxLen="128">
                <![CDATA[]]>
            </audioName>
        </item>
        <item>
```

```
<id type="uint32">102</id>
<audioName type="string" maxLen="128">
    <![CDATA[]]>
</audioName>
</item>
<item>
    <id type="uint32">103</id>
    <audioName type="string" maxLen="128">
        <![CDATA[]]>
    </audioName>
</item>
<item>
    <id type="uint32">104</id>
    <audioName type="string" maxLen="128">
        <![CDATA[]]>
    </audioName>
</item>
<item>
    <id type="uint32">105</id>
    <audioName type="string" maxLen="128">
        <![CDATA[]]>
    </audioName>
</item>
<item>
    <id type="uint32">106</id>
    <audioName type="string" maxLen="128">
        <![CDATA[]]>
    </audioName>
</item>
<item>
    <id type="uint32">107</id>
    <audioName type="string" maxLen="128">
```

```

<![CDATA[]]>
</audioName>
</item>
<item>
<id type="uint32">108</id>
<audioName type="string" maxLen="128">
<![CDATA[]]>
</audioName>
</item>
<item>
<id type="uint32">109</id>
<audioName type="string" maxLen="128">
<![CDATA[]]>
</audioName>
</item>
</customize>
</audioAlarmOut>
</config>

```

[Tips]:

- 1.audioAlarmType Add custom audio file display in the enumeration.
- 2.audioLanguageType Add custom options to the enumeration.
- 3.The message body adds a customize node, and currently supports up to 10 custom files.
- 4.The client-side of the "manualSwitch" node sends true to the IPC to indicate that the voice alarm is manually turned on once; Send false to IPC to indicate that the audible alarm is closed manually; When this node information is not carried, it means that relevant content is not operated.

## 5.5.2 SetAudioAlarmOutConfig

SetAudioAlarmOutConfig	
Description	To set the IP media device's audio alarm configuration. Only IPC is supported.
Typical URL	POST http://<host>[:port]/SetAudioAlarmOutConfig[/channelId]

Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "audioAlarmOut" elements in the "GetAudioAlarmOutConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	
1.The audioOutput enumeration adds a new value AUTO to select the output content of the audio cable or speaker.	
2.AUTO means that the intercom audio or alarm sound will be automatically selected, and the priority of the intercom audio output is higher than the alarm sound.	

### 5.5.3 AddCustomizeAudioAlarm

AddCustomizeAudioAlarm	
Description	Add custom alarm audio Only IPC is supported.
Typical URL	POST or GET http://<host>[:port]/AddCustomizeAudioAlarm[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1
Action name	None
Entity Data	For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.7"&gt;     xmlns="http://www.ipc.com/ver10"&gt;         &lt;addAudioAlarm&gt;             &lt;audioName type="string" maxLen="128"&gt;                 &lt;![CDATA[welcome]]&gt;             &lt;/audioName&gt;</pre>	

```

<audioFileSize type="uint32" maxLen="102400" >123</audioFileSize>
<audioFileData type="string" maxLen="102400">
    <![CDATA[....base64encodeData...]]>
</audioFileData>
</addAudioAlarm>
</config>

```

Successful Response	For example:
---------------------	--------------

```

<?xml version="1.0" encoding="UTF-8"?>
<config
    xmlns="http://www.ipc.com/ver10" version="1.7">
    <addAudioAlarm>
        <id type="uint32">101</id>
    </addAudioAlarm>
</config>

```

[Tips]:

1.errorCode describe:

- 101:Not working .
- 102:Parameter error.
- 103:wav audio content is not in PCM format
- 104:Audio file is not WAV.
- 105:Sampling rate is not 8000HZ.
- 106:Failed to save audio file.
- 107:Exceeded the maximum number of custom 10 files.
- 108:The audio file size exceeds the limit.

2.audioFileData Data encrypted for base64.

3.audioFileSize Is the encrypted file size.

## 5.5.4 DeleteCustomizeAudioAlarm

DeleteCustomizeAudioAlarm
---------------------------

Description	Delete custom alarm audio Only IPC is supported.
Typical URL	POST or GET http://<host>[:port]/DeleteCustomizeAudioAlarm[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1
Action name	None
Entity Data	For example:  <?xml version="1.0" encoding="utf-8" ?> <config> <deleteAudioAlarm> <id type="uint32">101</id> </deleteAudioAlarm> </config>
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	
1.errorCode describe: -109:The deleted audio file does not exist. 2.id is added to return or GetAudioAlarmOutConfig returns to a custom node.	

## 5.5.5 AuditionCustomizeAudioAlarm

AuditionCustomizeAudioAlarm	
Description	Play customized alarm audiolay customized alarm audio Only IPC is supported.
Typical URL	POST or GET http://<host>[:port]/AuditionCustomizeAudioAlarm[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1
Action name	None

Entity Data	For example:
	<pre>&lt;?xml version="1.0" encoding="utf-8" ?&gt; &lt;config&gt;     &lt;auditionAudioAlarm&gt;         &lt;audioType type="audioAlarmType"&gt;100&lt;/audioType&gt;     &lt;/auditionAudioAlarm&gt; &lt;/config&gt;</pre>
Successful Response	The standard successful result response that described in 1.3.5.
<p>[Tips]:</p> <p>errorCode description :</p> <p>-110:Alerting, can't audition</p>	

## 5.5.6 GetWhiteLightAlarmOutConfig

GetWhiteLightAlarmOutConfig	
Description	To get the configuration of light alarm  Only IPC is supported.
Typical URL	POST or GET http://<host>[:port]/GetWhiteLightAlarmOutConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1
Action name	None
Entity Data	None
Successful Response	For example:
	<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.7" xmlns="http://www.ipc.com/ver10"&gt;     &lt;types&gt;         &lt;lightFrequency&gt;             &lt;enum&gt;low&lt;/enum&gt;             &lt;enum&gt;medium&lt;/enum&gt;</pre>

```

<enum>high</enum>
</lightFrequency>
</types>
<whiteLightAlarmOut>
<switch type="boolean">false</switch>
<manualSwitch type="boolean">false</manualSwitch>
<durationTime type="uint32" min="1" max="60" default="20">20</durationTime>
<frequency type="lightFrequency">low</frequency>
</whiteLightAlarmOut>
</config>

```

[Tips]:

The client-side of the manualSwitch node sends true to the IPC to indicate that the flash alarm is turned on manually; Send false to IPC to indicate that the flash alarm is manually turned off; When this node information is not carried, it means that relevant content is not operated.

### 5.5.7 SetWhiteLightAlarmOutConfig

SetWhiteLightAlarmOutConfig	
Description	To set the configuration of light alarm Only IPC is supported.
Typical URL	POST http://<host>[:port]/SetWhiteLightAlarmOutConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1
Action name	None
Entity Data	None
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 5.6 Alarm PIR

### 5.6.1 GetPirConfig

GetPirConfig	
Description	To get the IP media device's PIR configuration for specific channel. Only IPC is supported.
Typical URL	POST or GET http://<host>[:port]/GetPirConfig [/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The PIR configuration information will be included in the entity of the Successful response. For example:
<?xml version="1.0" encoding="UTF-8"?> <config version="1.7"> xmlns="http://www.ipc.com/ver10"> <pir> <switch type="boolean">true</switch> <alarmHoldTime type="uint32">20</alarmHoldTime> <triggerAlarmOut type="list" count="1"> <itemType type="boolean"/> <item id="1">false</item> </triggerAlarmOut> <mail type="list" count="0"> <switch type="boolean">false</switch> <subject type="string" maxLen="63"> <![CDATA[]]> </subject> <content type="string" maxLen="255"> <![CDATA[]]> </mail> </pir> </config>	

### GetPirConfig

```
</content>
</mail>
<ftp type="list" count="0">
    <switch type="boolean">false</switch>
</ftp>
<savePicSwitch type="boolean">false</savePicSwitch>
<sdRecSwitch type="boolean">false</sdRecSwitch>
<sendPush>
    <pushSwitch type="boolean">false</pushSwitch>
    <recordSwitch type="boolean">false</recordSwitch>
    <recordStreamIndex type="uint8">0</recordStreamIndex>
    <sendPicSwitch type="boolean">false</sendPicSwitch>
    <recordTime type="uint32">0</recordTime>
    <pushContent type="string" maxLen="127">
        <![CDATA[]]>
    </pushContent>
</sendPush>
</pir>
</config>
```

[Tips]:

### 5.6.2 SetPirConfig

SetPirConfig	
Description	To set the IP media device's PIR configuration for specific channel. Only IPC is supported.
Typical URL	POST http://<host>[:port]/SetPirConfig [/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None

SetPirConfig	
Entity Data	The motion detection configuration for specific channel should be included in the entity of request message. The whole "pir" element in the "GetPirConfig" should be included in entity of this message. Any attributes for the "pir" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

# 6 Playback

## 6.1 Record Search

### 6.1.1 GetRecordType

GetRecordType	
Description	To get record types.
Typical URL	POST or GET http://<host>[:port]/GetRecordType
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The record types will be included in the entity of the Successful response. For example:

### GetRecordType

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0" xmlns="http://www.ipc.com/ver10">
    <recTypeCaps type="list" count="6">
        <itemType type="string" maxLen="20"/>
        <item>manual</item>
        <item>schedule</item>
        <item>motion</item>
        <item>sensor</item>
        <item>intel detection</item>
        <item>nic broken</item>
    </recTypeCaps>
</config>
```

[Tips]:

It returns the capability of recording for current device.

The type "nic broken" is for IPC only.

### 6.1.2 SearchRecordDate

SearchRecordDate	
Description	To search the date list with record data for specific channel.
Typical URL	POST or GET http://<host>[:port]/SearchRecordDate[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The date list with record data will be included in the entity of the successful response. For example:

#### SearchRecordDate

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
    xmlns="http://www.ipc.com/ver10">
    <dateList type="list" count="6">
        <itemType type="string"/>
        <item>2014-01-09</item>
        <item>2014-02-09</item>
        <item>2014-03-08</item>
        <item>2014-04-02</item>
        <item>2014-04-03</item>
        <item>2014-04-04</item>
    </dateList>
</config>
```

### 6.1.3 SearchByTime

SearchByTime	
Description	To search record data segments for the specific channel by time.
Typical URL	POST or GET http://<host>[:port]/SearchByTime[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The start time and end time should be included in the entity of the request message as search condition. For example:

## SearchByTime

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0" xmlns="http://www.ipc.com/ver10">
    <search>
        <recTypes type="list">
            <itemType type="recType"></itemType>
            <item>manual</item>
            <item>schedule</item>
            <item>motion</item>
            <item>sensor</item>
            <item>intel detection</item>
            <item>nic broken</item>
        </recTypes>
        <starttime type="string"><![CDATA[2017-06-30 00:00:00]]></starttime>
        <endtime type="string"><![CDATA[2017-06-30 23:59:59]]></endtime>
    </search>
</config>
```

Successful Response	The searched record data segments will be included in the entity of the successful response. For example:
---------------------	---

## SearchByTime

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
    xmlns="http://www.ipc.com/ver10">
    <timesectionList type="list" count="2">
        <item>
            <starttime type="string" seconds="827" recType="schedule">
                <![CDATA[2017-06-30 07:39:36]]>
            </starttime>
        </item>
        <item>
            <starttime type="string" seconds="533" recType="schedule">
                <![CDATA[2017-06-30 07:54:03]]>
            </starttime>
        </item>
    </timesectionList>
</config>
```

### [Tips]:

1.The list count of "timesectionList" node is limit to 1000. Use shorter time to query when the list be limited.

2.The event type "nic broken" is for IPC only.

3.The client application can playback one specific record data segment through RTSP protocol. For example:

rtsp://<host><:rtspPort>/chID=0&date=2014-01-09&time=15:07:28&timelen=200[\[streamType=main\]](#)  
[&action=backup]

When this URL is invoked by the client application, the first record data segment searched by the device will be playback through RTSP.

"streamType" can be "main" or "sub"

The "action" can be "playback" or "backup". And the "backup" parameter will make the data transmission as soon as possible.

If none "action" parameter include in the url, default is "playback."

## 6.2 RecordStatus

### 6.2.1 GetRecordStatusInfo

GetRecordStatusInfo	
Description	To get the record status of the specific channel.
Typical URL	POST or GET http://<host>[:port]/GetRecordStatusInfo
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The record status information will be included in the entity of the Successful response. For example:

```
<?xml version="1.0" encoding="UTF-8"?>
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
    xmlns="http://www.ipc.com/ver10">
    <types>
        <recordStatusType>
            <enum>no recording</enum>
            <enum>recording</enum>
            <enum>exception</enum>
        </recordStatusType>
    </types>
    <streamType>
        <enum>main</enum>
        <enum>sub</enum>
    </streamType>
    <encodeType>
        <enum>H.264</enum>
        <enum>H.264Smart</enum>
    </encodeType>
```

## GetRecordStatusInfo

```
<enum>H.264Plus</enum>
<enum>H.265</enum>
<enum>H.265Smart</enum>
<enum>H.265Plus</enum>
</encodeType>
<bitrateType>
<enum>VBR</enum>
<enum>CBR</enum>
</bitrateType>
<audioSwitch>
<enum>on</enum>
<enum>off</enum>
</audioSwitch>
<imageQuality>
<enum>lowest</enum>
<enum>lower</enum>
<enum>low</enum>
<enum>medium</enum>
<enum>higher</enum>
<enum>highest</enum>
</imageQuality>
<recordType>
<enum>manual</enum>
<enum>schedule</enum>
<enum>motion</enum>
<enum>sensor</enum>
<enum>osc</enum>
<enum>pea</enum>
<enum>tripwire</enum>
<enum>avd</enum>
<enum>vfd</enum>
```

#### GetRecordStatusInfo

```
<enum>faceMatch</enum>
<enum>vehicle</enum>
</recordType>
<recordStatusList type="list" count="4">
    <item id="1" streamType="main" resolution="2592x1520" frameRate="30" bitrateType="VBR" imageQuality="higher" maxBitrate="3072" recordTypes="motion">recording</item>
    <item id="2" streamType="" resolution="" frameRate="" bitrateType="" imageQuality="" maxBitrate="" recordTypes="">exception</item>
    <item id="3" streamType="main" resolution="1920x1080" frameRate="30" bitrateType="VBR" imageQuality="higher" maxBitrate="" recordTypes="motion">recording</item>
    <item id="4" streamType="" resolution="" frameRate="" bitrateType="" imageQuality="" maxBitrate="" recordTypes="">no recording</item>
</recordStatusList>
</config>
```

#### [Tips]:

The "id" attribute is the channel id.

# 7

## Network commands

### 7.1 TCP/Ipv4

#### 7.1.1 GetNetBasicConfig

#### GetNetBasicConfig

---

<b>GetNetBasicConfig</b>	
Description	To get the IP media device's basic network configuration.
Typical URL	POST or GET http://<host>[:port]/GetNetBasicConfig
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The basic network configuration will be included in the entity of the Successful response. For example:

## GetNetBasicConfig

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
  xmlns="http://www.ipc.com/ver10">
  <types>
    <ipSettingMode>
      <enum>staticIp</enum>
      <enum>dhcp</enum>
    </ipSettingMode>
  </types>
  <tcpIp>
    <ipSettingMode type="ipSettingMode">staticIp</ipSettingMode>
    <staticIp type="string" minLen="7" maxLen="15">
      <![CDATA[192.168.6.36]]>
    </staticIp>
    <staticIpRoute type="string" minLen="7" maxLen="15">
      <![CDATA[192.168.6.1]]>
    </staticIpRoute>
    <staticIpMask type="string" minLen="7" maxLen="15">
      <![CDATA[255.255.255.0]]>
    </staticIpMask>
    <dnsFromDhcpSwitch type="boolean">false</dnsFromDhcpSwitch>
    <dnsServer1 type="string" minLen="7" maxLen="15">
      <![CDATA[192.168.226.1]]>
    </dnsServer1>
    <dnsServer2 type="string" minLen="7" maxLen="15">
      <![CDATA[8.8.8.8]]>
    </dnsServer2>
  </tcpIp>
</config>
```

## 7.1.2 SetNetBasicConfig

SetNetBasicConfig	
Description	To set the IP media device's basic network configuration.
Typical URL	POST http://<host>[:port]/SetNetBasicConfig
Channel ID	None
Action name	None
Entity Data	The basic network configuration should be included in the entity of request message. The whole "tcpIp" element in the "GetNetBasicConfig" should be included in entity of this message. Any attributes for the "tcpIp" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

## 7.2 PPPoE

### 7.2.1 GetNetPppoeConfig

GetNetPppoeConfig	
Description	To get the IP media device's network PPPOE configuration.
Typical URL	POST or GET http://<host>[:port]/GetNetPppoeConfig
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The network PPPOE configuration will be included in the entity of the Successful response. For example:

### GetNetPppoeConfig

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0"
    xmlns="http://www.ipc.com/ver10">
    <pppoe>
        <switch type="boolean">false</switch>
        <userName type="string" maxLen="63">
            <![CDATA[aaa]]>
        </userName>
        <password type="string" maxLen="63">
            <![CDATA[bbb]]>
        </password>
    </pppoe>
</config>
```

[Tips]:

The value of the "password" element will be none, for the reason that the "password" element is write-only.

### 7.2.2 SetNetPppoeConfig

SetNetPppoeConfig	
Description	To set the IP media device's network PPPOE configuration.
Typical URL	POST http://<host>[:port]/SetNetPppoeConfig
Channel ID	None
Action name	None
Entity Data	The network PPPOE configuration should be included in the entity of request message. The whole "pppoe" element in the "GetNetPppoeConfig" should be included in entity of this message. Any attributes for the "pppoe" element or sub elements should not be included. If the user doesn't need to change password, please omit the "password" element.
Successful Response	The standard successful result response that described in 1.3.5.

## 7.3 Port

### 7.3.1 GetPortConfig

GetPortConfig	
Description	To get the IP media device's network service ports configuration.
Typical URL	POST or GET http://<host>[:port]/GetPortConfig
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The network service ports configuration will be included in the entity of the Successful response. For example:
<?xml version="1.0" encoding="UTF-8"?> <config version="1.0"> xmlns="http://www.ipc.com/ver10"> <port> <httpPort type="uint16">80</httpPort> <netPort type="uint16">9008</netPort> <rtspPort type="uint16">554</rtspPort> </port> </config>	
[Tips]: The "httpPort" element announces the port for HTTP service. The "netPort" element announces the port for protocol service. The "rtspPort" element announces the port for RTSP service.	

### 7.3.2 SetPortConfig

SetPortConfig	
Description	To set the IP media device's network service ports configuration.
Typical URL	POST http://<host>[:port]/SetPortConfig

<b>SetPortConfig</b>	
Channel ID	None
Action name	None
Entity Data	The network service ports configuration should be included in the entity of request message. The whole "port" element in the "GetPortConfig" should be included in entity of this message. Any attributes for the "port" element or sub elements should not be included.
Successful Response	The standard successful result response that described in 1.3.5.

### 7.3.3 GetExtenalPortMappingInfo

GetExtenalPortMappingInfo	
Description	To get UPNP ports configuration
Typical URL	POST or GET http://<host>[:port]/ GetExtenalPortMappingInfo
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The record types will be included in the entity of the Successful response. For example:

## GetExternalPortMappingInfo

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0" xmlns="http://www.ipc.com/ver10">
    <types>
        <portType>
            <enum>HTTP</enum>
            <enum>HTTPS</enum>
            <enum>RTSP</enum>
            <enum>SERVICE</enum>
        </portType>
    </types>
    <ports type="list">
        <item>
            <portType type="portType">HTTP</portType>
            <externalPort type="uint32">80</externalPort>
            <externalIP type="string" maxLen="15"></externalIP>
            <localPort type="uint32">80</localPort>
        </item>
        <item>
            <portType type="portType">RTSP</portType>
            <externalPort type="uint32">554</externalPort>
            <externalIP type="string" maxLen="15"></externalIP>
            <localPort type="uint32">554</localPort>
        </item>
    </ports>
</config>
```

### [Tips]:

1. It returns the capability of recording for current device.
2. The type "nic broken" is for IPC only.

---

## 7.4 DDNS

### 7.4.1 GetDdnsConfig

GetDdnsConfig	
Description	To get the IP media device's network DDNS configuration.
Typical URL	POST or GET http://<host>[:port]/GetDdnsConfig
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The network DDNS configuration will be included in the entity of the Successful response. For example:

### GetDdnsConfig

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0" xmlns="http://www.ipc.com/ver10">
<types>
    <ddnsServerType>
        <enum requireParameters="userName,password">www.88ip.net</enum>
        <enum requireParameters="userName,password">www.dns2p.net</enum>
        <enum requireParameters="userName,password">www.meibu.com</enum>
        <enum requireParameters="userName,password,domainName">www.dyndns.com</enum>
        <enum requireParameters="userName,password,domainName">www.no-ip.com</enum>
        <enum
            requireParameters="userName,password,domainName,serverName">mintdns</enum>
        <enum
            requireParameters="userName,password,domainName">www.3322.org</enum>
    </ddnsServerType>
</types>
<ddns>
    <switch type="boolean">false</switch>
    <servertype type="ddnsServerType">www.88ip.com</servertype>
    <userName type="string" maxLen="63"><![CDATA[aaa]]></userName>
    <password type="string" maxLen="63"><![CDATA[]]></password>
    <domainName type="string" maxLen="63"><![CDATA[ipc.88ip.com]]></domainName>
    <serverName type="string" maxLen="63"><![CDATA[111]]></serverName>
</ddns>
</config>
```

[Tips]:

The value of the "password" element will be none, for the reason that the "password" element is write-only.

### 7.4.2 SetDdnsConfig

#### SetDdnsConfig

<b>SetDdnsConfig</b>	
Description	To set the IP media device's network DDNS configuration.
Typical URL	POST http://<host>[:port]/SetDdnsConfig
Channel ID	None
Action name	None
Entity Data	The network DDNS configuration should be included in the entity of request message. The whole "ddns" element in the "GetDdnsConfig" should be included in entity of this message. Any attributes for the "ddns" element or sub elements should not be included. If the user doesn't need to change password, please omit the "password" element.
Successful Response	The standard successful result response that described in 1.3.5.

# 8

## Security commands

### 8.1 User Management

#### 8.1.1 ModifyPassword

<b>ModifyPassword</b>	
Description	To modify the current login user's password for the IP media device.
Typical URL	POST http://<host>[:port]/ModifyPassword
Channel ID	None
Action name	None

<b>ModifyPassword</b>	
Entity Data	The new password will be included in the entity of request message. Any attributes for the "userPassword" element or sub elements should not be included. For example:
<pre>&lt;?xml version="1.0"?&gt; &lt;config version="1.0" xmlns="http://www.ipc.com/ver10"&gt; &lt;userPassword&gt; &lt;oldPassword&gt;&lt;![CDATA[YWFh]]&gt;&lt;/oldPassword&gt; &lt;password&gt;&lt;![CDATA[YmJi]]&gt;&lt;/password&gt; &lt;/userPassword&gt; &lt;/config&gt;</pre>	
<p>[Tips]:</p> <p>The "oldPassword" and "password" elements are all "string" type with maxLen"16". They should be encoded by base64, the "YWFh" and "YmJi" are the encoded result for "aaa" and "bbb".</p>	
Successful Response	The standard successful result response that described in 1.3.5.

## 8.2 Onvif User Management

### 8.2.1 ModifyIntegrateUser

ModifyIntegrateUser	
Description	To modify Onvif user's password for the IP media device. It is actually used by IPC.
Typical URL	POST http://<host>[:port]/ModifyIntegrateUser
Channel ID	None
Action name	None
Entity Data	The new password will be included in the entity of request message. For example:

## ModifyIntegrateUser

```
<config
    xmlns="http://www.ipc.com/ver10" version="1.7">
    <types>
        <userType>
            <enum>administrator</enum>
            <enum>advance</enum>
            <enum>normal</enum>
        </userType>
    </types>
    <user type="list" maxCount="16">
        <itemType>
            <userType type="userType" />
            <userName type="string" maxLen="15" />
            <password type="string" maxLen="63" />
        </itemType>
        <item>
            <userName type="string" maxLen="15">
                <![CDATA[admin]]>
            </userName>
            <password type="string" maxLen="63">
                <![CDATA[AWQEF]]>
            </password>
        </item>
    </user>
</config>
```

### [Tips]:

The "password" elements are all "string" type with maxLen"16". They should be encoded by base64, the "YWFn" and "YmJi" are the encoded result for "aaa" and "bbb".

Successful Response

The standard successful result response that described in 1.3.5.

---

## 8.3 Reboot

### 8.3.1 Reboot

Reboot	
Description	To reboot the IP media device.
Typical URL	POST or GET http://<host>[:port]/Reboot
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The standard successful result response that described in 1.3.5.

# 9

## Talkback commands

---

### 9.1 Talkback

#### 9.1.1 Talkback

profile_talk	
Description	Get the url that can used to send and receive the two-way audio data after the intercom opened.
Typical URL	GET http://<host>[:port]/profile_talk


---

profile_talk	
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The url for two-way audio data sending and receiving will be included in the entity of the successful response. For example:  <?xml version="1.0" encoding="UTF-8"?> <config version="1.0" xmlns="http://www.ipc.com/ver10"> <URL type="string">rtsp://192.168.0.9:554/profile_talk</URL> </config>

## profile\_talk

[Tips]:

- When the URL invoked by the client application, the two-way audio data stream can be passed through the RTSP protocol as below:

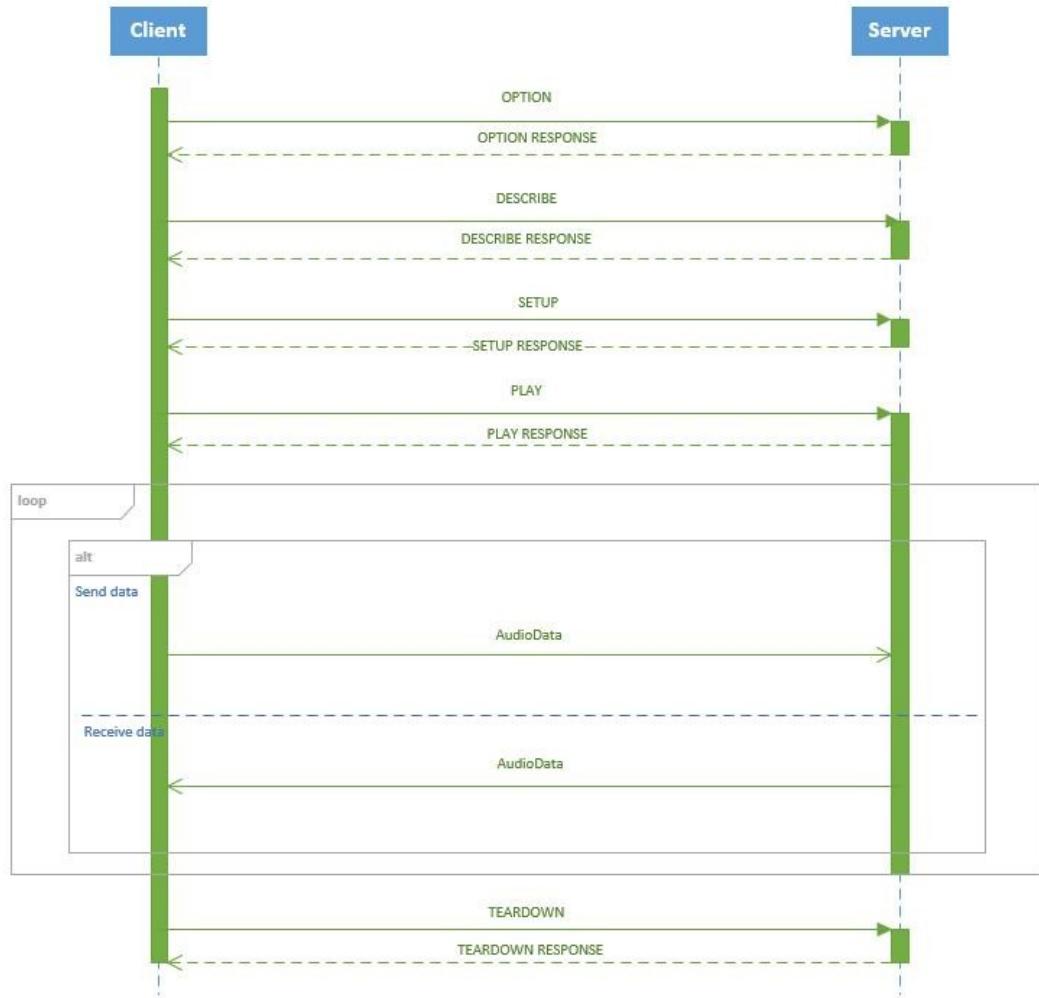

- The RTSP error code is defined as below:

600	The device is busy
601	Audio open failed
602	No permission

- Get the format of the tow-way data from rtp payload. And send the same format to device. It supports only single channel. The sampling rate is 8000HZ. The RTP size is a multiple of 320 bytes. Maximum of 320\*5.

## 9.1.2 channel\_talk

channel_talk	
Description	Get the URL used to send and receive two-way audio data after the interphone is turned on, which is only used for intercom with the channel.  It is actually used by NVR.
Typical URL	GET http://<host>[:port]/channel_talk[/ <a href="#">channelId</a> ]
Channel ID	Optional. If the URL does not contain a channel ID, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The url for two-way audio data sending and receiving will be included in the entity of the successful response. For example:  <pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.0" xmlns="http://www.ipc.com/ver10"&gt; &lt;URL type="string"&gt;rtsp://192.168.0.9:554/intercom /<a href="#">channelId</a>&lt;/URL&gt; &lt;/config&gt;</pre>

# 10 Smart commands

## 10.1 Face Detect & Face Comparison

### 10.1.1 GetSmartVfdConfig

GetSmartVfdConfig	
Description	To get the IP media device's Video Face Detection configuration.
Typical URL	POST or GET http://<host>[:port]/GetSmartVfdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The VFD configuration will be included in the entity of the successful response. For example:
<?xml version="1.0" encoding="UTF-8"?> <config version="1.7" xmlns="http://www.ipc.com/ver10"> <types> <mutexObjectType> <enum>cdd</enum> <enum>cpc</enum> <enum>ipd</enum> <enum>tripwire</enum> <enum>osc</enum> <enum>perimeter</enum> <enum>vfd</enum> <enum>avd</enum>	

```
</mutexObjectType>

<detectModeType>
    <enum>auto</enum>
    <enum>fixedInterval</enum>
</detectModeType>

<alarmListType>
    <enum>blackList</enum>
    <enum>whiteList</enum>
    <enum>strangerList</enum>
</alarmListType>

<alarmModeType>
    <enum>faceAndIdentity</enum>
    <enum>faceOnly</enum>
</alarmModeType>

<senceModeType>
    <enum>accessControl</enum>
    <enum>securityMonitor</enum>
    <enum>customize</enum>
</senceModeType>

</types>

<vfd>

    <mutexList type="list" count="2">
        <item>
            <object type="mutexObjectType">perimeter</object>
            <status type="boolean">false</status>
        </item>
        <item>
            <object type="mutexObjectType">tripwire</object>
            <status type="boolean">true</status>
        </item>
    </mutexList>

    <functionStatus type="int16">0</functionStatus>
```

```
<switch type="boolean">false</switch>

<detectMode>
    <mode type="detectModeType">fixedInterval</mode>
    <intervalTime type="uint16"
Min="300"max="600000"default="5000">5000</intervalTime>
        <captureCycle type="uint16" min="1" max="65535" default="3">3</captureCycle>
    </detectMode>
    <alarmHoldTime type="uint32">3</alarmHoldTime>
    <saveFacePicture type="boolean">false</saveFacePicture>
    <saveSourcePicture type="boolean">false</saveSourcePicture>
    <regionInfo type="list" maxCount="1" count="1">
        <item type="rectangle">
            <X1 type="uint32">262</X1>
            <Y1 type="uint32">126</Y1>
            <X2 type="uint32">9761</X2>
            <Y2 type="uint32">9841</Y2>
        </item>
    </regionInfo>
    <maxFaceFrame type="uint16">5000</maxFaceFrame>
    <minFaceFrame type="uint16">1599</minFaceFrame>
    <faceMatch>
        <pushMode>
            <mode type="detectModeType">fixedInterval</mode>
            <intervalTime type="uint16" min="3" max="10" default="4">4</intervalTime>
        </pushMode>
        <similarityThreshold type="uint8" min="1" max="100"
default="80">75</similarityThreshold>
        <alarmMode type="alarmModeType">faceOnly</alarmMode>
        <alarmList type="alarmListType">whiteList</alarmList>
        <triggerAlarmOut>
            <Io type="list" maxCount="8" count="2">
                <item>
                    <alarmId type="uint32">0</alarmId>

```

```
<switch type="boolean">false</switch>
</item>
<item>
    <alarmId type="uint32">1</alarmId>
    <switch type="boolean">false</switch>
</item>
</Io>
</triggerAlarmOut>
</faceMatch>
<faceExp>
    <switch type="boolean">false</switch>
    <faceExpStrength type="uint32" min="0" max="100"
default="50">50</faceExpStrength>
</faceExp>
<senceMode>
    <mode type="senceModeType">securityMonitor</mode>
    <spareTimeMatch type="boolean">true</spareTimeMatch>
    <nearPriority type="boolean">false</nearPriority>
</senceMode>
<senceModeInfo>
    <accessControlMode>
        <intervalTime type="uint16">500</intervalTime>
        <captureCycle type="uint16">65535</captureCycle>
        <spareTimeMatch type="boolean">false</spareTimeMatch>
        <nearPriority type="boolean">true</nearPriority>
    </accessControlMode>
    <securityMonitorMode>
        <intervalTime type="uint16">5000</intervalTime>
        <captureCycle type="uint16">3</captureCycle>
        <spareTimeMatch type="boolean">true</spareTimeMatch>
        <nearPriority type="boolean">false</nearPriority>
    </securityMonitorMode>
</senceModeInfo>
```

```
</vfd>  
</config>
```

[Tips]:

- 1.The two coordinate points of "regionInfo.item" represent the two points of the rectangular diagonal.

## 10.1.2 SetSmartVfdConfig

SetSmartVfdConfig	
Description	To set the IP media device's Video Face Detection configuration.
Typical URL	POST http://<host>[:port]/SetSmartVfdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "vfd" element in the "GetSmartVfdConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.1.3 AddTargetFace

AddTargetFace	
Description	Add the face info to the target lib.
Typical URL	POST http://<host>[:port]/AddTargetFace[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The "personInfo" and "faceImgs" elements will be included in the entity of request message. For example:
<?xml version="1.0" encoding="utf-8"?>	

```
<config xmlns="http://www.ipc.com/ver10" version="1.0">

<types>
    <listType>
        <enum>strangerList</enum>
        <enum>whiteList</enum>
        <enum>blackList</enum>
    </listType>
    <sexType>
        <enum>male</enum>
        <enum>female</enum>
    </sexType>
    <formatType>
        <enum>jpg</enum>
    </formatType>
</types>
<personInfo>
    <listType type="listType">whiteList</listType>
    <name type="string" maxLen="127"><![CDATA[user]]></name>
    <sex type="sexType">male</sex>
    <birthday type="string"><![CDATA[2017-01-09]]></birthday>
    <nativePlace type="string"><![CDATA[place]]></nativePlace>
    <number type="string">123</number>
    <groupID type="uint32">123</groupID>
    <age type="uint32">34</age>
    <identifyNumber type="string" maxLen="127"><![CDATA[A123]]></identifyNumber>
    <telephone type="string" maxLen="63"><![CDATA[18888888888]]></telephone>
    <comment type="string" maxLen="63"><![CDATA[]]></comment>
</personInfo>
<faceImgs type="list" maxCount="5" count="2">
    <item>
        <pictureData type="string" maxLen="95576">
            <![CDATA[Base64 Picture Data]]>
        </pictureData>
    </item>
</faceImgs>
```

```

</pictureData>

<pictureNum type="uint32">1</pictureNum>
<width type="uint32">100</width>
<height type="uint32">80</height>
<format type="formatType">jpg</format>
<size type="uint32">50000</size>

</item>
<item>

<pictureData type="string" maxLen="95576">
    <![CDATA[Base64 Picture Data]]>
</pictureData>

<pictureNum type="uint32">2</pictureNum>
<width type="uint32">200</width>
<height type="uint32">180</height>
<format type="formatType">jpg</format>
<size type="uint32">60000</size>

</item>
</faceImgs>
</config>

```

Successful Response	The standard successful result response that described in 1.3.5.
---------------------	--

[Tips]:

- 1.Only supports jpg (jpeg) format, uploading pictures within a size limit of 70k.
- 2.faceImgs currently only supports 1 face image in A2.
- 3.birthday, nativePlace,number and groupID are only supported by NVR.
- 4.age,listType and identifyNumber are supported only by IPC.
- 5.The NVR supports only one face image per person.
- 6.Name, sex, groupID and pictureData are required fields in NVR and pictureData is required in IPC.
- 7.If Birthday is not filled or incorrectly formatted, it is automatically filled with the value of the day of entry, which is only used by NVR.
- 8.If the person has already entered, the following return values will be returned:

```

<?xml version="1.0" encoding="UTF-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.7" status="failed">

```

```

<addFace>

    <resultInfo type="list" maxCount="10000" count="1">
        <item>
            <status type="int32">-25</status>
            <personID type="uint32">1710141619</personID>
            <similarity type="uint32">99</similarity>
            <name type="string" maxLen="127">
                <![CDATA[F1212567]]>
            </name>
            <identifyNumber type="string" maxLen="127">
                <![CDATA[]]>
            </identifyNumber>
        </item>
    </resultInfo>
</addFace>
</config>

```

## 10.1.4 DeleteTargetFace

DeleteTargetFace	
Description	Delete the face info from the target lib.
Typical URL	POST http://<host>[:port]/DeleteTargetFace[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The "deleteAction"element will be included in the entity of request message. For example:
<?xml version="1.0" encoding="utf-8"?> <config xmlns="http://www.ipc.com/ver10" version="1.0"> <types>	

```
<deleteType>
    <enum>byPersonID</enum>
    <enum>byListType</enum>
    <enum>byName</enum>
    <enum>byIdentifyNumber</enum>
</deleteType>
<listType>
    <enum>strangerList</enum>
    <enum>whiteList</enum>
    <enum>blackList</enum>
</listType>
</types>
<deleteAction>
    <deleteType type="deleteType">byPersonID</deleteType>
    <personID type="uint32">1543018104</personID>
</deleteAction>
</config>

<!-- example2: Delete personnel information by list type --&gt;
&lt;?xml version="1.0" encoding="utf-8"?&gt;
&lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;
    &lt;types&gt;
        &lt;deleteType&gt;
            &lt;enum&gt;byPersonID&lt;/enum&gt;
            &lt;enum&gt;byListType&lt;/enum&gt;
            &lt;enum&gt;byName&lt;/enum&gt;
            &lt;enum&gt;byIdentifyNumber&lt;/enum&gt;
        &lt;/deleteType&gt;
        &lt;listType&gt;
            &lt;enum&gt;strangerList&lt;/enum&gt;
            &lt;enum&gt;whiteList&lt;/enum&gt;
            &lt;enum&gt;blackList&lt;/enum&gt;
        &lt;/listType&gt;
    &lt;/types&gt;
</pre>
```

```
</listType>
</types>
<deleteAction>
    <deleteType type="deleteType">byListType</deleteType>
    <listType type="listType">whiteList</listType>
</deleteAction>
</config>

<!--example3: Delete personnel information by name--&gt;
&lt?xml version="1.0" encoding="utf-8"?&gt;
&lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;
    &lt;types&gt;
        &lt;deleteType&gt;
            &lt;enum&gt;byPersonID&lt;/enum&gt;
            &lt;enum&gt;byListType&lt;/enum&gt;
            &lt;enum&gt;byName&lt;/enum&gt;
            &lt;enum&gt;byIdentifyNumber&lt;/enum&gt;
        &lt;/deleteType&gt;
        &lt;listType&gt;
            &lt;enum&gt;strangerList&lt;/enum&gt;
            &lt;enum&gt;whiteList&lt;/enum&gt;
            &lt;enum&gt;blackList&lt;/enum&gt;
        &lt;/listType&gt;
    &lt;/types&gt;
    &lt;deleteAction&gt;
        &lt;deleteType type="deleteType"&gt;byName&lt;/deleteType&gt;
        &lt;name type="string" maxLen="127"&gt;
            &lt;![CDATA[user]]&gt;
        &lt;/name&gt;
    &lt;/deleteAction&gt;
&lt;/config&gt;</pre>
```

---

```

<!--Example4: Delete personnel information by ID number-->
<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0">
    <types>
        <deleteType>
            <enum>byPersonID</enum>
            <enum>byListType</enum>
            <enum>byName</enum>
            <enum>byIdentifyNumber</enum>
        </deleteType>
        <listType>
            <enum>strangerList</enum>
            <enum>whiteList</enum>
            <enum>blackList</enum>
        </listType>
    </types>
    <deleteAction>
        <deleteType type="deleteType">byIdentifyNumber</deleteType>
        <identifyNumber type="string" maxLen="127">
            <![CDATA[A123]]>
        </identifyNumber>
    </deleteAction>
</config>

```

Successful Response	The standard successful result response that described in 1.3.5.
---------------------	--

[Tips]:

1.deleteType field NVR supports only byPersonID.

## 10.1.5 EditTargetFace

EditTargetFace	
Description	Edit the face info of the target lib.

Typical URL	POS Thttp://<host>[:port]/EditTargetFace[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The "personInfo" and "faceImgs" elements will be included in the entity of request message. For example:
<pre> &lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;types&gt;         &lt;listType&gt;             &lt;enum&gt;strangerList&lt;/enum&gt;             &lt;enum&gt;whiteList&lt;/enum&gt;             &lt;enum&gt;blackList&lt;/enum&gt;         &lt;/listType&gt;         &lt;sexType&gt;             &lt;enum&gt;male&lt;/enum&gt;             &lt;enum&gt;female&lt;/enum&gt;         &lt;/sexType&gt;         &lt;formatType&gt;             &lt;enum&gt;jpg&lt;/enum&gt;         &lt;/formatType&gt;     &lt;/types&gt;     &lt;personID type="uint32"&gt;1543018104&lt;/personID&gt;     &lt;personInfo&gt;         &lt;listType type="listType"&gt;whiteList&lt;/listType&gt;         &lt;name type="string" maxLen="127"&gt;&lt;![CDATA[user]]&gt;&lt;/name&gt;         &lt;sex type="sexType"&gt;male&lt;/sex&gt;         &lt;birthday type="string"&gt;&lt;![CDATA[2017-01-09]]&gt;&lt;/birthday&gt;         &lt;nativePlace type="string"&gt;&lt;![CDATA[place]]&gt;&lt;/nativePlace&gt;         &lt;number type="string"&gt;123&lt;/number&gt;         &lt;groupID type="uint32"&gt;123&lt;/groupID&gt;         &lt;age type="uint32"&gt;34&lt;/age&gt;     &lt;/personInfo&gt; &lt;/config&gt;</pre>	

```

<identifyNumber type="string" maxLen="127"><![CDATA[A123]]></identifyNumber>
<telephone type="string" maxLen="63"><![CDATA[18888888888]]></telephone>
<comment type="string" maxLen="63"><![CDATA[]]></comment>
</personInfo>
<faceImgs type="list" maxCount="5" count="2">
    <item>
        <pictureData type="string" maxLen="95576">
            <![CDATA[Base64 Picture Data]]>
        </pictureData>
        <pictureNum type="uint32">1</pictureNum>
        <width type="uint32">100</width>
        <height type="uint32">80</height>
        <format type="formatType">jpg</format>
        <size type="uint32">50000</size>
    </item>
    <item>
        <pictureData type="string" maxLen="95576">
            <![CDATA[Base64 Picture Data]]>
        </pictureData>
        <pictureNum type="uint32">2</pictureNum>
        <width type="uint32">200</width>
        <height type="uint32">180</height>
        <format type="formatType">jpg</format>
        <size type="uint32">60000</size>
    </item>
</faceImgs>
</config>

```

Successful Response	The standard successful result response that described in 1.3.5.
---------------------	--

[Tips]:

- 1.Only supports jpg (jpeg) format, uploading pictures within a size limit of 70k.
- 2.faceImgs currently only supports 1 face image in A2.

3.birthday, nativePlace,number and groupID are only supported by NVR.

4.age,listType and identifyNumber are supported only by IPC.

5.Usage: Modify "personInfo" and "faceImgs" according to personID. If there is no "faceImgs", use the original data. If so, replace all face data.

## 10.1.6 GetTargetFace

GetTargetFace	
Description	Get the face info from the target lib.
Typical URL	POST http://<host>[:port]/GetTargetFace[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The "queryAction" element will be included in the entity of request message. For example:

```
<!--example: 1 Query personnel ID by list type -->
<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0">
    <types>
        <queryType>
            <enum>byPersonID</enum>
            <enum>byListType</enum>
            <enum>byName</enum>
            <enum>byIdentifyNumber</enum>
            <enum>byPersonID</enum>
            <enum>byGroup</enum>
        </queryType>
        <listType>
            <enum>strangerList</enum>
            <enum>whiteList</enum>
            <enum>blackList</enum>
        </listType>
    </types>
</config>
```

```
</listType>

</types>

<queryAction>
    <queryType type="queryType">byListType</queryType>
    <listType type="listType">whiteList</listType>
</queryAction>

</config>

<!--example: 2 Query personnel ID by name --&gt;
&lt;?xml version="1.0" encoding="utf-8"?&gt;
&lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;
    &lt;types&gt;
        &lt;queryType&gt;
            &lt;enum&gt;byPersonID&lt;/enum&gt;
            &lt;enum&gt;byListType&lt;/enum&gt;
            &lt;enum&gt;byName&lt;/enum&gt;
            &lt;enum&gt;byIdentifyNumber&lt;/enum&gt;
            &lt;enum&gt;byGroup&lt;/enum&gt;
        &lt;/queryType&gt;
        &lt;listType&gt;
            &lt;enum&gt;strangerList&lt;/enum&gt;
            &lt;enum&gt;whiteList&lt;/enum&gt;
            &lt;enum&gt;blackList&lt;/enum&gt;
        &lt;/listType&gt;
    &lt;/types&gt;
    &lt;queryAction&gt;
        &lt;queryType type="queryType"&gt;byName&lt;/queryType&gt;
        &lt;name type="string" maxLen="127"&gt;&lt;![CDATA[user]]&gt;&lt;/name&gt;
    &lt;/queryAction&gt;
&lt;/config&gt;

<!--example: 3 Query personnel by ID number --&gt;</pre>
```

```
<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0">
    <types>
        <queryType>
            <enum>byPersonID</enum>
            <enum>byListType</enum>
            <enum>byName</enum>
            <enum>byIdentifyNumber</enum>
            <enum>byGroup</enum>
        </queryType>
        <listType>
            <enum>strangerList</enum>
            <enum>whiteList</enum>
            <enum>blackList</enum>
        </listType>
    </types>
    <queryAction>
        <queryType type="queryType">byIdentifyNumber</queryType>
        <identifyNumber type="string" maxLen="127"><![CDATA[A123]]></identifyNumber>
    </queryAction>
</config>

<!--example: 4 Code by inquirer -->
<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0">
    <types>
        <queryType>
            <enum>byPersonID</enum>
            <enum>byListType</enum>
            <enum>byName</enum>
            <enum>byIdentifyNumber</enum>
        </queryType>
```

```
<enum>byGroup</enum>
</queryType>
<listType>
    <enum>strangerList</enum>
    <enum>whiteList</enum>
    <enum>blackList</enum>
</listType>
</types>
<queryAction>
    <queryType type="queryType">byPersonID</queryType>
    <personID type="uint32">1543018104</personID>
</queryAction>

<!--example: 5 Query personnel ID by Group -->
<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0">
    <types>
        <queryType>
            <enum>byPersonID</enum>
            <enum>byListType</enum>
            <enum>byName</enum>
            <enum>byIdentifyNumber</enum>
            <enum>byGroup</enum>
        </queryType>
        <listType>
            <enum>strangerList</enum>
            <enum>whiteList</enum>
            <enum>blackList</enum>
        </listType>
    </types>
    <queryAction>
        <queryType type="queryType">byGroup</queryType>
```

```

<PageNum type="uint32">0</PageNum>
<PageSize type="uint32">10</PageSize>
<GroupID type="uint32">10</GroupID>
</queryAction>
</config>

```

Successful Response	The "face" element will be included in the entity of the successful response. For example:
---------------------	--

```

<!--example: 1 Query personnel ID by list type and by Group -->
<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0">
  <face>
    <personID type="list" maxCount="20000" count="4">
      <itemType type="uint32"/>
      <item>1543018099</item>
      <item>1543018100</item>
      <item>1543018101</item>
      <item>1543018104</item>
    </personID>
  </face>
</config>

<!--example: 2 Query personnel ID by name -->
<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.7" status="success">
  <face>
    <personID type="list" count="2">
      <itemType type="uint32"/>
      <item>1701122101</item>
      <item>1701122100</item>
    </personID>
  </face>
</config>

```

```
</config>

<!--example: 3 Query personnel by ID number -->
<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.7" status="success">

<face>

<personID type="list" count="4">
    <itemType type="uint32"/>
    <item>1701122101</item>
</personID>

</face>

</config>

<!--example: 4 Code by inquirer -->
<?xml version="1.0" encoding="UTF-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.7">

<types>

<listType>
    <enum>strangerList</enum>
    <enum>whiteList</enum>
    <enum>blackList</enum>
</listType>

<sexType>
    <enum>male</enum>
    <enum>female</enum>
</sexType>

<formatType>
    <enum>jpg</enum>
    <enum>rgb</enum>
    <enum>bgr</enum>
</formatType>

</types>

<dataSensitive type="dataFlag">sensitive</dataSensitive>
<personID type="uint32">1701122101</personID>
```

```
<personInfo>
    <listType type="listType">whiteList</listType>
    <name type="string" maxLen="127" dataType="sensitive">
        <![CDATA[566]]>
    </name>
    <sex type="sexType">male</sex>
    <birthday type="string">
        <![CDATA[2017-01-09]]>
    </birthday>
    <nativePlace type="string">
        <![CDATA[place]]>
    </nativePlace>
    <number type="uint32">123</number>
    <groupID type="uint32">123</groupID>
    <age type="uint32">0</age>
    <identifyNumber type="string" maxLen="127" dataType="sensitive">
        <![CDATA[]]>
    </identifyNumber>
    <telephone type="string" maxLen="63" dataType="sensitive">
        <![CDATA[]]>
    </telephone>
    <comment type="string" maxLen="63"><![CDATA[]]></comment>
</personInfo>
<faceImgs type="list" maxCount="5" count="1">
    <item>
        <pictureData type="string" maxLen="95576">
            <![CDATA[Base64 Picture Data]]>
        </pictureData>
        <pictureNum type="uint32">1</pictureNum>
        <width type="uint32">232</width>
        <height type="uint32">232</height>
        <format type="formatType">jpg</format>
    </item>
</faceImgs>
```

```

<size type="uint32">9377</size>
</item>
</faceImgs>
</config>

```

[Tips]:

- 1.A2 The upper limit of the IPC target library is 20000.
- 2.If there is no filter condition, the album ID will be returned in order.
- 3.listType field NVR supports only whiteList.
- 4.birthday, nativePlace,number and groupID are only supported by NVR.
- 5.NVR currently only supports byGroup queries for lists and then queries for details based on byPersonID.
- 6.The age field is unique to IPC.
- 7.PageNumber starts from 0. The PageSize NVR supports a maximum of 500, and the IPC supports a maximum of 10.

## 10.1.7 SearchSnapFaceByTime

SearchSnapFaceByTime	
Description	Get the face info from the target lib.
Typical URL	POST http://<host>[:port]/SearchSnapFaceByTime[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The "queryAction" element will be included in the entity of request message. For example:
<pre> &lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;search&gt;         &lt;starttime type="string"&gt;&lt;![CDATA[2017-06-30 00:00:00]]&gt;&lt;/starttime&gt;         &lt;endtime type="string"&gt;&lt;![CDATA[2017-06-30 23:59:59]]&gt;&lt;/endtime&gt;     &lt;/search&gt; </pre>	

</config>	
Successful Response	The "snapFace" element will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;captureFaceList type="list" count="3"&gt;         &lt;item&gt;             &lt;snapTime type="uint64"&gt;6234564566&lt;/snapTime&gt;             &lt;faceID type="uint32"&gt;66&lt;/faceID&gt;         &lt;/item&gt;         &lt;item&gt;             &lt;snapTime type="uint64"&gt;6234780985&lt;/snapTime&gt;             &lt;faceID type="uint32"&gt;195&lt;/faceID&gt;         &lt;/item&gt;         &lt;item&gt;             &lt;snapTime type="uint64"&gt;7645456908&lt;/snapTime&gt;             &lt;faceID type="uint32"&gt;10320&lt;/faceID&gt;         &lt;/item&gt;     &lt;/captureFaceList&gt; &lt;/config&gt;</pre>	

[Tips]:

Maximum return of 1000 valid result information

### 10.1.8 SearchSnapFaceByKey

SearchSnapFaceByKey	
Description	Get the face info from the target lib.
Typical URL	POST http://<host>[:port]/SearchSnapFaceByKey[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.

Action name	None
Entity Data	The "queryAction" element will be included in the entity of request message. For example:
	<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;search&gt;         &lt;snapTime type="uint64"&gt;6234564566&lt;/snapTime&gt;         &lt;faceID type="uint32"&gt;66&lt;/faceID&gt;         &lt;requestPanoramicPic type="boolean"&gt;true&lt;/requestPanoramicPic&gt;         &lt;requestPersonPic type="boolean"&gt;true&lt;/requestPersonPic&gt;     &lt;/search&gt; &lt;/config&gt;</pre>
Successful Response	The "snapFace" element will be included in the entity of the successful response. For example:

```
<snapInfo>
    <time type="string"><![CDATA[2017-06-30 00:00:00]]></time>
    <pictureData type="string" maxLen="95576">
        <![CDATA[Base64 Picture Data]]>
    </pictureData>
    <width type="uint32">100</width>
    <height type="uint32">80</height>
    <format type="formatType">jpg</format>
    <size type="uint32">50000</size>
</snapInfo>
<panoramicInfo>
    <pictureData type="string" maxLen="95576">
        <![CDATA[Base64 Picture Data]]>
    </pictureData>
    <width type="uint32">100</width>
    <height type="uint32">80</height>
    <format type="formatType">jpg</format>
    <size type="uint32">50000</size>
</panoramicInfo>
<matchInfo>
    <similarity type="uint8">83</similarity>
    <threshold type="uint8">80</threshold>
    <temperature type="uint32">3650</temperature>
</matchInfo>
<personInfo>
    <listType type="listType">whiteList</listType>
    <name type="string" maxLen="127"><![CDATA[user]]></name>
    <sex type="sexType">male</sex>
    <age type="uint32">34</age>
    <identifyNumber type="string" maxLen="127">
        <![CDATA[A123]]>
    </identifyNumber>
    <telephone type="string" maxLen="63"><![CDATA[18888888888]]></telephone>
```

```

<comment type="string" maxLen="63"><![CDATA[]]></comment>

<picInfo>
    <pictureData type="string" maxLen="95576">
        <![CDATA[Base64 Picture Data]]>
    </pictureData>
    <width type="uint32">100</width>
    <height type="uint32">80</height>
    <format type="formatType">jpg</format>
    <size type="uint32">50000</size>
</picInfo>
</personInfo>
</matchInfo>
</snapFace>
</config>

```

**[Tips]:**

If there is no comparison, there will be no matchInfo element. If the comparison fails, there will be no personInfo node. If requestPanoramicPic is false, there will be no panoramicInfo node. If requestPersonPic is false, there will be no picInfo node.

## 10.1.9 GetTargetFaceGroups

GetTargetFaceGroups	
Description	To get groups for all current face database groups It is actually used by NVR.
URL	POST http://<host>[:port]/GetTargetFaceGroups[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default is NVR.
Action name	None
Entity Data	None
Successful	The "groups" element will be included in the entity of the successful response. For example:

### GetTargetFaceGroups

```
<?xml version="1.0" encoding="UTF-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0" status="success">
    <groups type="list" count="1">
        <item>
            <groupID type="uint32">11</groupID>
            <name type="string" maxLen="63"><![CDATA[Group1]]></name>
            <enable type="boolean">true</enable>
            <personNum type="uint32">52</personNum>
        </item>
    </groups>
</config>
```

[Tips]:

### 10.1.10 AddTargetFaceGroup

#### AddTargetFaceGroup

Description	Add the face grouping. It is actually used by NVR.
URL	POST http://<host>[:port]/AddTargetFaceGroup[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default is NVR.
Action name	None
Entity Data	The "groupInfo" elements will be included in the entityof request message. For example:

```
<?xml version="1.0" encoding="UTF-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0">
    <name type="string"><![CDATA[group]]></name>
    <enable type="boolean">true</enable>
</config>
```

AddTargetFaceGroup	
Successful	The standard successful result response that described in 1.3.5.
[Tips]: <ol style="list-style-type: none"> <li>1. The group name cannot be empty and must be unique from an existing name.</li> <li>2. A maximum of 32 groups can be configured.</li> <li>3. The group name must be a maximum of 63 characters.</li> </ol>	

### 10.1.11 DeleteTargetFaceGroup

DeleteTargetFaceGroup	
Description	Delete the face grouping.  It is actually used by NVR.
URL	POST http://<host>[:port]/DeleteTargetFaceGroup[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default is NVR.
Action name	None
Entity Data	The "groupID" elements will be included in the entity of request message. For example:  <?xml version="1.0" encoding="UTF-8"?> <config xmlns="http://www.ipc.com/ver10" version="1.0"> <groupID type="list"> <item type="uint32">11</item> <item type="uint32">12</item> </groupID> </config>
Successful	The standard successful result response that described in 1.3.5.
[Tips]: <ol style="list-style-type: none"> <li>1. When a face group is deleted, all face data in the group is deleted.</li> <li>2. Support batch deletion, failure will only be returned if all deletions fail.</li> </ol>	

## 10.1.12 EditTargetFaceGroup

EditTargetFaceGroup	
Description	Edit the face grouping. It is actually used by NVR.
URL	POST http://<host>[:port]/EditTargetFaceGroup[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default is NVR.
Action name	None
Entity Data	The "groupID" elements will be included in the entityof request message. For example:
<?xml version="1.0" encoding="UTF-8"?> <config xmlns="http://www.ipc.com/ver10" version="1.0"> <groupID type="uint32">11</groupID> <name type="string"><![CDATA[Group]]></name> <enable type="boolean">true</enable> </config>	
Successful	The standard successful result response that described in 1.3.5.
[Tips]: <ol style="list-style-type: none"><li>1. The group name cannot be empty and must be unique from an existing name.</li><li>2. Allow only modifying group names or enabling status.</li><li>3. The group name must be a maximum of 63 characters.</li></ol>	

## 10.2 Crowd Density Detection

### 10.2.1 GetSmartCddConfig

GetSmartCddConfig	
Description	To get the IP media device's Crowd Density Detection configuration.
Typical URL	POST or GET http://<host>[:port]/GetSmartCddConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The CDD element will be included in the entity of the successful response. For example:

```
<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0">
    <types>
        <refreshFrequency>
            <enum>500</enum>
            <enum>1000</enum>
            <enum>1500</enum>
            <enum>2000</enum>
        </refreshFrequency>
    </types>
    <cdd>
        <switch type="boolean">false</switch>
        <alarmHoldTime type="uint32">20</alarmHoldTime>
        <regionInfo type="list" maxCount="1" count="1">
            <item type="rectangle">
                <X1 type="uint32">2000</X1>
                <Y1 type="uint32">2000</Y1>
                <X2 type="uint32">8000</X2>
            </item>
        </regionInfo>
    </cdd>
</config>
```

```

<Y2 type="uint32">8000</Y2>
</item>
</regionInfo>
<detectFrequency type="refreshFrequency">1000</detectFrequency>
<triggerAlarmLevel type="uint32" min="1" max="100">1</triggerAlarmLevel>
</cdd>
</config>

```

[Tips]:

- 1.The two coordinate points of "regionInfo.item" represent the two points of the rectangular diagonal.
- 2.The unit of "detectFrequency" is milliseconds.

## 10.2.2 SetSmartCddConfig

SetSmartCddConfig	
Description	To set the IP media device's Crowd Density Detection configuration.
Typical URL	POST http://<host>[:port]/SetSmartCddConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "cdd" element in the "GetSmartCddConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.3 People Counting

### 10.3.1 GetSmartCpcConfig

GetSmartCpcConfig
-------------------

Description	To get the IP media device's Cross-line People Counting configuration.
Typical URL	POST or GET http://<host>[:port]/GetSmartCpcConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The CPC element will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;types&gt;         &lt;statisticalPeriod&gt;             &lt;enum&gt;all&lt;/enum&gt;             &lt;enum&gt;daily&lt;/enum&gt;             &lt;enum&gt;weekly&lt;/enum&gt;             &lt;enum&gt;monthly&lt;/enum&gt;         &lt;/statisticalPeriod&gt;     &lt;/types&gt;     &lt;cpc&gt;         &lt;switch type="boolean"&gt;true&lt;/switch&gt;         &lt;alarmHoldTime type="uint32"&gt;20&lt;/alarmHoldTime&gt;         &lt;regionInfo type="list" maxCount="1" count="1"&gt;             &lt;item type="rectangle"&gt;                 &lt;X1 type="uint32"&gt;2000&lt;/X1&gt;                 &lt;Y1 type="uint32"&gt;2000&lt;/Y1&gt;                 &lt;X2 type="uint32"&gt;8000&lt;/X2&gt;                 &lt;Y2 type="uint32"&gt;8000&lt;/Y2&gt;             &lt;/item&gt;         &lt;/regionInfo&gt;         &lt;directionInfo type="list" maxCount="1" count="1"&gt;             &lt;item&gt;</pre>	

```

<startX type="uint32">2000</startX >
<startY type="uint32">5000</startY >
<endX type="uint32">8000</endX >
<endY type="uint32">5000</endY >
</item>
</directionInfo>
<detectSensitivity type="uint32" min="1" max="3">2</detectSensitivity>
<crossInThreshold type="uint32" min="1" max="655350">1000</crossInThreshold>
<crossOutThreshold type="uint32" min="1" max="655350">1000</crossOutThreshold>
<twoWayDiffThreshold type="uint32" min="1" max="655350">500</twoWayDiffThreshold>
<forceReset type="boolean">false</forceReset>
<statisticalPeriod type="statisticalPeriod">daily</statisticalPeriod>
</cpc>
</config>

```

[Tips]:

- 1.The two coordinate points of "regionInfo.item" represent the two points of the rectangular diagonal.

### 10.3.2 SetSmartCpcConfig

SetSmartCpcConfig	
Description	To set the IP media device's Cross-line People Counting configuration.
Typical URL	POST http://<host>[:port]/SetSmartCpcConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "cpc" element in the "GetSmartCpcConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.

[Tips]:

## 10.4 People Intrusion

### 10.4.1 GetSmartIpConfig

GetSmartIpConfig	
Description	To get the IP media device's Intruding People Detection configuration.
Typical URL	POST or GET http://<host>[:port]/GetSmartIpConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The IPD element will be included in the entity of the successful response. For example:
<?xml version="1.0" encoding="utf-8"?> <config xmlns="http://www.ipc.com/ver10" version="1.0"> <ipd> <switch type="boolean">true</switch> <alarmHoldTime type="uint32">20</alarmHoldTime> <detectSensitivity type="uint32" min="1" max="3">2</detectSensitivity> </ipd> </config>	
[Tips]:	

### 10.4.2 SetSmartIpConfig

SetSmartIpConfig	
Description	To set the IP media device's Intruding People Detection configuration.
Typical URL	POST http://<host>[:port]/SetSmartIpConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.

Action name	None
Entity Data	The whole "ipd" element in the "GetSmartIpConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.5 Intrusion

### 10.5.1 GetSmartPerimeterConfig

<b>GetSmartPerimeterConfig</b>	
Description	To get the IP media device's Perimeter configuration.
Typical URL	POST or GET http://<host>[:port]/GetSmartPerimeterConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "perimeter" element will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config     xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;perimeter&gt;         &lt;switch type="boolean"&gt;true&lt;/switch&gt;         &lt;alarmHoldTime type="uint32"&gt;20&lt;/alarmHoldTime&gt;         &lt;objectFilter&gt;             &lt;car&gt;                 &lt;switch type="boolean"&gt;true&lt;/switch&gt;</pre>	

```
<sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
</car>

<person>
    <switch type="boolean">true</switch>
    <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
</person>

<motor>
    <switch type="boolean">true</switch>
    <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
</motor>

</objectFilter>

<maxTargetFrame type="uint16">0</maxTargetFrame>
<minTargetFrame type="uint16">0</minTargetFrame>
<saveTargetPicture type="boolean">false</saveTargetPicture>
<saveSourcePicture type="boolean">false</saveSourcePicture>
<regionInfo type="list" maxCount="4" count="1">
    <item>
        <pointGroup type="list" maxCount="8" count="4">
            <item>
                <X type="uint32">4075</X>
                <Y type="uint32">2466</Y>
            </item>
            <item>
                <X type="uint32">8025</X>
                <Y type="uint32">2833</Y>
            </item>
            <item>
                <X type="uint32">8150</X>
                <Y type="uint32">6366</Y>
            </item>
            <item>
                <X type="uint32">4475</X>
```

```

<Y type="uint32">7233</Y>
</item>
</pointGroup>
</item>
</regionInfo>
</perimeter>
</config>

```

[Tips]:

## 10.5.2 SetSmartPerimeterConfig

SetSmartPerimeterConfig	
Description	To set the IP media device's Perimeter configuration.
Typical URL	POST http://<host>[:port]/SetSmartPerimeterConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "perimeter" element in the "GetSmartPerimeterConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.6 Line Crossing

### 10.6.1 GetSmartTripwireConfig

GetSmartTripwireConfig	
Description	To get the IP media device's Tripwire configuration.

Typical URL	POST or GET http://<host>[:port]/GetSmartTripwireConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "tripwire" element will be included in the entity of the successful response. For example:
	<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;    &lt;types&gt;     &lt;tripwireDirection&gt;       &lt;enum&gt;none&lt;/enum&gt;       &lt;enum&gt;rightortop&lt;/enum&gt;       &lt;enum&gt;leftorbottom&lt;/enum&gt;     &lt;/tripwireDirection&gt;   &lt;/types&gt;   &lt;tripwire&gt;     &lt;switch type="boolean"&gt;false&lt;/switch&gt;     &lt;alarmHoldTime type="uint32"&gt;20&lt;/alarmHoldTime&gt;     &lt;objectFilter&gt;       &lt;car&gt;         &lt;switch type="boolean"&gt;true&lt;/switch&gt;         &lt;sensitivity type="uint32" max="100" min="1" default="50"&gt;50&lt;/sensitivity&gt;       &lt;/car&gt;       &lt;person&gt;         &lt;switch type="boolean"&gt;true&lt;/switch&gt;         &lt;sensitivity type="uint32" max="100" min="1" default="50"&gt;50&lt;/sensitivity&gt;       &lt;/person&gt;       &lt;motor&gt;         &lt;switch type="boolean"&gt;true&lt;/switch&gt;         &lt;sensitivity type="uint32" max="100" min="1" default="50"&gt;50&lt;/sensitivity&gt;       &lt;/motor&gt;     &lt;/objectFilter&gt;   &lt;/tripwire&gt; &lt;/config&gt;</pre>

```

        </motor>

        </objectFilter>

        <maxTargetFrame type="uint16">0</maxTargetFrame>
        <minTargetFrame type="uint16">0</minTargetFrame>
        <saveTargetPicture type="boolean">false</saveTargetPicture>
        <saveSourcePicture type="boolean">false</saveSourcePicture>
        <lineInfo type="list" maxCount="4" count="1">

            <item>
                <direction type="tripwireDirection">rightortop</direction>
                <startPoint>
                    <X type="uint32">10</X>
                    <Y type="uint32">10</Y>
                </startPoint>
                <endPoint>
                    <X type="uint32">1000</X>
                    <Y type="uint32">1000</Y>
                </endPoint>
            </item>
        </lineInfo>
    </tripwire>
</config>

```

[Tips]:

## 10.6.2 SetSmartTripwireConfig

SetSmartTripwireConfig	
Description	To set the IP media device's Tripwire configuration.
Typical URL	POST http://<host>[:port]/SetSmartTripwireConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None

Entity Data	The whole "tripwire" element in the "GetSmartTripwireConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.7 Object Removal

### 10.7.1 GetSmartOscConfig

GetSmartOscConfig	
Description	To get the IP media device's Object Status Change configuration.
Typical URL	POST or GET http://<host>[:port]/GetSmartOscConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "osc" element will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;types&gt;         &lt;oscObject&gt;             &lt;enum&gt;abandum&lt;/enum&gt;             &lt;enum&gt;objstolen&lt;/enum&gt;         &lt;/oscObject&gt;     &lt;/types&gt;     &lt;osc&gt;         &lt;switch type="boolean"&gt;true&lt;/switch&gt;</pre>	

```
<oscObject type="oscObject">abandum</oscObject>
<alarmHoldTime type="uint32">20</alarmHoldTime>
<regionInfo type="list" maxCount="4" count="1">
    <item>
        <regionName type="string" maxLen="15"><![CDATA[object]]></regionName>
        <pointGroup type="list" maxCount="8" count="4">
            <item>
                <X type="uint32">4075</X>
                <Y type="uint32">2466</Y>
            </item>
            <item>
                <X type="uint32">8025</X>
                <Y type="uint32">2833</Y>
            </item>
            <item>
                <X type="uint32">8150</X>
                <Y type="uint32">6366</Y>
            </item>
            <item>
                <X type="uint32">4475</X>
                <Y type="uint32">7233</Y>
            </item>
        </pointGroup>
    </item>
</regionInfo>
</osc>
</config>
```

[Tips]:

## 10.7.2 SetSmartOscConfig

**SetSmartOscConfig**

Description	To set the IP media device's Object Status Change configuration.
Typical URL	POST http://<host>[:port]/SetSmartOscConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "osc" element in the "GetSmartOscConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.8 Exception

### 10.8.1 GetSmartAvdConfig

GetSmartAvdConfig	
Description	To get the IP media device's Abnormal Video Diagnosis configuration.
Typical URL	POST or GET http://<host>[:port]/GetSmartAvdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "avd" element will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;avd&gt;         &lt;alarmHoldTime type="uint32"&gt;20&lt;/alarmHoldTime&gt;         &lt;sceneChangeSwitch type="boolean"&gt;true&lt;/sceneChangeSwitch&gt;</pre>	

```

<clarityAbnormalSwitch type="boolean">true</clarityAbnormalSwitch>
<colorAbnormalSwitch type="boolean">true</colorAbnormalSwitch>
<sensitivity type="uint32" min="1" max="100">100</sensitivity>
</avd>
</config>

```

[Tips]:

## 10.8.2 SetSmartAvdConfig

SetSmartAvdConfig	
Description	To set the IP media device's Abnormal Video Diagnosis configuration.
Typical URL	POST http://<host>[:port]/SetSmartAvdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "avd" element in the "GetSmartAvdConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.8.3 GetSmartAsdConfig

GetSmartAsdConfig	
Description	To get the IP media device's Abnormal Audio Diagnosis configuration.
Typical URL	POST or GET http://<host>[:port]/GetSmartAsdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None

Successful Response	The "asd" element will be included in the entity of the successful response. For example:
	<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;      &lt;asd&gt;          &lt;switch type="boolean"&gt;false&lt;/switch&gt;          &lt;objectFilter&gt;              &lt;soundRise&gt;                  &lt;switch type="boolean"&gt;false&lt;/switch&gt;                  &lt;sensitivity type="int32" max="100" min="1" default="50"&gt;50&lt;/sensitivity&gt;                  &lt;soundThreshold type="uint32" max="100" min="1" default="50"&gt;50&lt;/soundThreshold&gt;              &lt;/soundRise&gt;              &lt;soundReduce&gt;                  &lt;switch type="boolean"&gt;false&lt;/switch&gt;                  &lt;sensitivity type="int32" max="100" min="1" default="50"&gt;50&lt;/sensitivity&gt;              &lt;/soundReduce&gt;          &lt;/objectFilter&gt;      &lt;/asd&gt;  &lt;/config&gt;</pre>
[Tips]:	

## 10.8.4 SetSmartAsdConfig

<b>SetSmartAsdConfig</b>	
Description	To set the IP media device's Abnormal Audio Diagnosis configuration.
Typical URL	POST http://<host>[:port]/SetSmartAsdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None

Entity Data	The whole "asd" element in the "GetSmartAsdConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.9 License Plate Recognition

### 10.9.1 GetSmartVehicleConfig

GetVehicleConfig	
Description	To get vehicle's details.
Typical URL	POST or GET http://<host>[:port]/GetSmartVehicleConfig
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The device detail will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.7" xmlns="http://www.ipc.com/ver10"&gt;      &lt;types&gt;         &lt;detectModeType&gt;             &lt;enum&gt;auto&lt;/enum&gt;             &lt;enum&gt;fixedInterval&lt;/enum&gt;         &lt;/detectModeType&gt;         &lt;mutexObjectType&gt;             &lt;enum&gt;cdd&lt;/enum&gt;             &lt;enum&gt;cpc&lt;/enum&gt;             &lt;enum&gt;ipd&lt;/enum&gt;         &lt;/mutexObjectType&gt;     &lt;/types&gt; &lt;/config&gt;</pre>	

```
<enum>tripwire</enum>
<enum>osc</enum>
<enum>perimeter</enum>
<enum>vfd</enum>
<enum>avd</enum>
<enum>aoientry</enum>
<enum>aoileave</enum>
<enum>h264s</enum>
<enum>h265s</enum>
</mutexObjectType>
<plateAreaType>
<enum continent="Africa">SouthAfrica</enum>
<enum continent="Asia">India</enum>
<enum continent="Europe">Russia</enum>
<enum continent="Europe">Poland</enum>
<enum continent="SouthAmerica">Brazil</enum>
<enum continent="Asia">Indonesia</enum>
<enum continent="Oceania">Australia</enum>
<enum continent="Asia">TheUnitedArabEmirates</enum>
<enum continent="Asia">Vietnam</enum>
<enum continent="NorthAmerica">Canada</enum>
<enum continent="Europe">Italy</enum>
<enum continent="Europe">Hungary</enum>
<enum continent="Europe">Ukraine</enum>
<enum continent="Europe">Belgium</enum>
<enum continent="Europe">Bulgaria</enum>
<enum continent="Europe">Croatia</enum>
<enum continent="Europe">Germany</enum>
<enum continent="Europe">Britain</enum>
<enum continent="Europe">Greece</enum>
<enum continent="Europe">Romania</enum>
<enum continent="Europe">Spain</enum>
```

```
<enum continent="Europe">Serbia</enum>
<enum continent="Europe">France</enum>
<enum continent="Asia">Turkey</enum>
<enum continent="Asia">Uzbekistan</enum>
<enum continent="Asia">Thailand</enum>
<enum continent="Asia">ChineseMainland</enum>
<enum continent="Asia">Hong Kong</enum>
<enum continent="Asia">Taiwan</enum>
<enum continent="NorthAmerica">U.S.A</enum>
<enum continent="Asia">Israel</enum>
<enum continent="Asia">Iran</enum>
<enum continent="Asia">Malaysia</enum>
<enum continent="Asia">Iraq</enum>
<enum continent="Asia">Egypt</enum>
<enum continent="Oceania">NewZealand</enum>
<enum continent="Asia">Asia-Other</enum>
<enum continent="Europe">Europe-Other</enum>
<enum continent="Oceania">Oceania-Other</enum>
<enum continent="NorthAmerica">NorthAmerica-Other</enum>
<enum continent="SouthAmerica">SouthAmerica-Other</enum>
<enum continent="Africa">Africa-Other</enum>
</plateAreaType>
<alarmListType>
    <enum>blackList</enum>
    <enum>whiteList</enum>
    <enum>strangerList</enum>
</alarmListType>
<directionType>
    <enum>noLimit</enum>
    <enum>approach</enum>
    <enum>further</enum>
</directionType>
```

```
<alarmModeType>
    <enum>plateOnly</enum>
    <enum>plateAndCard</enum>
</alarmModeType>
</types>
<vehicle>
    <mutexList type="list" count="6">
        <item>
            <object type="mutexObjectType">perimeter</object>
            <status type="boolean">false</status>
        </item>
        <item>
            <object type="mutexObjectType">tripwire</object>
            <status type="boolean">false</status>
        </item>
        <item>
            <object type="mutexObjectType">osc</object>
            <status type="boolean">false</status>
        </item>
        <item>
            <object type="mutexObjectType">cdd</object>
            <status type="boolean">false</status>
        </item>
        <item>
            <object type="mutexObjectType">aoientry</object>
            <status type="boolean">false</status>
        </item>
        <item>
            <object type="mutexObjectType">aoileave</object>
            <status type="boolean">false</status>
        </item>
    </mutexList>
</vehicle>
```

```
<object type="mutexObjectType">h264s</object>
<status type="boolean">false</status>
</item>
<item>
<object type="mutexObjectType">h265s</object>
<status type="boolean">false</status>
</item>
</mutexList>
<switch type="boolean">false</switch>
<plateSensitivity type="uint8">49</plateSensitivity>
<vehicleDirection type="directionType">noLimit</vehicleDirection>
<capturePlateAbsenceVehicle type="boolean">false</capturePlateAbsenceVehicle>
<plateSupportArea type="plateAreaType">ChineseMainland</plateSupportArea>
<faultTolerance type="uint8">0</faultTolerance>
<saveTargetPicture type="boolean">false</saveTargetPicture>
<saveSourcePicture type="boolean">false</saveSourcePicture>
<dedupMode>
<switch type="boolean">false</switch>
<intervalTime type="uint32" default="5">5</intervalTime>
</dedupMode>
<regionInfo type="list" maxCount="1" count="1">
<item>
<X1 type="uint32">375</X1>
<Y1 type="uint32">2866</Y1>
<X2 type="uint32">9625</X2>
<Y2 type="uint32">8800</Y2>
</item>
</regionInfo>
<plateSize type="list" maxCount="1" count="1">
<item>
<MinWidth type="int32" min="100" max="5000" default="300">300</MinWidth>
<MinHeight type="int32" min="100" max="5000" default="300">300</MinHeight>
<MaxWidth type="int32" min="100" max="5000"
```

```
default="3000">3000</MaxWidth>

    <MaxHeight type="int32" min="100" max="5000"
default="3000">3000</MaxHeight>

</item>
</plateSize>
<maskArea type="list" count="4">
    <item>
        <point type="list" maxCount="8" count="0"></point>
    </item>
    <item>
        <point type="list" maxCount="8" count="0"></point>
    </item>
    <item>
        <point type="list" maxCount="8" count="0"></point>
    </item>
    <item>
        <point type="list" maxCount="8" count="0"></point>
    </item>
</maskArea>
<faultToleranceList type="list" count="1">
    <item>
        <faultPlateNum type="list" >1-I</faultPlateNum>
    </item>
</faultToleranceList>
<plateExposure>
    <switch type="boolean">false</switch>
    <exposureValue type="uint32" min="1" max="15" default="8">0</exposureValue>
</plateExposure>
<plateMatch>
    <alarmMode type="alarmModeType">plateOnly</alarmMode>
    <item>
        <alarmList type="alarmListType">strangerList</alarmList>
        <triggerAlarmOut>
```

```
<Io type="list" maxCount="8" count="1">
    <item>
        <alarmId type="uint32">0</alarmId>
        <switch type="boolean">false</switch>
    </item>
</Io>
</triggerAlarmOut>
</item>
<item>
    <alarmList type="alarmListType">strangerList</alarmList>
    <triggerAlarmOut>
        <Io type="list" maxCount="8" count="1">
            <item>
                <alarmId type="uint32">0</alarmId>
                <switch type="boolean">false</switch>
            </item>
        </Io>
    </triggerAlarmOut>
</item>
<item>
    <alarmList type="alarmListType">strangerList</alarmList>
    <triggerAlarmOut>
        <Io type="list" maxCount="8" count="1">
            <item>
                <alarmId type="uint32">0</alarmId>
                <switch type="boolean">false</switch>
            </item>
        </Io>
    </triggerAlarmOut>
</item>
<triggerAlarmOutV2>
    <whiteAlarmOut>
```

```
<Io type="list" maxCount="8" count="1">
    <item>
        <alarmId type="uint32">0</alarmId>
        <switch type="boolean">false</switch>
    </item>
</Io>
</whiteAlarmOut>
<blackAlarmOut>
    <Io type="list" maxCount="8" count="1">
        <item>
            <alarmId type="uint32">0</alarmId>
            <switch type="boolean">false</switch>
        </item>
    </Io>
</blackAlarmOut>
<temporaryAlarmOut>
    <Io type="list" maxCount="8" count="1">
        <item>
            <alarmId type="uint32">0</alarmId>
            <switch type="boolean">false</switch>
        </item>
    </Io>
</temporaryAlarmOut>
<strangerAlarmOut>
    <Io type="list" maxCount="8" count="1">
        <item>
            <alarmId type="uint32">0</alarmId>
            <switch type="boolean">false</switch>
        </item>
    </Io>
</strangerAlarmOut>
</triggerAlarmOutV2>
```

```
</plateMatch>

<triggerConfig>
    <alarmHoldTime type="uint32">20</alarmHoldTime>
    <sdSnapSwitch type="boolean">false</sdSnapSwitch>
    <sdRecSwitch type="boolean">false</sdRecSwitch>
    <triggerAlarmOut>
        <alarmOutList type="list" maxCount="1" count="1">
            <item>
                <alarmOutId type="uint32">0</alarmOutId>
                <alarmSwitch type="boolean">false</alarmSwitch>
            </item>
        </alarmOutList>
    </triggerAlarmOut>
    <triggerMail>
        <switch type="boolean">false</switch>
        <subject type="string" maxLen="63">
            <![CDATA[]]>
        </subject>
        <content type="string" maxLen="255">
            <![CDATA[]]>
        </content>
        <recvList type="list" maxCount="5" count="0"></recvList>
    </triggerMail>
    <triggerFtp>
        <switch type="boolean">false</switch>
        <ftpServerList type="list" maxCount="2" count="0"></ftpServerList>
    </triggerFtp>
</triggerConfig>
</vehicle>
</config>
```

[Tips]:

## 10.9.2 SetSmartVehicleConfig

SetVehicleConfig	
Description	To set the IP media device's Video Vehicle Detection configuration.
Typical URL	POST http://<host>[:port]/SetSmartVehicleConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "vehilce" element in the "GetVehilceConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.9.3 AddVehiclePlate

AddVehiclePlate	
Description	To set the schedulein batches.
Typical URL	POST or GET http://<host>[:port]/AddVehiclePlate
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	For example:
<?xml version="1.0" encoding="utf-8" ?> <config> <vehiclePlates type="list" count="1"> <item> <carPlateNumber type ="string"><![CDATA[B 123456]]></carPlateNumber> <beginTime type ="string"><![CDATA[2019/08/22 00:00:00]]></beginTime> <endTime type ="string"><![CDATA[2019/08/22 23:59:59]]></endTime>	

```

<carPlateColor type ="string"><![CDATA[]]></carPlateColor>
<carPlateType type ="string"><![CDATA[car]]></carPlateType>
<carType type ="unit32"><![CDATA[undefined]]></carType>
<carOwner type ="string"><![CDATA[TEST]]></carOwner>
<carColor type ="string"><![CDATA[undefined]]></carColor>
<plateItemType type ="string">strangerList</plateItemType>
</item>
</vehiclePlates>
</config>
```

Successful Response	For example:
---------------------	--------------

```

<?xml version="1.0" encoding="UTF-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.7">
    <vehiclePlatesReply type="list" count="0">
    </vehiclePlatesReply>
</config>
```

[Tips]:

Return a list of failures, if count is 0, it means all success

## 10.9.4 DeleteVehiclePlate

DeleteVehiclePlate	
Description	To set the schedule in batches.
Typical URL	POST or GET http://<host>[:port]/DeleteVehiclePlate
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	For example:
<pre>&lt;?xml version="1.0" encoding="utf-8" ?&gt; &lt;config&gt;</pre>	

```

<vehiclePlates>
    <keyList type="list" count="1">
        <item>
            <keyId type="unit32">1566443406</keyId>
        </item>
    </keyList>
    <listType></listType>
    <carPlateNum>
        <![CDATA[]]>
    </carPlateNum>
</vehiclePlates>
</config>

```

Successful Response	For example:
	<pre> &lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.7"&gt;     &lt;vehiclePlatesReply type="list" count="0"&gt;     &lt;/vehiclePlatesReply&gt; &lt;/config&gt; </pre>
[Tips]:	

To delete a license plate, you can delete one of the following three options:

1. Support keyid list batch deletion.
2. Support black and white list deletion
3. Support fuzzy deletion of license plates

## 10.9.5 EditVehiclePlate

<b>EditVehiclePlate</b>	
Description	To set the schedulein batches.
Typical URL	POST or GET http://<host>[:port]/EditVehiclePlate

Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	For example:
<pre> &lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.7"&gt;     &lt;vehiclePlates&gt;         &lt;keyId type="unit32"&gt;1300&lt;/keyId&gt;         &lt;carPlateNumber type="string"&gt;BCY113&lt;/carPlateNumber&gt;         &lt;beginTime type="string"&gt;2019-1-1 12:23:00&lt;/beginTime&gt;         &lt;endTime type="string"&gt;2019-1-1 12:23:00&lt;/endTime&gt;         &lt;carPlateColor type="string"&gt;red&lt;/carPlateColor&gt;         &lt;carPlateType type="string"&gt;1566&lt;/carPlateType&gt;         &lt;carType type="unit32"&gt;1566&lt;/carType&gt;         &lt;carOwner type="string"&gt;dengyuhui&lt;/carOwner&gt;         &lt;carColor type="string"&gt;red&lt;/carColor&gt;         &lt;plateItemType type="string"&gt;blackList&lt;/plateItemType&gt;     &lt;/vehiclePlates&gt; &lt;/config&gt;</pre>	
Successful Response	For example:
<pre> &lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.7"&gt;     &lt;vehiclePlatesReply&gt;         &lt;keyId type="unit32"&gt;1300&lt;/keyId&gt;         &lt;status type="unit32"&gt;0&lt;/status&gt;     &lt;/vehiclePlatesReply&gt; &lt;/config&gt;</pre>	
[Tips]:	
1.The status in response is equal to 0 to indicate success, and non-zero to indicate modification failure	

## 10.9.6 GetVehiclePlate

GetVehiclePlate	
Description	To set the schedule in batches.
Typical URL	POST or GET http://<host>[:port]/GetVehiclePlate
Channel ID	None
Action name	None
Entity Data	For example: <pre>&lt;config xmlns="http://www.ipc.com/ver10" version="1.7"&gt; &lt;types&gt;     &lt;vehicleListTypes&gt;         &lt;enum&gt;blackList&lt;/enum&gt;         &lt;enum&gt;whiteList&lt;/enum&gt;         &lt;enum&gt;strangerList&lt;/enum&gt;         &lt;enum&gt;allList&lt;/enum&gt;     &lt;/vehicleListTypes&gt; &lt;/types&gt; &lt;vehiclePlates type="list" maxCount="10000" count="1"&gt;     &lt;searchFilter&gt;         &lt;item&gt;             &lt;pageIndex type="unit32"&gt;0&lt;/pageIndex&gt;             &lt;pageSize type="unit32"&gt;10&lt;/pageSize&gt;             &lt;listType type="vehicleListTypes"&gt;allList&lt;/listType&gt;             &lt;carPlateNum type="string"&gt;&lt;/carPlateNum&gt;         &lt;/item&gt;     &lt;/searchFilter&gt; &lt;/vehiclePlates&gt; &lt;/config&gt;</pre>

Successful Response	For example:
	<pre> &lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.7"&gt;     &lt;vehiclePlates type="list" maxCount="10000" count="1"&gt;         &lt;item&gt;             &lt;keyId type="unit32"&gt;1300&lt;/keyId&gt;             &lt;carPlateNumber type="string"&gt;BCY113&lt;/carPlateNumber&gt;             &lt;beginTime type="string"&gt;2019-1-1 12:23:00&lt;/beginTime&gt;             &lt;endTime type="string"&gt;2019-1-1 12:23:00&lt;/endTime&gt;             &lt;carPlateColor type="string"&gt;red&lt;/carPlateColor&gt;             &lt;carPlateType type="string"&gt;1566&lt;/carPlateType&gt;             &lt;carType type="unit32"&gt;1566&lt;/carType&gt;             &lt;carOwner type="string"&gt;dengyuhui&lt;/carOwner&gt;             &lt;carColor type="string"&gt;red&lt;/carColor&gt;             &lt;plateItemType type="string"&gt;1566&lt;/plateItemType&gt;         &lt;/item&gt;     &lt;/vehiclePlates&gt; &lt;/config&gt;</pre>
[Tips]:	

1. This command is to query by page, you can specify the page and the number of each page to specify the query.

2. To request a license plate number request, please add the license plate to the node carPlateNum.

## 10.9.7 GetVehiclePlateProgress

<b>GetVehiclePlateProgress</b>	
Description	Progress of batch import license plate library
Typical URL	POST or GET http://<host>[:port]/GetVehiclePlateProgress

Channel ID	None
Action name	None
Entity Data	For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.7"&gt; &lt;vehiclePlatesReply&gt;10000&lt;/vehiclePlatesReply&gt; &lt;/config&gt;</pre>	
Successful Response	The standard successful result response that described in 1.3.5.
<p>[Tips]:</p> <p>The result is divided by 100 when converted to a% ratio to indicate the ratio</p>	

## 10.9.8 SearchSnapVehicleByTime

SearchSnapVehicleByTime	
Description	Get the vehicle info from the target lib.
Typical URL	POST http://<host>[:port]/SearchSnapVehicleByTime[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The "queryAction" element will be included in the entity of request message. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8" ?&gt; &lt;config&gt;     &lt;search&gt;         &lt;starttime type="string"&gt;             &lt;![CDATA[2023-01-31 00:00:00]]&gt;         &lt;/starttime&gt;         &lt;endtime type="string"&gt;</pre>	

	<pre> &lt;![CDATA[2023-02-01 00:00:00]]&gt; &lt;/endtime&gt; &lt;/search&gt; &lt;/config&gt;</pre>
Successful Response	The "vehicle" element will be included in the entity of the successful response. For example:
<pre> &lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.7"&gt;   xmlns="http://www.ipc.com/ver10"&gt;     &lt;types&gt;       &lt;vehiclelistType&gt;         &lt;enum&gt;blackList&lt;/enum&gt;         &lt;enum&gt;whiteList&lt;/enum&gt;         &lt;enum&gt;strangerList&lt;/enum&gt;         &lt;enum&gt;allList&lt;/enum&gt;       &lt;/vehiclelistType&gt;     &lt;/types&gt;     &lt;captureVehicleList type="list" count="1"&gt;       &lt;item&gt;         &lt;snapTime type="uint64"&gt;1600999576000000&lt;/snapTime&gt;         &lt;vehicleID type="uint32"&gt;127&lt;/vehicleID&gt;         &lt;vehiclePlate type="string"&gt;           &lt;![CDATA[KRJ088]]&gt;         &lt;/vehiclePlate&gt;         &lt;listType type="vehiclelistType"&gt;strangerList&lt;/listType&gt;       &lt;/item&gt;     &lt;/captureVehicleList&gt;   &lt;/config&gt;</pre>	
<p>[Tips]:</p> <p>Maximum return of 1000 valid result information</p>	

## 10.9.9 SearchSnapVehicleByKey

SearchSnapVehicleByKey	
Description	Get the vehicle info from the target lib.
Typical URL	POST http://<host>[:port]/SearchSnapVehicleByKey[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The "queryAction" element will be included in the entity of request message. For example:
<?xml version="1.0" encoding="utf-8" ?> <config> <search> <snapTime type="uint64">1600999576000000</snapTime> <vehicleID type="uint32">122</vehicleID> <requestPanoramicPic type="boolean">true</requestPanoramicPic> </search> </config>	
Successful Response	The "vehicle" element will be included in the entity of the successful response. For example:
<?xml version="1.0" encoding="UTF-8"?> <config version="1.7" xmlns="http://www.ipc.com/ver10"> <types> <vehiclelistType> <enum>blackList</enum> <enum>whiteList</enum> <enum>strangerList</enum> </vehiclelistType> <formatType> <enum>jpg</enum>	

```
</formatType>
</types>
<snapVehicle>
  <snapInfo>
    <time type="string">
      <![CDATA[2020-09-25 10:06:27 000]]>
    </time>
    <vehiclePlate type="string">
      <![CDATA[KRJ088]]>
    </vehiclePlate>
    <listType type="vehiclelistType">strangerList</listType>
    <width type="uint32">482</width>
    <height type="uint32">246</height>
    <format type="formatType">jpg</format>
    <size type="uint32">25373</size>
    <pictureData type="string">
      <![CDATA[base64PictureData]]>
    </pictureData>
  </snapInfo>
  <panoramicInfo>
    <width type="uint32">1920</width>
    <height type="uint32">1080</height>
    <format type="formatType">yuv</format>
    <size type="uint32">142477</size>
    <pictureData type="string">
      <![CDATA[base64PictureData]]>
    </pictureData>
  </panoramicInfo>
</snapVehicle>
</config>
```

[Tips]:

Maximum return of 1000 valid result information

## 10.10 Region Entrance

### 10.10.1 GetSmartAoiEntryConfig

GetSmartAoiEntryConfig	
Description	To get aoientry's details.
Typical URL	POST or GET http://<host>[:port]/GetSmartAoiEntryConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "aoi" element will be included in the entity of the successful response. For example:

```
<?xml version="1.0" encoding="utf-8"?>
<config
    xmlns="http://www.ipc.com/ver10" version="1.7">
    <types>
        <mutexObjectType>
            <enum>cdd</enum>
            <enum>cpc</enum>
            <enum>ipd</enum>
            <enum>tripwire</enum>
            <enum>osc</enum>
            <enum>perimeter</enum>
            <enum>vfd</enum>
            <enum>avd</enum>
            <enum>vehicle</enum>
        </mutexObjectType>
    </types>
```

## GetSmartAoiEntryConfig

```
<aoientry>
  <mutexList type="list" count="2">
    <item>
      <object type="mutexObjectType">tripwire</object>
      <status type="boolean">false</status>
    </item>
    <item>
      <object type="mutexObjectType">vfd</object>
      <status type="boolean">false</status>
    </item>
  </mutexList>
  <switch type="boolean">false</switch>
  <objectFilter>
    <car>
      <switch type="boolean">true</switch>
      <sensitivity type="uint32" max="100" min="1" default="50">85</sensitivity>
    </car>
    <person>
      <switch type="boolean">true</switch>
      <sensitivity type="uint32" max="100" min="1" default="50">60</sensitivity>
    </person>
    <motor>
      <switch type="boolean">true</switch>
      <sensitivity type="uint32" max="100" min="1" default="50">85</sensitivity>
    </motor>
  </objectFilter>
  <saveTargetPicture type="boolean">false</saveTargetPicture>
  <saveSourcePicture type="boolean">false</saveSourcePicture>
  <boundary type="list" count="4">
    <item>
      <point type="list" maxCount="6" count="5">
```

## GetSmartAoiEntryConfig

```
<item>
    <X type="unit32">1300</X>
    <Y type="unit32">1566</Y>
</item>
<item>
    <X type="unit32">1925</X>
    <Y type="unit32">8433</Y>
</item>
<item>
    <X type="unit32">8650</X>
    <Y type="unit32">9033</Y>
</item>
<item>
    <X type="unit32">8725</X>
    <Y type="unit32">833</Y>
</item>
<item>
    <X type="unit32">1200</X>
    <Y type="unit32">1133</Y>
</item>
</point>
</item>
<item>
    <point type="list" maxCount="6" count="0"></point>
</item>
<item>
    <point type="list" maxCount="6" count="0"></point>
</item>
<item>
    <point type="list" maxCount="6" count="0"></point>
</item>
```

#### GetSmartAoiEntryConfig

```
</boundary>
```

```
</aoientry>
```

```
</config>
```

[Tips]:

### 10.10.2 SetSmartAoiEntryConfig

#### SetSmartAoiEntryConfig

Description	To set aoientry's details.
Typical URL	POST http://<host>[:port]/SetSmartAoiEntryConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "aoientry" element in the "GetSmartAoiEntryConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.11 Region Entrance

### 10.11.1 GetSmartAoiLeaveConfig

#### GetSmartAoiLeaveConfig

Description	To get aoileave's details
Typical URL	POST or GET http://<host>[:port]/GetSmartAoiLeaveConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.

## GetSmartAoiLeaveConfig

Action name	None
Entity Data	None
Successful Response	The "aoileave" element will be included in the entity of the successful response. For example:

```
<?xml version="1.0" encoding="utf-8"?>
<config
    xmlns="http://www.ipc.com/ver10" version="1.7">
    <types>
        <mutexObjectType>
            <enum>cdd</enum>
            <enum>cpc</enum>
            <enum>ipd</enum>
            <enum>tripwire</enum>
            <enum>osc</enum>
            <enum>perimeter</enum>
            <enum>vfd</enum>
            <enum>avd</enum>
            <enum>vehicle</enum>
        </mutexObjectType>
    </types>
    <aoileave>
        <mutexList type="list" count="2">
            <item>
                <object type="mutexObjectType">tripwire</object>
                <status type="boolean">false</status>
            </item>
            <item>
                <object type="mutexObjectType">vfd</object>
                <status type="boolean">false</status>
            </item>
        </mutexList>
    </aoileave>
</config>
```

## GetSmartAoiLeaveConfig

```
</mutexList>

<switch type="boolean">false</switch>

<objectFilter>

    <car>

        <switch type="boolean">true</switch>

        <sensitivity type="uint32" max="100" min="1" default="50">85</sensitivity>

    </car>

    <person>

        <switch type="boolean">true</switch>

        <sensitivity type="uint32" max="100" min="1" default="50">60</sensitivity>

    </person>

    <motor>

        <switch type="boolean">true</switch>

        <sensitivity type="uint32" max="100" min="1" default="50">85</sensitivity>

    </motor>

</objectFilter>

<saveTargetPicture type="boolean">false</saveTargetPicture>

<saveSourcePicture type="boolean">false</saveSourcePicture>

<boundary type="list" count="4">

    <item>

        <point type="list" maxCount="6" count="5">

            <item>

                <X type="unit32">1300</X>

                <Y type="unit32">1566</Y>

            </item>

            <item>

                <X type="unit32">1925</X>

                <Y type="unit32">8433</Y>

            </item>

            <item>

                <X type="unit32">8650</X>

            </item>

        </point>

    </item>


```

### GetSmartAoiLeaveConfig

```
<Y type="unit32">9033</Y>
</item>
<item>
<X type="unit32">8725</X>
<Y type="unit32">833</Y>
</item>
<item>
<X type="unit32">1200</X>
<Y type="unit32">1133</Y>
</item>
</point>
</item>
<item>
<point type="list" maxCount="6" count="0"></point>
</item>
<item>
<point type="list" maxCount="6" count="0"></point>
</item>
<item>
<point type="list" maxCount="6" count="0"></point>
</item>
</boundary>
</aoileave>
</config>
```

[Tips]:

### 10.11.2 SetSmartAoiLeaveConfig

```
SetSmartAoiEntryConfig
```

SetSmartAoiEntryConfig	
Description	To set aoileave's details
Typical URL	POST http://<host>[:port]/SetSmartAoiEntryConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "aoileave" element in the "GetSmartAoiLeaveConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.12 Target Counting

### 10.12.1 GetSmartPassLineCountConfig

GetSmartPassLineCountConfig	
Description	To get passlinecount's details
Typical URL	POST or GET http://<host>[:port]/GetPassLineCountConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "passlinecount" element will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config     xmlns="http://www.ipc.com/ver10" version="1.7"&gt;</pre>	

## GetSmartPassLineCountConfig

```
<types>
    <direction>
        <enum>none</enum>
        <enum>rightortop</enum>
        <enum>leftorbottom</enum>
    </direction>
    <mutexObjectType>
        <enum>cdd</enum>
        <enum>cpc</enum>
        <enum>ipd</enum>
        <enum>tripwire</enum>
        <enum>osc</enum>
        <enum>perimeter</enum>
        <enum>vfd</enum>
        <enum>avd</enum>
        <enum>vehicle</enum>
    </mutexObjectType>
    <countCycleType>
        <enum>day</enum>
        <enum>week</enum>
        <enum>month</enum>
        <enum>off</enum>
    </countCycleType>
</types>
<passlinecount>
    <mutexList type="list" count="2">
        <item>
            <object type="mutexObjectType">tripwire</object>
            <status type="boolean">false</status>
        </item>
        <item>
```

## GetSmartPassLineCountConfig

```
<object type="mutexObjectType">vfd</object>

<status type="boolean">false</status>

</item>

</mutexList>

<switch type="boolean">false</switch>

<objectFilter>

    <car>

        <switch type="boolean">true</switch>

        <sensitivity type="uint32" max="100" min="1" default="50">85</sensitivity>

    </car>

    <person>

        <switch type="boolean">true</switch>

        <sensitivity type="uint32" max="100" min="1" default="50">60</sensitivity>

    </person>

    <motor>

        <switch type="boolean">true</switch>

        <sensitivity type="uint32" max="100" min="1" default="50">85</sensitivity>

    </motor>

</objectFilter>

<saveTargetPicture type="boolean">false</saveTargetPicture>

<saveSourcePicture type="boolean">false</saveSourcePicture>

<countPeriod>

    <countTimeType type="countCycleType">off</countTimeType>

    <daily>

        <dateSpan type="uint32">0</dateSpan>

        <dateTimeSpan type="string">00:00:00</dateTimeSpan>

    </daily>

    <weekly>

        <dateSpan type="uint32">0</dateSpan>

        <dateTimeSpan type="string">00:00:00</dateTimeSpan>

    </weekly>


```

## GetSmartPassLineCountConfig

```
<monthly>
    <dateSpan type="uint32">0</dateSpan>
    <dateTimeSpan type="string">00:00:00</dateTimeSpan>
</monthly>
</countPeriod>
<countOSD>
    <switch type="boolean">true</switch>
    <X type="uint32">6600</X>
    <Y type="uint32">100</Y>
    <osdFormat type="string">
        <![CDATA[Entrance: human-# car-# bike-# \nExit : human-# car-# bike-#]]>
    </osdFormat>
</countOSD>
<line type="list" count="4">
    <item>
        <direction type="direction">rightortop</direction>
        <startPoint>
            <X type="uint32">0</X>
            <Y type="uint32">0</Y>
        </startPoint>
        <endPoint>
            <X type="uint32">0</X>
            <Y type="uint32">0</Y>
        </endPoint>
    </item>
    <item>
        <direction type="direction">rightortop</direction>
        <startPoint>
            <X type="uint32">0</X>
            <Y type="uint32">0</Y>
        </startPoint>
```

## GetSmartPassLineCountConfig

```
<endPoint>
    <X type="uint32">0</X>
    <Y type="uint32">0</Y>
</endPoint>
</item>
<item>
    <direction type="direction">rightortop</direction>
    <startPoint>
        <X type="uint32">0</X>
        <Y type="uint32">0</Y>
    </startPoint>
    <endPoint>
        <X type="uint32">0</X>
        <Y type="uint32">0</Y>
    </endPoint>
</item>
<item>
    <direction type="direction">rightortop</direction>
    <startPoint>
        <X type="uint32">0</X>
        <Y type="uint32">0</Y>
    </startPoint>
    <endPoint>
        <X type="uint32">0</X>
        <Y type="uint32">0</Y>
    </endPoint>
</item>
</line>
</passlinecount>
</config>
```

GetSmartPassLineCountConfig

[Tips]:

### 10.12.2 SetSmartPassLineCountConfig

GetPassLineCountConfig	
Description	To set passlinecount's details
Typical URL	POST http://<host>[:port]/SetPassLineCountConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "passlinecount" element in the "GetSmartPassLineCountConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.

[Tips]:Manual Reset

```
<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0">
    <passlinecount>
        <forceReset type="boolean">true</forceReset>
    </passlinecount>
</config>
```

[Tips]:

### 10.12.3 GetPassLineCountStatistics

GetPassLineCountStatistics

Description	Get current statistics
-------------	------------------------

GetPassLineCountStatistics	
Typical URL	POST or GET http://<host>[:port]/GetPassLineCountStatistics[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "passlinecount" element will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.7"&gt;     &lt;entranceCount&gt;         &lt;person type="uint32"&gt;0&lt;/person&gt;         &lt;car type="uint32"&gt;0&lt;/car&gt;         &lt;bike type="uint32"&gt;0&lt;/bike&gt;     &lt;/entranceCount&gt;     &lt;exitCount&gt;         &lt;person type="uint32"&gt;0&lt;/person&gt;         &lt;car type="uint32"&gt;0&lt;/car&gt;         &lt;bike type="uint32"&gt;0&lt;/bike&gt;     &lt;/exitCount&gt; &lt;/config&gt;</pre>	

## 10.13 Thermographic Temperature Measurement

### 10.13.1 GetMeasureTemperatureConfig

GetMeasureTemperatureConfig	
Description	To get thermal imaging temperature measurement detail information.

Typical URL	POST or GET http://<host>[:port]/GetMeasureTemperatureConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1
Action name	None
Entity Data	None
Successful Response	The device detail will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt;  &lt;config xmlns="http://www.ipc.com/ver10" version="1.7"&gt;   &lt;ThermalAlarmConfig&gt;     &lt;alarmSwitch default="false" type="boolean"&gt;true&lt;/alarmSwitch&gt;     &lt;highThreshold&gt;       &lt;highTemperatureSwitch default="false" type="boolean"&gt;false&lt;/highTemperatureSwitch&gt;       &lt;highTemperatureValue type="uint32" max="4500" min="3000"&gt;4000&lt;/highTemperatureValue&gt;     &lt;/highThreshold&gt;     &lt;lowThreshold&gt;       &lt;lowTemperatureSwitch default="false" type="boolean"&gt;true&lt;/lowTemperatureSwitch&gt;       &lt;lowTemperatureValue type="uint32" max="4500" min="3000"&gt;4000&lt;/lowTemperatureValue&gt;     &lt;/lowThreshold&gt;     &lt;triggerConfig&gt;       &lt;alarmHoldTime type="uint32"&gt;3&lt;/alarmHoldTime&gt;       &lt;sdSnapSwitch type="boolean"&gt;false&lt;/sdSnapSwitch&gt;       &lt;sdRecSwitch type="boolean"&gt;false&lt;/sdRecSwitch&gt;       &lt;triggerAlarmOut&gt;         &lt;alarmOutList type="list" maxCount="1" count="1"&gt;           &lt;item&gt;             &lt;alarmOutId type="uint32"&gt;0&lt;/alarmOutId&gt;             &lt;alarmSwitch type="boolean"&gt;false&lt;/alarmSwitch&gt;           &lt;/item&gt;         &lt;/alarmOutList&gt;       &lt;/triggerAlarmOut&gt;     &lt;/triggerConfig&gt;   &lt;/ThermalAlarmConfig&gt; &lt;/config&gt;</pre>	

```

        </item>
    </alarmOutList>
</triggerAlarmOut>
<triggerMail>
    <switch type="boolean">false</switch>
    <subject type="string" maxLen="63"><![CDATA[]]></subject>
    <content type="string" maxLen="255"><![CDATA[]]></content>
    <recvList type="list" maxCount="5" count="0"></recvList>
</triggerMail>
<triggerFtp>
    <switch type="boolean">false</switch>
    <ftpServerList type="list" maxCount="1" count="0"></ftpServerList>
</triggerFtp>
<triggerAudio>
    <switch type="boolean">false</switch>
</triggerAudio>
<triggerWhiteLight>
    <switch type="boolean">false</switch>
</triggerWhiteLight>
</triggerConfig>
</ThermalAlarmConfig>
</config>

```

[Tips]:

## 10.13.2 SetMeasureTemperatureConfig

SetMeasureTemperatureConfig	
Description	To set the IP media device's thermal imaging temperature measurement detail information.
Typical URL	POST http://<host>[:port]/SetMeasureTemperatureConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.

SetMeasureTemperatureConfig	
Action name	None
Entity Data	The whole "ThermalAlarmConfig" element in the "GetMeasureTemperatureConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5
[Tips]:	

### 10.13.3 GetTemperatureCalibrationConfig

GetTemperatureCalibrationConfig	
Description	To get thermal imaging temperature correction detail information.
Typical URL	POST or GET http://<host>[:port]/GetTemperatureCalibrationConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The device detail will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="utf-8"?&gt;  &lt;config xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;ScenseMode&gt;         &lt;enum&gt;correction&lt;/enum&gt;         &lt;enum&gt;monitoring&lt;/enum&gt;     &lt;/ScenseMode&gt;     &lt;calibrationData&gt;</pre>	

```

<mode type="ScenseMode">monitoring</mode>
<envTemperature type="uint32" min="0" max="50">25</envTemperature>
<envHumidity type="uint32" min="0" max="100">40</envHumidity>
<objDistance type="uint32" min="1" max="10">2</objDistance>
<Radiate type="uint32" min="1" max="100">80</Radiate>
<blackBody>
<switch type="boolean">false</switch>
<blackPositionX type="uint32" min="0" max="10000">9400</blackPositionX>
<blackPositionY type="uint32" min="0" max="10000">6387</blackPositionY>
<blackTemperature type="uint32" min="0" max="100">20</blackTemperature>
</blackBody>
<correctionTemperature type="int32" min="-30" max="30">-3</correctionTemperature>
</calibrationData>
</config>

```

[Tips]:

#### 10.13.4 SetTemperatureCalibrationConfig

SetTemperatureCalibrationConfig	
Description	To set the IP media device's thermal imaging temperature calibration detail information.
Typical URL	POST http://<host>[:port]/SetTemperatureCalibrationConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "calibrationData" element in the "GetTemperatureCalibrationConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5
[Tips]:	

## 10.13.5 GetMeasureTemperatureScheduleConfig

GetMeasureTemperatureScheduleConfig	
Description	To get thermal imaging temperature schedule detail information.
Typical URL	POST or GET http://<host>[:port]/GetMeasureTemperatureScheduleConfig
Channel ID	None
Action name	None
Entity Data	None
Successful Response	The device detail will be included in the entity of the successful response. For example: <pre>&lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config xmlns="http://www.ipc.com/ver10" version="1.7"&gt;     &lt;schedule maxTimeSpan="100" maxYearlyDay="31"&gt;         &lt;period mode="weekly" start="00:00" end="23:59" day="sunday"/&gt;         &lt;period mode="weekly" start="00:00" end="23:59" day="monday"/&gt;         &lt;period mode="weekly" start="00:00" end="23:59" day="tuesday"/&gt;         &lt;period mode="weekly" start="00:00" end="23:59" day="wednesday"/&gt;         &lt;period mode="weekly" start="00:00" end="23:59" day="thursday"/&gt;         &lt;period mode="weekly" start="00:00" end="23:59" day="friday"/&gt;         &lt;period mode="weekly" start="00:00" end="23:59" day="saturday"/&gt;         &lt;period mode="yearly" start="00:00" end="23:59" date="04-20"/&gt;     &lt;/schedule&gt; &lt;/config&gt;</pre>
[Tips]:	

## 10.13.6 SetMeasureTemperatureScheduleConfig

SetMeasureTemperatureScheduleConfig	
Description	To set the IP media device's thermal imaging temperature schedule detail information.
Typical URL	POST http://<host>[:port]/SetMeasureTemperatureScheduleConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The whole "schedule" element in the "GetMeasureTemperatureScheduleConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5
[Tips]:	

## 10.13.7 GetDotTemperature

GetDotTemperature	
Description	Gets the temperature at the position of the input coordinate.
Typical URL	POST or GET http://<host>[:port]/GetDotTemperature
Channel ID	None
Action name	None
Entity Data	For example:
<?xml version="1.0" encoding="utf-8"?> <config xmlns="http://www.ipc.com/ver10" version="1.0"> <dotTemperature>	

```

<hotX type="uint32" min="0" max="10000">0</hotX>
<hotY type="uint32" min="0" max="10000">0</hotY>
</dotTemperature>
</config>

```

Successful Response	The device detail will be included in the entity of the successful response. For example:
---------------------	---

```

<?xml version="1.0" encoding="utf-8"?>
<config xmlns="http://www.ipc.com/ver10" version="1.0">
<dotTemperature>
<hotX type="uint32" min="0" max="10000">0</hotX>
<hotY type="uint32" min="0" max="10000">0</hotY>
<temperature type="int">3650</temperature>
</dotTemperature>
</config>

```

[Tips]:

## 10.13.8 DealTemperatureCalibration

DealTemperatureCalibration	
Description	Deal the temperature at the position of the input coordinate.
Typical URL	POST or GET http://<host>[:port]/DealTemperatureCalibration
Channel ID	None
Action name	None
Entity Data	For example:
<pre> &lt;?xml version="1.0" encoding="utf-8"?&gt; &lt;config     xmlns="http://www.ipc.com/ver10" version="1.0"&gt;     &lt;ScenseMode&gt;         &lt;enum&gt;correction&lt;/enum&gt;     &lt;/ScenseMode&gt; &lt;/config&gt; </pre>	

```

<enum>monitoring</enum>

</ScenseMode>

<calibrationData>

    <mode type="ScenseMode">monitoring</mode>
    <envTemperature type="uint32" max="5000" min="0">2500</envTemperature>
    <envHumidity type="uint32" max="100" min="0">50</envHumidity>
    <objDistance type="uint32" max="10" min="1">3</objDistance>
    <Radiate type="uint32" max="100" min="1">98</Radiate>
    <blackBody>

        <switch type="boolean">false</switch>
        <blackPositionX type="uint32" max="10000" min="0">5108</blackPositionX>
        <blackPositionY type="uint32" max="10000" min="0">4970</blackPositionY>
        <blackTemperature type="uint32" max="10000" min="0">3500</blackTemperature>
    </blackBody>
    <correctionTemperature type="int32" max="3000" min="-3000">0</correctionTemperature>
</calibrationData>
</config>

```

Successful Response	The device detail will be included in the entity of the successful response. For example:
---------------------	---

```

<?xml version="1.0" encoding="UTF-8"?>
<config version="1.0" xmlns="http://www.ipc.com/ver10" status="success" errorCode="200"
IssameOldPwd="false"/>

```

[Tips]:

## 10.14 Infrared Temperature Control

### 10.14.1 GetAccessControlConfig

GetAccessControlConfig	
Description	To get the IP media device's AccessControl configuration.

Typical URL	POST or GET http://<host>[:port]/ GetAccessControlConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "AccessControl" element will be included in the entity of the successful response. For example:
	<pre> &lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.7"   xmlns="http://www.ipc.com/ver10"&gt;   &lt;AccessControl&gt;     &lt;matchOpenMode type="boolean"&gt;true&lt;/matchOpenMode&gt;     &lt;temperatureOpen type="boolean"&gt;false&lt;/temperatureOpen&gt;     &lt;wearmaskOpen type="boolean"&gt;false&lt;/wearmaskOpen&gt;     &lt;passOpenMode&gt;       &lt;switch type="boolean"&gt;false&lt;/switch&gt;       &lt;password type="string" maxLen="15"&gt;         &lt;![CDATA[]]&gt;       &lt;/password&gt;     &lt;/passOpenMode&gt;     &lt;OpenDelayTime type="uint8" min="0" max="10" default="3"&gt;3&lt;/OpenDelayTime&gt;     &lt;OpenHoldTime type="uint8" min="1" max="10" default="5"&gt;5&lt;/OpenHoldTime&gt;     &lt;tamperProtection type="boolean"&gt;false&lt;/tamperProtection&gt;     &lt;alarmHoldTime type="uint32"&gt;20&lt;/alarmHoldTime&gt;     &lt;triggerAlarmOut type="list" count="2"&gt;       &lt;itemType type="boolean"/&gt;       &lt;item id="0"&gt;false&lt;/item&gt;       &lt;item id="1"&gt;false&lt;/item&gt;     &lt;/triggerAlarmOut&gt;     &lt;mail type="list" count="0"&gt;       &lt;switch type="boolean"&gt;false&lt;/switch&gt;     </pre>

```

<subject type="string" maxLen="63">
    <![CDATA[]]>
</subject>
<content type="string" maxLen="255">
    <![CDATA[]]>
</content>
</mail>
<ftp type="list" count="0">
    <switch type="boolean">false</switch>
</ftp>
<savePicSwitch type="boolean">false</savePicSwitch>
<sdRecSwitch type="boolean">false</sdRecSwitch>
<audioSwitch type="boolean">false</audioSwitch>
</AccessControl>
</config>

```

**[Tips]:**

passOpenMode: Is password unlocking supported

matchOpenMode: Whether face recognition unlocking is supported (on by default)

OpenDelayTime: Unlocking delay time

OpenHoldTime: Unlocking duration (from time to automatic closing)

tamperProtection: Anti disassembly alarm linkage

## 10.14.2 SetAccessControlConfig

SetAccessControlConfig	
Description	To set the IP media device's AccessControl configuration.
Typical URL	POST http://<host>[:port]/ SetAccessControlConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None

---

Entity Data	The same as "GetAccessControlConfig".
Successful Response	The standard successful result response that described in 1.3.5.
<b>[Tips]:</b>	

### 10.14.3 UnLockingByPassword

UnLockingByPassword	
Description	Enter password to unlock..
Typical URL	POST http://<host>[:port]/UnLockingByPassword
Channel ID	None
Action name	None
Entity Data	The "password" element will be included in the entity of request message. For example:
<pre>&lt;?xml version="1.0"?&gt; &lt;config version="1.0" xmlns="http://www.ipc.com/ver10"&gt;   &lt;unlocking&gt;     &lt;password type="string" maxLen="15"&gt;&lt;![CDATA[MTIzNDU2]]&lt;/password&gt;   &lt;/unlocking&gt; &lt;/config&gt;</pre>	
Successful Response	The standard successful result response that described in 1.3.5.
<b>[Tips]:</b>	

## 10.14.4 GetTakeTemperatureConfig

GetTakeTemperatureConfig	
Description	To get the IP media device's temperature configuration.
Typical URL	POST or GET http://<host>[:port]/GetTakeTemperatureConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "temperature" element will be included in the entity of the successful response. For example:
<?xml version="1.0" encoding="UTF-8"?> <config version="1.7" xmlns="http://www.ipc.com/ver10"> <types> <tempUnitsType> <enum>centigrade</enum> <enum>Fahrenheit</enum> </tempUnitsType> </types> <TakeTemperature> <takeEanble type="boolean" default="false">false</takeEanble> <tempUnits type="tempUnitsType">centigrade</tempUnits> <highThreshold> <switch type="boolean" default="false">false</switch> <value type="uint32" min="0" max="10000">3720</value> </highThreshold> <lowThreshold> <switch type="boolean" default="false">false</switch> <value type="uint32" min="0" max="10000">3600</value> </lowThreshold> <FhighThreshold>	

```
<switch type="boolean" default="false">false</switch>
<value type="uint32" min="3200" max="21200">9900</value>
</FhighThreshold>
<FlowThreshold>
<switch type="boolean" default="false">false</switch>
<value type="uint32" min="3200" max="21200">9600</value>
</FlowThreshold>
<alarmHoldTime type="uint32">20</alarmHoldTime>
<triggerAlarmOut type="list" count="2"><itemType type="boolean"/>
<item id="0">false</item>
<item id="1">false</item>
</triggerAlarmOut>
<mail type="list" count="0">
<switch type="boolean">false</switch>
<subject type="string" maxLen="63"><![CDATA[]]></subject>
<content type="string" maxLen="255"><![CDATA[]]></content>
</mail>
<ftp type="list" count="0">
<switch type="boolean">false</switch>
</ftp>
<savePicSwitch type="boolean">false</savePicSwitch>
<sdRecSwitch type="boolean">false</sdRecSwitch>
<audioSwitch type="boolean">false</audioSwitch>
</TakeTemperature>
</config>
```

[Tips]:

## 10.14.5 SetTakeTemperatureConfig

**SetTakeTemperatureConfig**

---

Description	To set the IP media device's "Temperature" element.
Typical URL	POST http://<host>[:port]/SetTakeTemperatureConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The same as "GetTakeTemperatureConfig".
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.14.6 GetWearmaskDetectConfig

GetWearmaskDetectConfig	
Description	To get the IP media device's "wearmask" element.
Typical URL	POST or GET http://<host>[:port]/GetWearmaskDetectConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "wearmask" element will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.7"     xmlns="http://www.ipc.com/ver10"&gt;     &lt;WearmaskDetect&gt;         &lt;switch type="boolean" default="false"&gt;false&lt;/switch&gt;         &lt;alarmHoldTime type="uint32"&gt;20&lt;/alarmHoldTime&gt;         &lt;triggerAlarmOut type="list" count="2"&gt;</pre>	

```

<itemType type="boolean"/>
<item id="0">false</item>
<item id="1">false</item>
</triggerAlarmOut>
<mail type="list" count="0">
<switch type="boolean">false</switch>
<subject type="string" maxLen="63">
<![CDATA[]]>
</subject>
<content type="string" maxLen="255">
<![CDATA[]]>
</content>
</mail>
<ftp type="list" count="0">
<switch type="boolean">false</switch>
</ftp>
<savePicSwitch type="boolean">false</savePicSwitch>
<sdRecSwitch type="boolean">false</sdRecSwitch>
<audioSwitch type="boolean">false</audioSwitch>
</WearmaskDetect>
</config>

```

[Tips]:

## 10.14.7 SetWearmaskDetectConfig

SetWearmaskDetectConfig	
Description	To set the IP media device's "wearmask" element .
Typical URL	POST http://<host>[:port]/SetWearmaskDetectConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.

Action name	None
Entity Data	The same as "GetWearmaskDetectConfig".
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.15 Heat Map

### 10.15.1 GetSmartHeatMapConfig

<b>GetSmartHeatMapConfig</b>	
Description	To get the IP media device's "heatMap" element.
Typical URL	POST or GET http://<host>[:port]/GetSmartHeatMapConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The Heat Map configuration will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.7" xmlns="http://www.ipc.com/ver10"&gt;     &lt;types&gt;         &lt;mutexObjectType&gt;             &lt;enum&gt;vfd&lt;/enum&gt;             &lt;enum&gt;vsd&lt;/enum&gt;         &lt;/mutexObjectType&gt;     &lt;/types&gt;     &lt;heatMap&gt;         &lt;mutexList type="list" count="2"&gt;             &lt;item&gt;</pre>	

```
<object type="mutexObjectType">vfd</object>
<status type="boolean">false</status>
</item>
<item>
    <object type="mutexObjectType">vsd</object>
    <status type="boolean">false</status>
</item>
</mutexList>
<switch type="boolean">false</switch>
<objectFilter>
    <person>
        <switch type="boolean">true</switch>
        <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
        <minDetectTarget>
            <width type="uint32" max="10000" min="0" default="300">300</width>
            <height type="uint32" max="10000" min="0" default="600">600</height>
        </minDetectTarget>
        <maxDetectTarget>
            <width type="uint32" max="10000" min="0" default="9000">9000</width>
            <height type="uint32" max="10000" min="0" default="9000">9000</height>
        </maxDetectTarget>
    </person>
    <car>
        <switch type="boolean">true</switch>
        <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
        <minDetectTarget>
            <width type="uint32" max="10000" min="0" default="300">300</width>
            <height type="uint32" max="10000" min="0" default="600">600</height>
        </minDetectTarget>
        <maxDetectTarget>
            <width type="uint32" max="10000" min="0" default="9000">9000</width>
            <height type="uint32" max="10000" min="0" default="9000">9000</height>
        </maxDetectTarget>
    </car>

```

```
</maxDetectTarget>

</car>

<motor>

    <switch type="boolean">true</switch>

    <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>

    <minDetectTarget>

        <width type="uint32" max="10000" min="0" default="300">300</width>

        <height type="uint32" max="10000" min="0" default="600">600</height>

    </minDetectTarget>

    <maxDetectTarget>

        <width type="uint32" max="10000" min="0" default="9000">9000</width>

        <height type="uint32" max="10000" min="0" default="9000">9000</height>

    </maxDetectTarget>

</motor>

</objectFilter>

<boundary type="list" maxCount="4" count="4">

    <item>

        <pointGroup type="list" maxCount="8" count="4">

            <item>

                <X type="uint32">50</X>

                <Y type="uint32">100</Y>

            </item>

            <item>

                <X type="uint32">9850</X>

                <Y type="uint32">133</Y>

            </item>

            <item>

                <X type="uint32">9575</X>

                <Y type="uint32">9800</Y>

            </item>

            <item>

                <X type="uint32">0</X>

            </item>

        </pointGroup>

    </item>


```

```

<Y type="uint32">9800</Y>
</item>
</pointGroup>
</item>
<item>
<pointGroup type="list" maxCount="8" count="0"></pointGroup>
</item>
<item>
<pointGroup type="list" maxCount="8" count="0"></pointGroup>
</item>
<item>
<pointGroup type="list" maxCount="8" count="0"></pointGroup>
</item>
</boundary>
</heatMap>
</config>

```

[Tips]:

## 10.15.2 SetSmartHeatMapConfig

SetSmartHeatMapConfig	
Description	To set the IP media device's "heatMap" element.
Typical URL	POST http://<host>[:port]/SetSmartHeatMapConfig [/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The same as "GetSmartHeatMapConfig".
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.16 Region Statistics

### 10.16.1 GetSmartTrafficConfig

GetSmartTrafficConfig	
Description	To get the IP media device's "traffic" element.
Typical URL	POST or GET http://<host>[:port]/GetSmartTrafficConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "traffic" element will be included in the entity of the successful response. For example:

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.7"
  xmlns="http://www.ipc.com/ver10">
  <types>
    <mutexObjectType>
      <enum>pea</enum>
      <enum>osc</enum>
      <enum>vfd</enum>
      <enum>aoientry</enum>
      <enum>aoileave</enum>
      <enum>passlinecount</enum>
      <enum>heatmap</enum>
      <enum>vsd</enum>
    </mutexObjectType>
    <countCycleType>
      <enum>day</enum>
      <enum>week</enum>
      <enum>month</enum>
    </countCycleType>
  </types>
</config>
```

```
<enum>off</enum>

</countCycleType>

</types>

<traffic>

<mutexList type="list" count="9">

<item>

<object type="mutexObjectType">tripwire</object>

<status type="boolean">true</status>

</item>

<item>

<object type="mutexObjectType">perimeter</object>

<status type="boolean">false</status>

</item>

<item>

<object type="mutexObjectType">osc</object>

<status type="boolean">false</status>

</item>

<item>

<object type="mutexObjectType">vfd</object>

<status type="boolean">false</status>

</item>

<item>

<object type="mutexObjectType">aoientry</object>

<status type="boolean">false</status>

</item>

<item>

<object type="mutexObjectType">aoileave</object>

<status type="boolean">false</status>

</item>

<item>

<object type="mutexObjectType">passlinecount</object>

<status type="boolean">false</status>

</item>
```

```
</item>

<item>
    <object type="mutexObjectType">heatmap</object>
    <status type="boolean">false</status>
</item>

<item>
    <object type="mutexObjectType">vsd</object>
    <status type="boolean">false</status>
</item>

</mutexList>

<switch type="boolean">false</switch>
<alarmHoldTime type="uint32">20</alarmHoldTime>
<objectFilter>
    <car>
        <switch type="boolean">true</switch>
        <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
        <stayAlarmThreshold type="uint32" max="10000" min="0"
default="100">100</stayAlarmThreshold>
    </car>
    <person>
        <switch type="boolean">true</switch>
        <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
        <stayAlarmThreshold type="uint32" max="10000" min="0"
default="100">100</stayAlarmThreshold>
    </person>
    <motor>
        <switch type="boolean">true</switch>
        <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
        <stayAlarmThreshold type="uint32" max="10000" min="0"
default="100">100</stayAlarmThreshold>
    </motor>
</objectFilter>
<saveTargetPicture type="boolean">false</saveTargetPicture>
```

```

<saveSourcePicture type="boolean">false</saveSourcePicture>

<countPeriod>
    <countTimeType type="countCycleType">off</countTimeType>
    <daily>
        <dateSpan type="uint32">0</dateSpan>
        <dateTimeSpan type="string">00:00:00</dateTimeSpan>
    </daily>
    <weekly>
        <dateSpan type="uint32">0</dateSpan>
        <dateTimeSpan type="string">00:00:00</dateTimeSpan>
    </weekly>
    <monthly>
        <dateSpan type="uint32">1</dateSpan>
        <dateTimeSpan type="string">00:00:00</dateTimeSpan>
    </monthly>
</countPeriod>
<countOSD>
    <switch type="boolean">true</switch>
    <X type="uint32">6600</X>
    <Y type="uint32">2400</Y>
    <osdFormat type="string">
        <![CDATA[Entry: human-# car-# bike-#
Exit   : human-# car-# bike-#
Stay   : human-# car-# bike-#]]>
        </osdFormat>
        <showEnterOsd type="boolean">true</showEnterOsd>
        <osdEntranceName type="string" maxLen="10">
            <![CDATA[Entry]]>
        </osdEntranceName>
        <showExitOsd type="boolean">true</showExitOsd>
        <osdExitName type="string" maxLen="10">
            <![CDATA[Exit]]>
        </osdExitName>
    </osdFormat>

```

```
</osdExitName>

<showStayOsd type="boolean">true</showStayOsd>

<osdStayName type="string" maxLen="10">
    <![CDATA[Stay]]>
</osdStayName>

<osdPersonName type="string" maxLen="10">
    <![CDATA[human]]>
</osdPersonName>

<osdCarName type="string" maxLen="10">
    <![CDATA[car]]>
</osdCarName>

<osdBikeName type="string" maxLen="10">
    <![CDATA[bike]]>
</osdBikeName>

<osdAlarmName type="string" maxLen="12">
    <![CDATA[Plese wait]]>
</osdAlarmName>

<osdWelcomeName type="string" maxLen="12">
    <![CDATA[Welcome]]>
</osdWelcomeName>

</countOSD>

<countTimeSpan type="uint32">7</countTimeSpan>

<boundary type="list" count="1">
    <item>
        <pointGroup type="list" maxCount="8" count="4">
            <item>
                <X type="uint32">850</X>
                <Y type="uint32">700</Y>
            </item>
            <item>
                <X type="uint32">9500</X>
                <Y type="uint32">766</Y>
            </item>
```

```

        </item>

        <item>
            <X type="uint32">9325</X>
            <Y type="uint32">9100</Y>
        </item>

        <item>
            <X type="uint32">475</X>
            <Y type="uint32">9033</Y>
        </item>

    </pointGroup>
</item>
</boundary>
</traffic>
</config>

```

[Tips]:

## 10.16.2 SetSmartTrafficConfig

SetSmartTrafficConfig	
Description	To set the IP media device's "traffic" element.
Typical URL	POST http://<host>[:port]/SetSmartTrafficConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The same as "GetSmartTrafficConfig".
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

### 10.16.3 GetTrafficCountStatistics

GetTrafficCountStatistics	
Description	Get current statistics
Typical URL	POST or GET http://<host>[:port]/GetTrafficCountStatistics[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The configuration will be included in the entity of the successful response. For example:
<?xml version="1.0" encoding="utf-8"?> <config xmlns="http://www.ipc.com/ver10" version="1.7"> <entranceCount> <person type="uint32">0</person> <car type="uint32">0</car> <bike type="uint32">0</bike> </entranceCount> <exitCount> <person type="uint32">0</person> <car type="uint32">0</car> <bike type="uint32">0</bike> </exitCount> </config>	

## 10.17 Video Metadata Detection

### 10.17.1 GetSmartVsdConfig

GetSmartVsdConfig	
Description	To get the IP media device's "vsd" element.
Typical URL	POST or GET http://<host>[:port]/GetSmartVsdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "vsd" element will be included in the entity of the successful response. For example:

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.7" xmlns="http://www.ipc.com/ver10">
    <types>
        <mutexObjectType>
            <enum>pea</enum>
            <enum>osc</enum>
            <enum>vfd</enum>
            <enum>aoientry</enum>
            <enum>aoileave</enum>
            <enum>passlinecount</enum>
            <enum>traffic</enum>
            <enum>heatmap</enum>
            <enum>pvd</enum>
            <enum>loitering</enum>
        </mutexObjectType>
        <algoChkType>
            <enum>instant_model</enum>
            <enum>inter_model</enum>
        </algoChkType>
    </types>
</config>
```

```
</algoChkType>

<osdEumType>
    <enum>person</enum>
    <enum>vehicle</enum>
    <enum>bike</enum>
</osdEumType>

<countCycleType>
    <enum>day</enum>
    <enum>week</enum>
    <enum>month</enum>
    <enum>off</enum>
</countCycleType>

</types>

<vsd>
    <mutexList type="list" count="11">
        <item>
            <object type="mutexObjectType">tripwire</object>
            <status type="boolean">false</status>
        </item>
        <item>
            <object type="mutexObjectType">perimeter</object>
            <status type="boolean">false</status>
        </item>
        <item>
            <object type="mutexObjectType">osc</object>
            <status type="boolean">false</status>
        </item>
        <item>
            <object type="mutexObjectType">vfd</object>
            <status type="boolean">false</status>
        </item>
        <item>
```

```
<object type="mutexObjectType">aoientry</object>
<status type="boolean">false</status>
</item>
<item>
<object type="mutexObjectType">aoileave</object>
<status type="boolean">false</status>
</item>
<item>
<object type="mutexObjectType">passlinecount</object>
<status type="boolean">false</status>
</item>
<item>
<object type="mutexObjectType">traffic</object>
<status type="boolean">false</status>
</item>
<item>
<object type="mutexObjectType">heatmap</object>
<status type="boolean">false</status>
</item>
<item>
<object type="mutexObjectType">pvd</object>
<status type="boolean">false</status>
</item>
<item>
<object type="mutexObjectType">loitering</object>
<status type="boolean">false</status>
</item>
</mutexList>
<switch type="boolean">false</switch>
<countOSD>
<switch type="boolean">true</switch>
<X type="uint32">6587</X>
```

```
<Y type="uint32">2380</Y>

<osdPersonName type="string" maxLen="10">
    <![CDATA[human]]>
</osdPersonName>

<osdCarName type="string" maxLen="10">
    <![CDATA[car]]>
</osdCarName>

<osdBikeName type="string" maxLen="10">
    <![CDATA[bike]]>
</osdBikeName>

</countOSD>

<countPeriod>

    <countTimeType type="countCycleType">off</countTimeType>
    <daily>
        <dateSpan type="uint32">0</dateSpan>
        <dateTimeSpan type="string">00:00:00</dateTimeSpan>
    </daily>
    <weekly>
        <dateSpan type="uint32">0</dateSpan>
        <dateTimeSpan type="string">00:00:00</dateTimeSpan>
    </weekly>
    <monthly>
        <dateSpan type="uint32">1</dateSpan>
        <dateTimeSpan type="string">00:00:00</dateTimeSpan>
    </monthly>
</countPeriod>

<objectFilter>

    <person>
        <switch type="boolean">true</switch>
        <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
        <minDetectTarget>
            <width type="uint32" max="10000" min="0" default="300">300</width>
        </minDetectTarget>
    </person>
</objectFilter>
```

```
<height type="uint32" max="10000" min="0" default="600">600</height>
</minDetectTarget>
<maxDetectTarget>
    <width type="uint32" max="10000" min="0" default="9000">9000</width>
    <height type="uint32" max="10000" min="0" default="9000">9000</height>
</maxDetectTarget>
</person>
<car>
    <switch type="boolean">true</switch>
    <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
    <minDetectTarget>
        <width type="uint32" max="10000" min="0" default="300">300</width>
        <height type="uint32" max="10000" min="0" default="600">600</height>
    </minDetectTarget>
    <maxDetectTarget>
        <width type="uint32" max="10000" min="0" default="9000">9000</width>
        <height type="uint32" max="10000" min="0" default="9000">9000</height>
    </maxDetectTarget>
</car>
<motor>
    <switch type="boolean">true</switch>
    <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
    <minDetectTarget>
        <width type="uint32" max="10000" min="0" default="300">300</width>
        <height type="uint32" max="10000" min="0" default="600">600</height>
    </minDetectTarget>
    <maxDetectTarget>
        <width type="uint32" max="10000" min="0" default="9000">9000</width>
        <height type="uint32" max="10000" min="0" default="9000">9000</height>
    </maxDetectTarget>
</motor>
</objectFilter>
```

```
<saveTargetPicture type="boolean">false</saveTargetPicture>
<saveSourcePicture type="boolean">false</saveSourcePicture>
<boundary type="list" count="4">
  <item>
    <point type="list" maxCount="6" count="4">
      <item>
        <X type="uint32">23</X>
        <Y type="uint32">0</Y>
      </item>
      <item>
        <X type="uint32">9880</X>
        <Y type="uint32">158</Y>
      </item>
      <item>
        <X type="uint32">9904</X>
        <Y type="uint32">9873</Y>
      </item>
      <item>
        <X type="uint32">0</X>
        <Y type="uint32">9841</Y>
      </item>
    </point>
  </item>
  <item>
    <point type="list" maxCount="6" count="0"></point>
  </item>
  <item>
    <point type="list" maxCount="6" count="0"></point>
  </item>
  <item>
    <point type="list" maxCount="6" count="0"></point>
  </item>
```

```
</boundary>

<maskArea type="list" count="4">
    <item>
        <point type="list" maxCount="8" count="0"></point>
    </item>
    <item>
        <point type="list" maxCount="8" count="0"></point>
    </item>
    <item>
        <point type="list" maxCount="8" count="0"></point>
    </item>
    <item>
        <point type="list" maxCount="8" count="0"></point>
    </item>
</maskArea>

<ftp type="list" count="1">
    <switch type="boolean">true</switch>
    <item id="1">
        <sendPic type="boolean">true</sendPic>
        <sendRec type="boolean">false</sendRec>
    </item>
</ftp>

<savePicSwitch type="boolean">false</savePicSwitch>
<sdRecSwitch type="boolean">false</sdRecSwitch>

<osdConfig>
    <osdType type="osdEumType">person</osdType>
    <personcfg>
        <sexSwitch type="boolean" index="0">true</sexSwitch>
        <ageSwitch type="boolean" index="1" >true</ageSwitch>
        <orientationSwitch type="boolean" index="2">true</orientationSwitch>
        <hatSwitch type="boolean" index="3">true</hatSwitch>
        <glassesSwitch type="boolean" index="4">true</glassesSwitch>
    </personcfg>
</osdConfig>
```

```

<backpackSwitch type="boolean" index="5">true</backpackSwitch>
<shortsleevesSwitch type="boolean" index="6">true</shortsleevesSwitch>
<upperbodycolorSwitch type="boolean" index="7">true</upperbodycolorSwitch>
<shortsSwitch type="boolean" index="8">true</shortsSwitch>
<lowerbodycolorSwitch type="boolean" index="9">true</lowerbodycolorSwitch>
<skirtSwitch type="boolean" index="10">true</skirtSwitch>
<maskSwitch type="boolean" index="11">true</maskSwitch>
<shoulderbagSwitch type="boolean" index="12">true</shoulderbagSwitch>
</personcfg>
<carcfg>
    <colorSwitch type="boolean" index="0">true</colorSwitch>
    <modelyearSwitch type="boolean" index="1">true</modelyearSwitch>
    <categorySwitch type="boolean" index="2">true</categorySwitch>
    <brandSwitch type="boolean" index="3">true</brandSwitch>
    <modelSwitch type="boolean" index="4">true</modelSwitch>
</carcfg>
<bikecfg>
    <bikeTypeSwitch type="boolean" index="0">true</bikeTypeSwitch>
</bikecfg>
</osdConfig>
<algoModel>
    <algoChkModel type="algoChkType">inter_model</algoChkModel>
    <intervalCheck type="int" min="1" max="60">5</intervalCheck>
</algoModel>
</vsd>
</config>

```

[Tips]:

## 10.17.2 SetSmartVsdConfig

SetSmartVsdConfig	
Description	To set the IP media device's "vsd" element.

Typical URL	POST http://<host>[:port]/SetSmartVsdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The same as "GetSmartVsdConfig".
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.18 Illegal Parking Detection

### 10.18.1 GetSmartPvdConfig

GetSmartPvdConfig	
Description	To get the IP media device's "pvd" element.
Typical URL	POST or GET http://<host>[:port]/GetSmartPvdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "pvd" element will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.7" xmlns="http://www.ipc.com/ver10"&gt;      &lt;pvd&gt;         &lt;mutexObjectType&gt;             &lt;enum&gt;vfd&lt;/enum&gt;             &lt;enum&gt;vsd&lt;/enum&gt;         &lt;/mutexObjectType&gt;         &lt;mutexList type="list" count="2"&gt;</pre>	

```
<item>
    <object type="mutexObjectType">vfd</object>
    <status type="boolean">false</status>
</item>
<item>
    <object type="mutexObjectType">vsd</object>
    <status type="boolean">false</status>
</item>
</mutexList>
<switch type="boolean">false</switch>
<duration type="uint32" min="10" max="3600">10</duration>
<alarmHoldTime type="uint32">20</alarmHoldTime>
<objectFilter>
    <car>
        <switch type="boolean">true</switch>
        <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
        <minDetectTarget>
            <width type="uint32" max="10000" min="0" default="972">300</width>
            <height type="uint32" max="10000" min="0" default="972">600</height>
        </minDetectTarget>
        <maxDetectTarget>
            <width type="uint32" max="10000" min="0" default="5000">9000</width>
            <height type="uint32" max="10000" min="0" default="6111">9000</height>
        </maxDetectTarget>
    </car>
    <motor>
        <switch type="boolean">true</switch>
        <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
        <minDetectTarget>
            <width type="uint32" max="10000" min="0" default="398">300</width>
            <height type="uint32" max="10000" min="0" default="398">600</height>
        </minDetectTarget>
    </motor>

```

```
<maxDetectTarget>
    <width type="uint32" max="10000" min="0" default="5000">9000</width>
    <height type="uint32" max="10000" min="0" default="6111">9000</height>
</maxDetectTarget>
</motor>
</objectFilter>
<maxTargetFrame type="uint16">5000</maxTargetFrame>
<minTargetFrame type="uint16">300</minTargetFrame>
<saveTargetPicture type="boolean">false</saveTargetPicture>
<saveSourcePicture type="boolean">false</saveSourcePicture>
<boundary type="list" count="4">
    <item>
        <point type="list" maxCount="6" count="4">
            <item>
                <X type="uint32">650</X>
                <Y type="uint32">2766</Y>
            </item>
            <item>
                <X type="uint32">2650</X>
                <Y type="uint32">3633</Y>
            </item>
            <item>
                <X type="uint32">900</X>
                <Y type="uint32">6466</Y>
            </item>
            <item>
                <X type="uint32">50</X>
                <Y type="uint32">4566</Y>
            </item>
        </point>
    </item>
    <item>
```

```

<point type="list" maxCount="6" count="0"></point>
</item>
<item>
    <point type="list" maxCount="6" count="0"></point>
</item>
<item>
    <point type="list" maxCount="6" count="0"></point>
</item>
</boundary>
</pvd>
</config>

```

[Tips]:

## 10.18.2 SetSmartPvdConfig

SetSmartPvdConfig	
Description	To set the IP media device's Illegal Parking Detection configuration.
Typical URL	POST http://<host>[:port]/SetSmartPvdConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	The same as "GetSmartPvdConfig".
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

## 10.19 Loitering Detection

### 10.19.1 GetSmartLoiteringConfig

GetSmartLoiteringConfig	
Description	To get the IP media device's "loitering" element.
Typical URL	POST or GET http://<host>[:port]/GetSmartLoiteringConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	None
Successful Response	The "loitering" element will be included in the entity of the successful response. For example:

```
<?xml version="1.0" encoding="UTF-8"?>
<config version="1.7" xmlns="http://www.ipc.com/ver10">
    <loitering>
        <mutexObjectType>
            <enum>vfd</enum>
            <enum>vsd</enum>
        </mutexObjectType>
        <mutexList type="list" count="2">
            <item>
                <object type="mutexObjectType">vfd</object>
                <status type="boolean">false</status>
            </item>
            <item>
                <object type="mutexObjectType">vsd</object>
                <status type="boolean">false</status>
            </item>
        </mutexList>
        <switch type="boolean">false</switch>
    </loitering>
</config>
```

```
<duration type="uint32" min="10" max="3600">10</duration>
<alarmHoldTime type="uint32">20</alarmHoldTime>
<objectFilter>
    <person>
        <switch type="boolean">true</switch>
        <sensitivity type="uint32" max="100" min="1" default="50">50</sensitivity>
        <minDetectTarget>
            <width type="uint32" max="10000" min="0" default="972">300</width>
            <height type="uint32" max="10000" min="0" default="972">600</height>
        </minDetectTarget>
        <maxDetectTarget>
            <width type="uint32" max="10000" min="0" default="5000">9000</width>
            <height type="uint32" max="10000" min="0" default="6111">9000</height>
        </maxDetectTarget>
    </person>
</objectFilter>
<maxTargetFrame type="uint16">5000</maxTargetFrame>
<minTargetFrame type="uint16">300</minTargetFrame>
<saveTargetPicture type="boolean">false</saveTargetPicture>
<saveSourcePicture type="boolean">false</saveSourcePicture>
<boundary type="list" count="4">
    <item>
        <point type="list" maxCount="6" count="4">
            <item >
                <X type="uint32">4325</X>
                <Y type="uint32">1200</Y>
            </item>
            <item >
                <X type="uint32">3075</X>
                <Y type="uint32">133</Y>
            </item>
            <item >
```

```

<X type="uint32">250</X>
<Y type="uint32">2333</Y>
</item>
<item>
<X type="uint32">525</X>
<Y type="uint32">6600</Y>
</item>
</point>
</item>
<item>
<point type="list" maxCount="6" count="0"></point>
</item>
<item>
<point type="list" maxCount="6" count="0"></point>
</item>
<item>
<point type="list" maxCount="6" count="0"></point>
</item>
</boundary>
</loitering>
</config>

```

[Tips]:

## 10.19.2 SetSmartLoiteringConfig

SetSmartLoiteringConfig	
Description	To set the IP media device's "loitering" element.
Typical URL	POST http://<host>[:port]/SetSmartLoiteringConfig[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None

---

Entity Data	The same as "GetSmartLoiteringConfig".
Successful Response	The standard successful result response that described in 1.3.5.
<b>[Tips]:</b>	

# 11 Schedule commands

---

## 11.1 Schedule

### 11.1.1 GetScheduleConfig

GetScheduleConfig	
Description	To get the schedule with the action_name attached.
Typical URL	POST or GET http://<host>[:port]/GetScheduleConfig[/channelId]</action_name>
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1
Action name	<p>The action name is defined as follows:</p> <p>alarmIn: schedule of alarmIn. In this scenario, the channelId is used as alarmIn ID</p> <p>motion: schedule of motion</p> <p>record: schedule of record</p>

	<p>snap: schedule of snap</p> <p>cdd: schedule of Crowd Density Detection</p> <p>ipd: schedule of Intruding People Detection</p> <p>tripwire: schedule of Tripwire Detection</p> <p>osc: schedule of Object Status Change</p> <p>perimeter: schedule of Perimeter Environment Assurance</p> <p>vfd: schedule of Video Face Detection</p> <p>vehicle: schedule of Video vehicle Detection</p> <p>aoientry: schedule of Aoi Entry Detection</p> <p>aoileave: schedule of Aoi Leave Detection</p> <p>passlinecount: schedule of Target Counting by Line Detection</p> <p>traffic: schedule of Target Counting by Area Detection</p> <p>Thermal: schedule of Thermal imaging temperature measurement</p> <p>heatMap: schedule of Heat Map Detection</p> <p>vsd: schedule of Video Metadata Detection</p> <p><b>whitelightAlarmOut: schedule of whitelight Alarm Out</b></p> <p><b>audioAlarmOut: schedule of audio Alarm Out</b></p> <p><b>asd: schedule of Audio Abnormal Detection</b></p> <p><b>pvd: schedule of Illegal Parking Detection</b></p> <p><b>loitering: schedule of Loitering Detection</b></p>
Entity Data	None
Successful Response	The "schedule" element will be included in the entity of the successful response. For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.0" xmlns="http://www.ipc.com/ver10"&gt;  &lt;types&gt;   &lt;weekDay&gt;     &lt;enum&gt;sunday&lt;/enum&gt;     &lt;enum&gt;monday&lt;/enum&gt;     &lt;enum&gt;tuesday&lt;/enum&gt;     &lt;enum&gt;wednesday&lt;/enum&gt;</pre>	

```
<enum>thursday</enum>
<enum>friday</enum>
<enum>saturday</enum>
</weekDay>
</types>
<schedule>
<weekly type="list" maxCount="70" count="7">
<item>
<startTime type="string"><![CDATA[00:00]]></startTime>
<endTime type="string"><![CDATA[23:59]]></endTime>
<day type="weekDay">sunday</day>
</item>
<item>
<startTime type="string"><![CDATA[00:00]]></startTime>
<endTime type="string"><![CDATA[23:59]]></endTime>
<day type="weekDay">monday</day>
</item>
<item>
<startTime type="string"><![CDATA[00:00]]></startTime>
<endTime type="string"><![CDATA[23:59]]></endTime>
<day type="weekDay">tuesday</day>
</item>
<item>
<startTime type="string"><![CDATA[05:00]]></startTime>
<endTime type="string"><![CDATA[13:59]]></endTime>
<day type="weekDay">wednesday</day>
</item>
<item>
<startTime type="string"><![CDATA[02:00]]></startTime>
<endTime type="string"><![CDATA[21:59]]></endTime>
<day type="weekDay">thursday</day>
</item>
```

```

<item>
    <startTime type="string"><![CDATA[00:00]]></startTime>
    <endTime type="string"><![CDATA[23:59]]></endTime>
    <day type="weekDay">friday</day>
</item>
<item>
    <startTime type="string"><![CDATA[00:00]]></startTime>
    <endTime type="string"><![CDATA[23:59]]></endTime>
    <day type="weekDay">saturday</day>
</item>
</weekly>
<yearly type="list" maxCount="31" count="1">
    <item>
        <startTime type="string"><![CDATA[00:00]]></startTime>
        <endTime type="string"><![CDATA[23:59]]></endTime>
        <date type="string"><![CDATA[05-12]]></date>
    </item>
</yearly>
</schedule>
</config>

```

[Tips]:

## 11.1.2 SetScheduleConfig

SetScheduleConfig	
Description	To set the schedule with the action_name attached.
Typical URL	POST http://<host>[:port]/SetScheduleConfig[/channelId]</action_name>
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1
Action name	The same as "GetScheduleConfig".

Entity Data	The whole "schedule" elements in the "GetScheduleConfig" should be included in entity of this message.
Successful Response	The standard successful result response that described in 1.3.5.
[Tips]:	

### 11.1.3 SetScheduleConfigEx

SetScheduleConfigEx	
Description	To set the schedule in batches.
Typical URL	POST or GET http://<host>[:port]/SetScheduleConfigEx[/channelId]
Channel ID	Optional. If none channel ID included in the URL, the default channel ID is 1.
Action name	None
Entity Data	For example:
<pre>&lt;?xml version="1.0" encoding="UTF-8"?&gt; &lt;config version="1.0" xmlns="http://www.ipc.com/ver10"&gt;      &lt;types&gt;         &lt;weekDay&gt;             &lt;enum&gt;sunday&lt;/enum&gt;             &lt;enum&gt;monday&lt;/enum&gt;             &lt;enum&gt;tuesday&lt;/enum&gt;             &lt;enum&gt;wednesday&lt;/enum&gt;             &lt;enum&gt;thursday&lt;/enum&gt;             &lt;enum&gt;friday&lt;/enum&gt;             &lt;enum&gt;saturday&lt;/enum&gt;         &lt;/weekDay&gt;         &lt;scheduleObject&gt;             &lt;enum&gt;cdd&lt;/enum&gt;</pre>	

```
<enum>ipd</enum>
<enum>tripwire</enum>
<enum>osc</enum>
<enum>perimeter</enum>
<enum>vfd</enum>
<enum>record</enum>
<enum>snap</enum>
<enum>motion</enum>
<enum>sensor1</enum>
<enum>sensor2</enum>
<enum>sensor3</enum>
<enum>sensor4</enum>
<enum>sensor5</enum>
<enum>sensor6</enum>
<enum>sensor7</enum>
<enum>vehicle</enum>
<enum>aoientry</enum>
<enum>aoileave</enum>
<enum>passlinecount</enum>
<enum>traffic</enum>
<enum>heatMap</enum>
<enum>thermal</enum>
<enum>vsd</enum>
<enum>whitelightAlarmOut</enum>
<enum>audioAlarmOut</enum>
<enum>asd</enum>
<enum>pvd</enum>
<enum>loitering</enum>
</scheduleObject>
</types>
<schedule>
<object type="list" count="3">
```

```
<item type="scheduleObject">cdd</item>
<item type="scheduleObject">cpc</item>
<item type="scheduleObject">vfd</item>
</object>
<weekly type="list" maxCount="70" count="7">
    <item>
        <startTime type="string"><![CDATA[00:00]]></startTime>
        <endTime type="string"><![CDATA[23:59]]></endTime>
        <day type="weekDay">sunday</day>
    </item>
    <item>
        <startTime type="string"><![CDATA[00:00]]></startTime>
        <endTime type="string"><![CDATA[23:59]]></endTime>
        <day type="weekDay">monday</day>
    </item>
    <item>
        <startTime type="string"><![CDATA[00:00]]></startTime>
        <endTime type="string"><![CDATA[23:59]]></endTime>
        <day type="weekDay">tuesday</day>
    </item>
    <item>
        <startTime type="string"><![CDATA[05:00]]></startTime>
        <endTime type="string"><![CDATA[13:59]]></endTime>
        <day type="weekDay">wednesday</day>
    </item>
    <item>
        <startTime type="string"><![CDATA[02:00]]></startTime>
        <endTime type="string"><![CDATA[21:59]]></endTime>
        <day type="weekDay">thursday</day>
    </item>
    <item>
        <startTime type="string"><![CDATA[00:00]]></startTime>
```

```

<endTime type="string"><![CDATA[23:59]]></endTime>
<day type="weekDay">friday</day>
</item>
<item>
<startTime type="string"><![CDATA[00:00]]></startTime>
<endTime type="string"><![CDATA[23:59]]></endTime>
<day type="weekDay">saturday</day>
</item>
</weekly>
<yearly type="list" maxCount="31" count="1">
<item>
<startTime type="string"><![CDATA[00:00]]></startTime>
<endTime type="string"><![CDATA[23:59]]></endTime>
<date type="string"><![CDATA[05-12]]></date>
</item>
</yearly>
</schedule>
</config>

```

Successful Response	The standard successful result response that described in 1.3.5.
---------------------	--

[Tips]:

- 1.The "GetDeviceDetail" includes how many sensors the device supported.
- 2.The "types" is defined by this document to constrain how the "schedule.object" is filled out, it can not be included in this message.

---

## Annex A

---

### A.1 Change Log

Date	Version	Note
2017-11-22	1.7	<ol style="list-style-type: none"><li>1. add "2.1.6 GetDeviceDetail" section</li><li>2. "5.3.1GetAlarmStatus" section, add status of smart alarm</li><li>3. add "5.4 AlarmTrigger" section</li><li>4. add "11 Smart commands" section</li><li>5. add "12 Schedule commands" section</li></ol>

Date	Version	Note
2019-10-21	1.8	<ol style="list-style-type: none"> <li>1. Modify "2.1.6 GetDeviceDetail" add supportVfdMatch supportvehicle supportAoiEntry supportAoiLeave supportPassLineCount supportAudioAlarmOut supportWhiteLightAlarmOut</li> <li>2. Modify "3.1.1 GetStreamCaps" encodeType add h264plus h265plus h264smart h265smart</li> <li>3. Modify "3.3.1 GetAudioStreamConfig" add audioInSwitch audioInput audioOutput loudSpeaker</li> <li>4. Modify "3.3.3 GetVideoStreamConfig" encodeType add h264plus h265plus h264smart h265smart</li> <li>5. GetPtzConfig</li> <li>6. SetPtzConfig</li> <li>7. Modify "4.3.1 PtzGetPresets" presetInfo maxCount 255 -&gt; 360</li> <li>8. itemType maxLen 11 -&gt; 10</li> <li>9. Modify "5.4.1 GetAlarmTriggerConfig" Action name add vehicle aointry aoileave passlinecount</li> <li>10. Add "5.5 Sound-Light Alarm" section</li> <li>11. Add "5.6 Alarm PIR" section</li> <li>12. Modify "11.1 Face Detect &amp; Face Comparison" section</li> <li>13. Modify "11.5 Line Crossing" section</li> <li>14. Modify "11.6 Intrusion" section</li> <li>15. Add "11.9 License Plate Recognition" section</li> <li>16. Add "11.10 Region Entrance" section</li> <li>17. Add "11.11 Region Entrance" section</li> <li>18. Add "11.12 Target Counting" section</li> <li>19. Modify "12.1 GetScheduleConfig" Action name add vehicle aointry aoileave passlinecount</li> <li>20. Modify "12.3 SetScheduleConfigEx" scheduleObject add vehicle aointry aoileave passlinecount.</li> </ol>

Date	Version	Note
2020-05-06	1.9	<ul style="list-style-type: none"> <li>1. Add "11.13 Thermographic Temperature Measurement"</li> <li>2. Add "11.14 Infrared temperature control"</li> <li>3. Modify "2.1.6 <b>GetDeviceDetail</b>" add supportThermal</li> <li>4. Modify "3.2.1 <b>GetImageConfig</b>" add node "backLightAdjust"</li> <li>5. Modify "5.5.1 <b>GetAudioStreamConfig</b>" add enum "Abnormal temperature alarm"</li> <li>6. Modify "11.1.8 <b>SearchSnapFaceByKey</b>" node matchInfo add "temperature"</li> <li>7. Add "11.12.3 <b>GetPassLineCountStatistics</b>"</li> <li>8. Modify "12.1.1 <b>GetScheduleConfig</b>" Action name add "thermal"</li> <li>9. Modify "12.1.3 <b>SetScheduleConfigEx</b>" node scheduleObject add enum "thermal"</li> <li>10. Modify "2.2.1 <b>GetDateAndTime</b>" add node "timeFormatMode"</li> <li>11. Add "11.15 Heat Map"</li> <li>12. Add "11.16 Region Statistics"</li> <li>13. Add "8.2 Onvif User Management"</li> </ul>

Date	Version	Note
2020-06-28	1.9	1. Add "2.3Upgrade"
2022-07-27	1.9	1. Add "9.1.2 channel_talk"
2022-08-27	1.9	1.Modify "4.4.2PtzGetCruise"section of Typical URL
2022-12-27	1.9	<ul style="list-style-type: none"> <li>1. Modify"2.1.6 GetDeviceDetail"add supportAsd,supportPvd,supportLoitering.</li> <li>2. Modify"3.3.1 GetAudioStreamConfig" add enum "<b>AAC</b>",add "audioSampleRate","audioBitWidth","audioOutputswitch","loud Speakerswitch".</li> <li>3. Modify "5.2.4 GetAlarmOutConfig" add "manualSwitch"</li> <li>4. Add "5.2.6 AlarmOutputControl"</li> <li>5. Modify "5.3.1 GetAlarmStatus" add "pvdAlarm","loiteringAlarm","asdAlarm"</li> <li>6. Modify "5.4.1 GetAlarmTriggerConfig" add "asd" "pvd" "loitering"</li> <li>7. Modify "5.5.1 GetAudioAlarmOutConfig" add "switch" "manualSwitch"</li> <li>8. Modify "5.5.6 GetWhiteLightAlarmOutConfig" add "switch" "manualSwitch"</li> <li>9. Add "10.18 Illegal Parking Detection"</li> <li>10. add "10.19 Loitering Detection"</li> <li>11. Modify "11.1.1 GetScheduleConfig" action_name add "whitelightAlarmOut","audioAlarmOut","asd","pvd","loitering"</li> <li>12. Modify "11.1.3 SetScheduleConfigEx" add enum "whitelightAlarmOut","audioAlarmOut","asd","pvd","loitering"</li> </ul>
2023-02-15	1.9	Optimize typesetting and correct some clerical errors.

---

Date	Version	Note
2024-05-23	1.9	<ol style="list-style-type: none"><li>1. add "10.1.9 GetTargetFaceGroups ","10.1.10 AddTargetFaceGroup","10.1.11 DeleteTargetFaceGroup","10.1.12 EditTargetFaceGroup"</li><li>2. Supports NVR configuration and modifies the following interfaces: "10.1.3 AddTargetFace","10.1.3 DeleteTargetFace","10.1.3 EditTargetFace","10.1.3 GetTargetFace".</li></ol>